
TERMS OF USE Disclaimer: This information is intended solely as a guide for use of products supplied by Independent Building Supplies and is to be read in conjunction with the appropriate technical information available from Independent Building Supplies. Before using you should ensure that the product is suitable for use in the specific application. Nothing in this information constitutes a statement of fitness for a particular purpose and appropriate expert advice is to always be obtained. This drawing is the property of Independent Building Supplies.


Timber floor external walls:

Position GIB HandiBrac® in the centre of the perimeter joist or bearer.

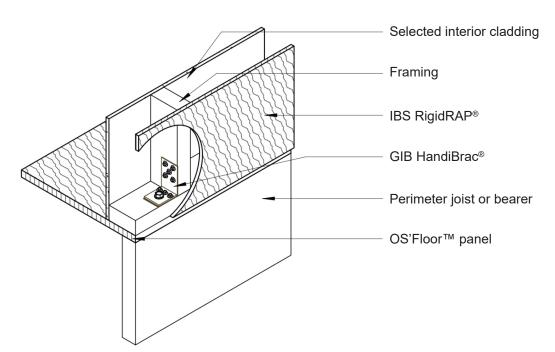

Timber floor internal walls:

Position GIB HandiBrac® in the centre of the floor joist or full depth solid block

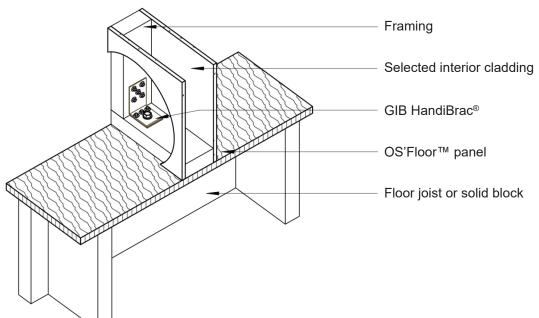

© copyright 2019 IBS Ltd All Dimensions are to be site checked before construction and installation File: rigidrap_1255 - floor connections **Rigid Air Panel** Reference Scale: Floor Wall Issue: SUSTAINABLE BUILDING PRODUCTS 1 IBS_1255 p 0800 367 759 www.ibs.co.nz Date: July 2019 **Floor Connections** f 0800 500 549 sales@ibs.co.nz