


Truss Bracket Connection Detail - Raking Soffit (Type 3)

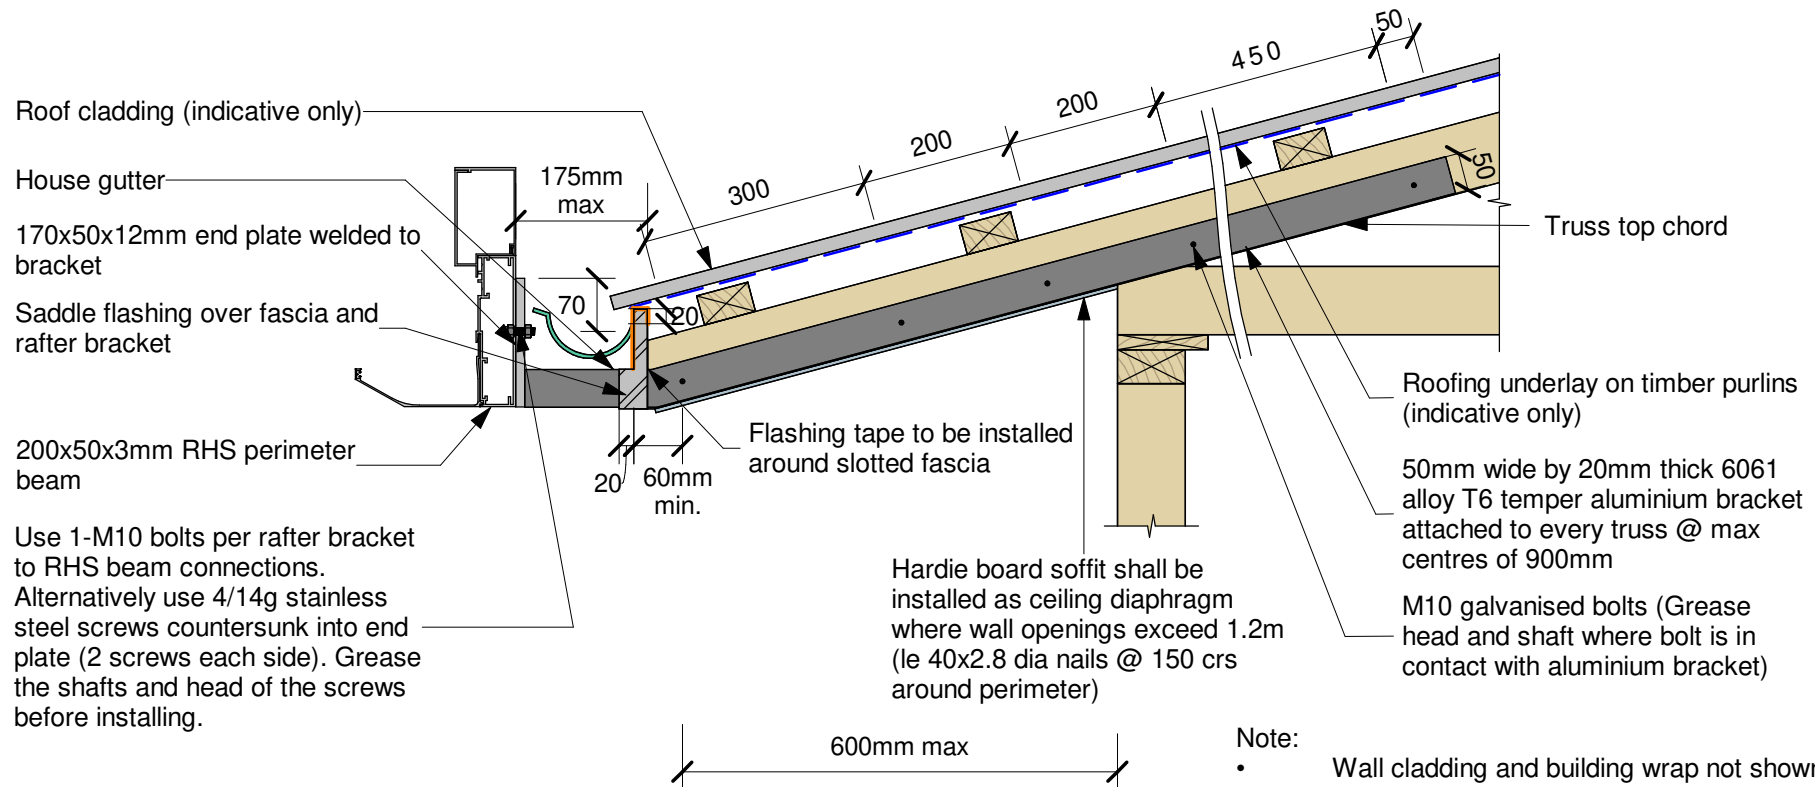

Note:

- Wall cladding and building wrap not shown for clarity
- Bracket is not applicable where the studs don't span from floor to ceiling (re over door/window openings)
- An Engineer is to check the capacity of any lintels below the rafter below the rafter brackets for the louvres added loading
- Bracket is only to be used in wind zones up the "High" as per NZS3604:2011 and where the open snow ground load is less than or equal to $S_g=0.0$ kPa

Scale: 1 : 10

Disclaimer: This information is intended solely as a guide for use of Johnson and Couzins Ltd products. Before using these product you should ensure that the product is suitable for use in the specific application. Nothing in this information constitutes a statement of fitness for particular purpose - appropriate expert advice should always be obtained. Johnson and Couzins Ltd makes no warranty regarding the use of this information with non-Johnson and Couzins Ltd product. © 2019 . The copyright of this document is the property of Johnson and Couzins Ltd and shall not be reproduced, copied, loaned or disposed of directly, or indirectly, nor used for any purpose other than that for which it is specifically furnished without prior consent.

Technical Help 0800 664 083

JAC_CR_6011

www.johnsonandcouzins.com