# DURAVIT

# SensoWash® Starck f

**Mounting instructions** 

Wall-mounted WC

# 251009 20 00
# 251009 20 92
# 251009 20 96



Important information



Electrical/Water Installation

en

4

#### About the mounting instructions

These mounting instructions come as part of the Duravit product and should be read carefully prior to installation.

#### Target readership and gualifications

The product and associated water connection should only be installed by qualified plumbers. The electrical installation should only be carried out by qualified electricians.

#### Explanation of the signal words and symbols



Indicates a hazardous situation which. if not avoided, will result in death or serious injury.

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

Is used to address practices not

related to physical injury.

NOTICE



Link to the Electrical Installation section

Link to the installation information in this section

Link to other instructions





Inspection (e.g. for scratches)

Do not kink hose

Check for leaks and leak-tightness

#### **Safety Instructions**

#### **Risk of fatal electric shock!**

- Disconnect electrical components from the power supply before the installation.
- Prevent the power supply from being switched on accidentally by third parties.
- Connect the product only to the specified power supply. >
- NEVER touch the power supply cable with wet hands. >
- When working on electric components, disconnect the power > supply.

#### Product and/or property damage

- > Do NOT install the product in a room exposed to excessive moisture. Ensure sufficient ventilation to avoid condensation in electric components.
- Only use the parts in the installation kit to avoid malfunctions.
- Do NOT use attachments not recommended by Duravit. >

#### **Freezing water**

If the room temperature is too low, this can cause damage to the product.

> Do NOT install the product in rooms where there is a danger of frost. The room temperature must not be less than 4 °C (39 °F).

#### Standards and regulations

The breach of local and country-specific regulations and standards can cause damage to the product and/or property damage.

Local installation regulations, country-specific standards > and the Low Voltage Directives shall be observed at all times.

#### Mounting instructions

Please read the pre-installation information sheets prior to the installation. These are available to download on the Internet at www.pro.duravit.com.

An installation video of the complete shower toilet is available at www.duravit.com/mnt\_sewa\_starck\_f.



Simply use this QR code

#### <sup>2</sup> Installation with DuraSystem<sup>®</sup>

The water connection to the SensoWash® shower toilet can be made via a permanent connection or via ductwork in the cistern (generally for DuraSystem® except #WD1010, #WD1009, #WD1007, #WD1005)

> Use an additional mounting set, see www.pro.duravit.com.

#### <sup>3</sup> Installing the noise reduction gasket

- > If the noise reduction gasket is included in the delivery, the z thickness must also be taken into consideration: z + 50 mm (2 ").
- > Install the noise reduction gasket.

#### **16** Storing the mounting accessories

> Store the accessories for installing the shower toilet unit in a safe place.



Rated voltage # 612 2 # 612 1	220 - 240 V 50 - 60 Hz 100 - 120 V 50 - 60 Hz (Taiwan models)
Max. rated power	1080 W
Circuit breaker	I <sub>N</sub> = 16 A
RCD	I <sub>N</sub> = 30 mA
Protection degree	IP X4
Protection class	1

### Position of electrical / water connection



Set the height of the toilet based on the position of the drain according to the technical drawing of the toilet.

#### **Pre-installation**



#### Risk of fatal electric shock

- > Disconnect electrical components from the power supply before the installation.
- > Check that all components are de-energised.
- Prevent the power supply from being switched on accidentally by third parties.
- > Ensure that there is no damage to the power supply cable.
- > Lay a permanent power supply line which must be on a separate circuit:
  - > Observe the position of the electrical connection
  - > Leave at least 800 mm (31½ ") of feed cable exposed
- > Install circuit breaker
  - If the product itself does not have electrical leakage protection function, it must be installed in circuit where there is leakage protection device installed.
  - > Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules and having a contact separation in all poles that provide full disconnection under overvoltage category III conditions.



DN15 (½ ") 0.07 – 0.75 MPa (10 – 109 psi) max. 2.4 mmol/l (240 ppm)

#### **Pre-installation**

Install the water connection and water outlet in the specified areas.

A WARNING

### Health risk and potential product damage!

- Supply the product with tap water from the main water system only.
- > Do not connect any waste water, grey water, industrial water, sea water or other untreated or semi-treated water.



#### NOTICE

#### \_\_\_\_\_ Product damage due to limescale build-up

In regions with hard water, limescale build-up can impair the performance of the product.

 > Check the water quality in your region. Duravit recommends the installation of a water softener with water hardness
 ≥ 14° dH (2.5 mmol/l).

#### <sup>5</sup> Connecting the water



#### Avoiding any malfunctions.

> The new hose-sets supplied with the appliance are to be used and old hose-sets should not be reused.































### DURAVIT









DURAVIT AG P.O. Box 240 Werderstr. 36 78132 Hornberg Germany Phone +49 78 33 70 0 Fax +49 78 33 70 289 info@duravit.com www.duravit.com

## DURAVIT