 
 




# STRATLOCK SL RANGE

## SL-FB & SL-FB-FR INSTALLATION GUIDE

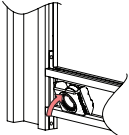
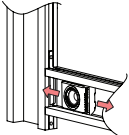
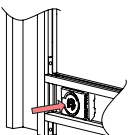
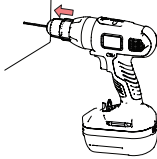
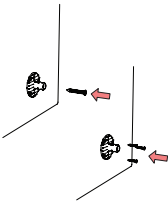
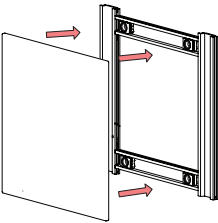

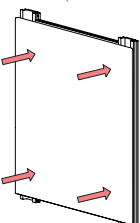
**STRATLOCK**
**SL-FB** Stratlock® Range - Screw Fix

**SL-FB-FR** Stratlock® Range - Screw Fix - Fire Rated

SL-FB	SL-FB-FR	USE WITH:	INSTALL WITH:
		SL-M10, SL-M18, SL-M18-FR 	#8 screws #5 screws CP-01ST 

### INSTALLATION STEPS

Screw-fix method - follow same steps for fire-rated Stratlock clips

<b>1</b> Push fit SL-FB into frame 	<b>2</b> Locate SL-FB into correct position 	<b>3</b> Insert CP-01 ST into SL-FB and press panel into correct position, marking the panel 	<b>4</b> Drill out mark created by CP-01ST with 3mm drill bit 
<b>5</b> Install SL-M18 with 1 x #8 screw through centre or 3 x #5 screws through base 	<b>6</b> Engage panel to first click into SL-FB 	<b>7</b> Adjust panel to find correct position 	<b>8</b> Once panel is in correct location, engage second click by pressing panel into final position 

Stratlock SL-RLE shown.