

# STRATLOCK SL RANGE

## SL-SFA & SL-SFA-FR INSTALLATION GUIDE

# STRATLOCK

**SL-SFA** Stratlock® Range - Screw Fix

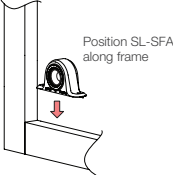
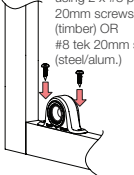
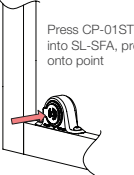
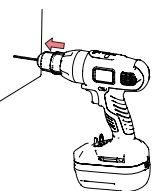
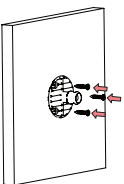
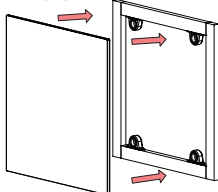
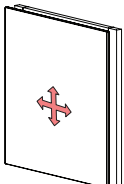
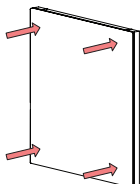
**SL-SFA-FR** Stratlock® Range - Screw Fix - Fire Rated

SL-SFA	SL-SFA-FR	USE WITH:	INSTALL WITH:
		SL-M10, SL-M18, SL-M18-FR 	CP-01ST  2 x #8 panhead screws (20mm, timber frame) OR #8 tek screws (20mm, aluminium/steel frame) #5 screws

### INSTALLATION STEPS

Screw-fix method - follow same steps for fire-rated Stratlock clips

Note: Refer into steps 6 - 11 on SL-FA Adhesive Fix Installation Guide for adhesive application.

<p><b>1</b></p>  <p>Position SL-SFA along frame</p>	<p><b>2</b></p>  <p>Screw into position using 2 x #8 pan head 20mm screws (timber) OR #8 tek 20mm screws (steel/alum.)</p>	<p><b>3</b></p>  <p>Press CP-01ST centrepoint into SL-SFA, press panel onto point</p>	<p><b>4</b></p>  <p>Drill out mark created by CP-01ST with 3mm drill bit</p>
<p><b>5</b></p>  <p>Install SL-M18 with 1 x #8 screw through centre or 3 x #5 screws through base</p>	<p><b>6</b></p>  <p>Engage panel to first click of SL-M18 into SL-SFA</p>	<p><b>7</b></p>  <p>Adjust panel to find correct position</p>	<p><b>8</b></p>  <p>Once panel is in correct location, engage second click by pressing panel into final position.</p>