

Weatherfold 4s Window & Seryery 35

Brio Australia
P: +61 2 87186718
W: brio.com.au
E: sales@brio.com.au

Brio RMD UK Ltd.
P: +44 191 2291224
W: briouk.com
E: sales@briouk.com

Brio USA Inc.
P: +1 585 3195599
W: brioussa.com
E: sales@brioussa.com


Codes

B WS 1 - 35 S H SS ———— Finish: SS (Satin Stainless), PS (Polished Stainless)
Hinge Type: H Type Non-Mortice hinge, M Type Mortice hinge.
Bearing Type: S (Stainless Steel Bearing)
Load Capacity: 35kg (77lbs) panels
Set No: 1F (Pivot Set), 2L/R (End Hanger Set Left/Right),
2F (End Hanger Set No Guide), 4 (Intermediate Hanger Set),
4F (Intermediate Hanger Set No Guide), 3 (Hinge Handle Set),
5 (Hinge Set), 6 (Offset Hinge Set), 7 (Offset Hinge Handle Set)


Brio Weatherfold 4s

Sets. No finishes shown


BWS1F-35H

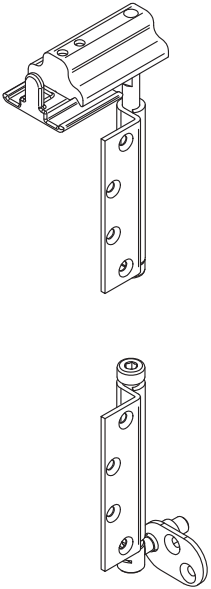


BWS2L-35SH

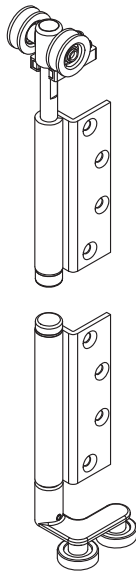


BWS2R-35SH

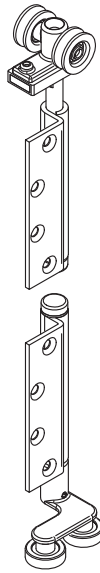


BWS2L-35SM

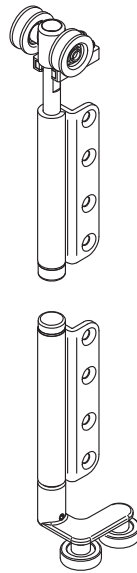


BWS2R-35SM

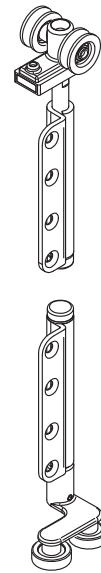


BWS2F-35SH

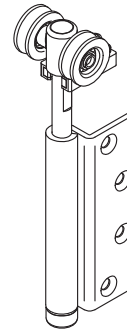


BWS2F-35SM

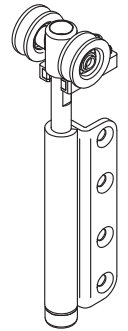


BW3-35H

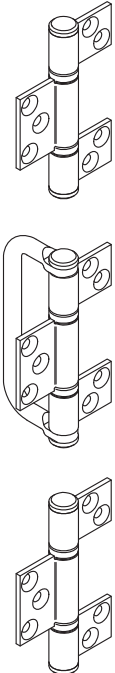


BW5-35H

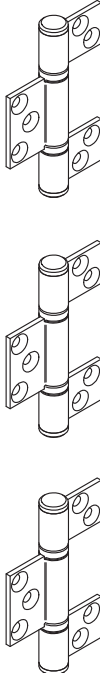


BW6-35H

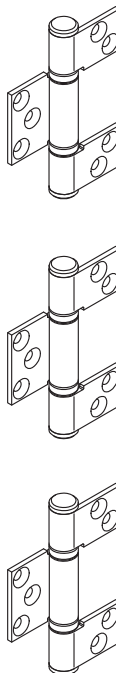


BW7-35H

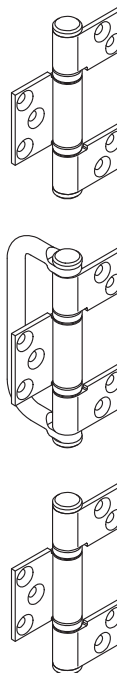


BWS4-35SH

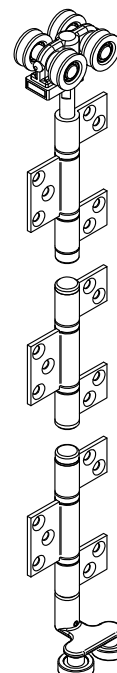


BWS4F-35SH

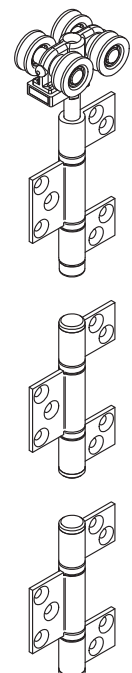

OUTWARD OPENING (Window 6 panels each way. Servery 2 panels each way.)

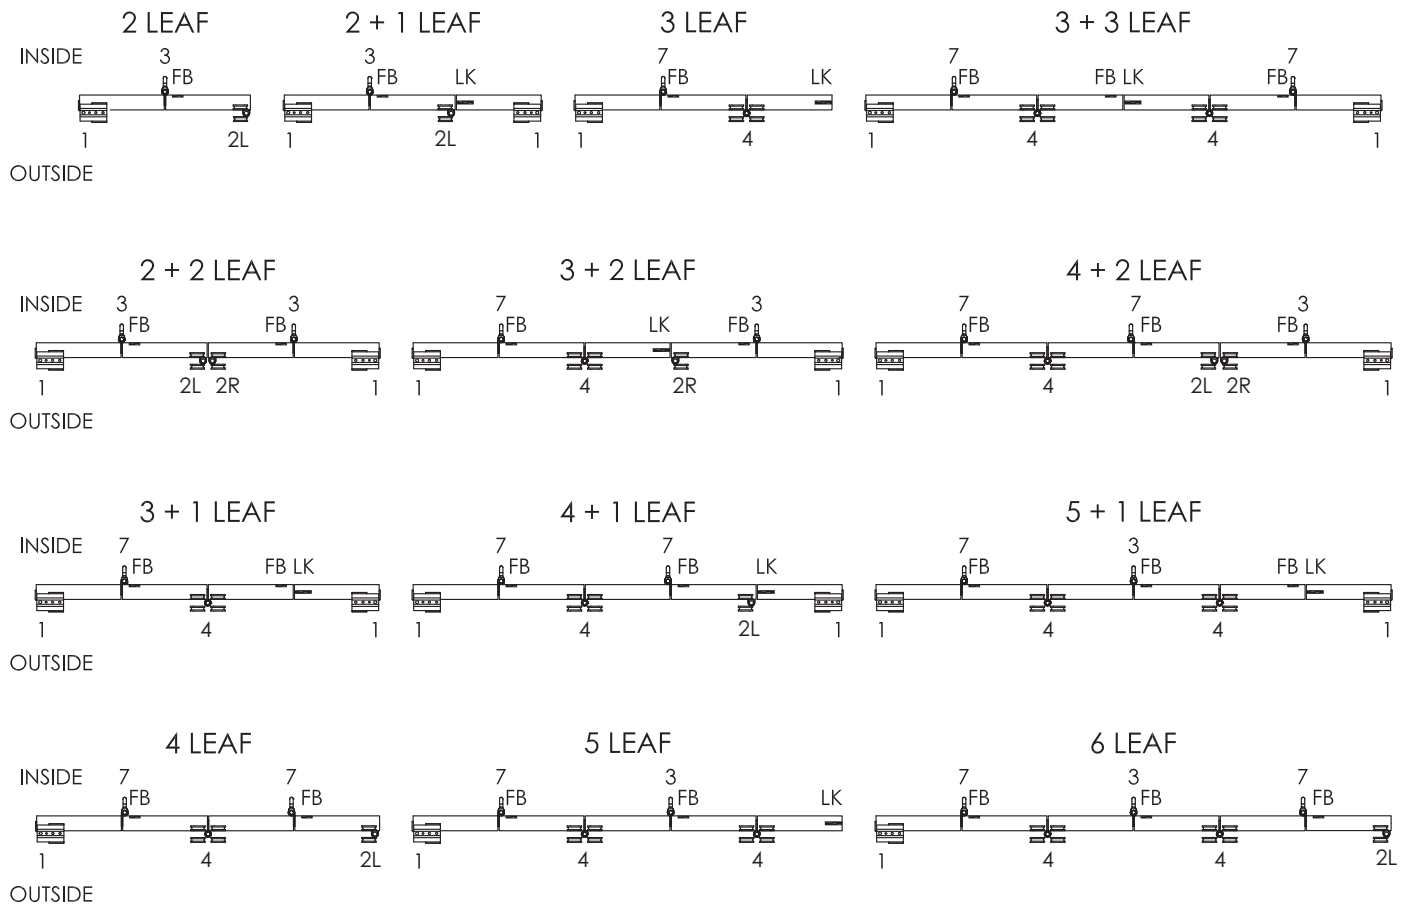


INWARD OPENING (Window 6 panels each way. Servery 2 panels each way.)


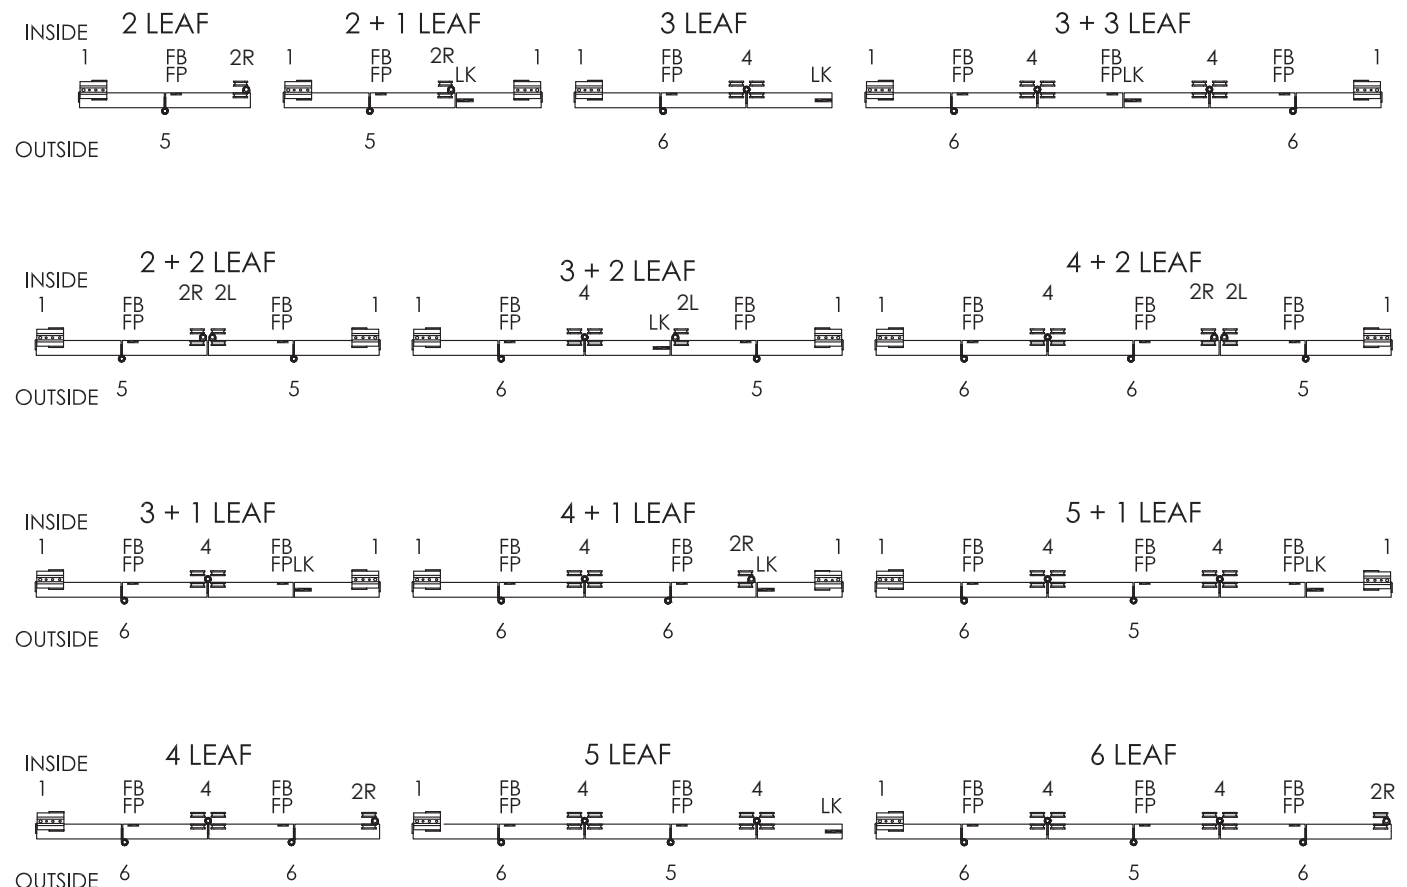


Opening Preparation outward opening system shown, dimensions shown in mm[inches]

SERVERY - NON-GUIDE SYSTEM

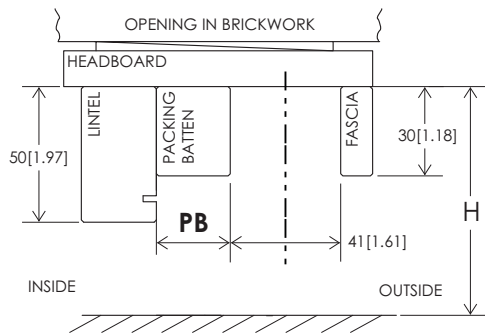


WINDOW - GUIDE SYSTEM

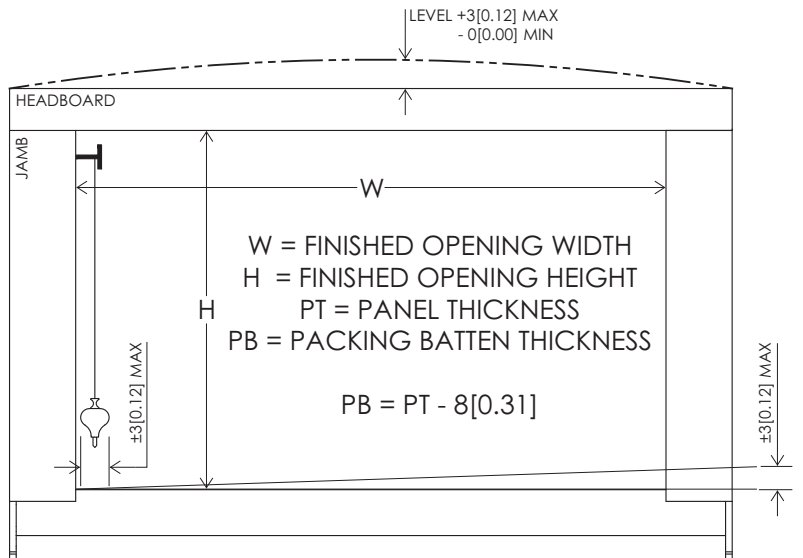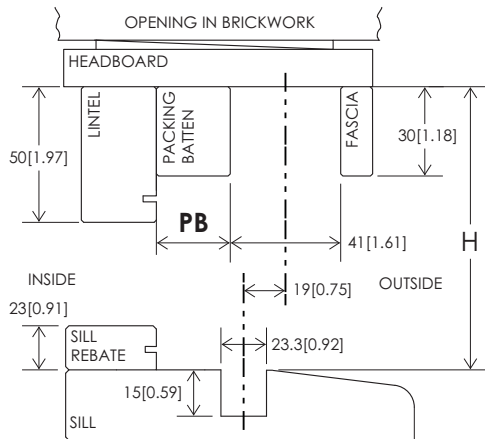


Note: Sill shown for external window application with full (4) rebates.

Track Preparation track and channel cut to length 'W' (finished opening width)

Allows access to hangers by removing track section

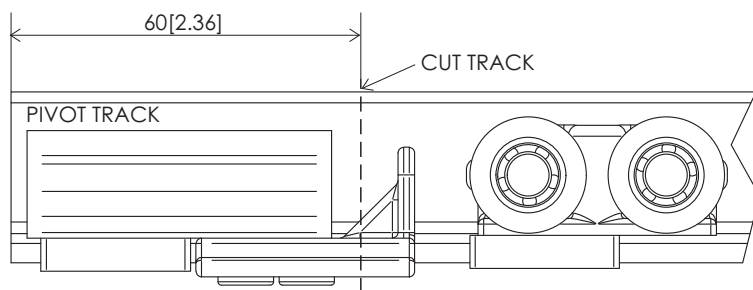


Insert Polypile

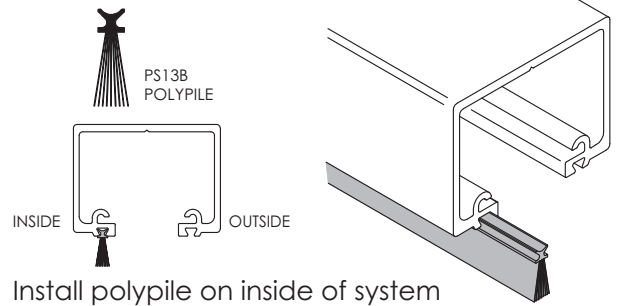


Install Track & Channel

Window

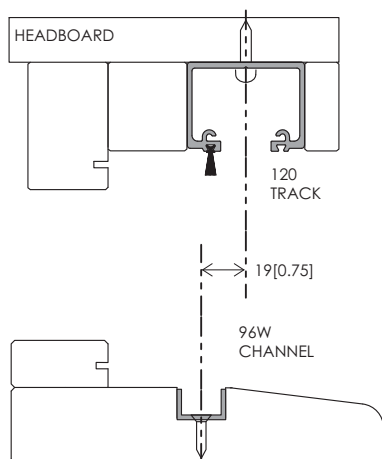


Countersink and screw fix channels at 400[15.75] intervals.

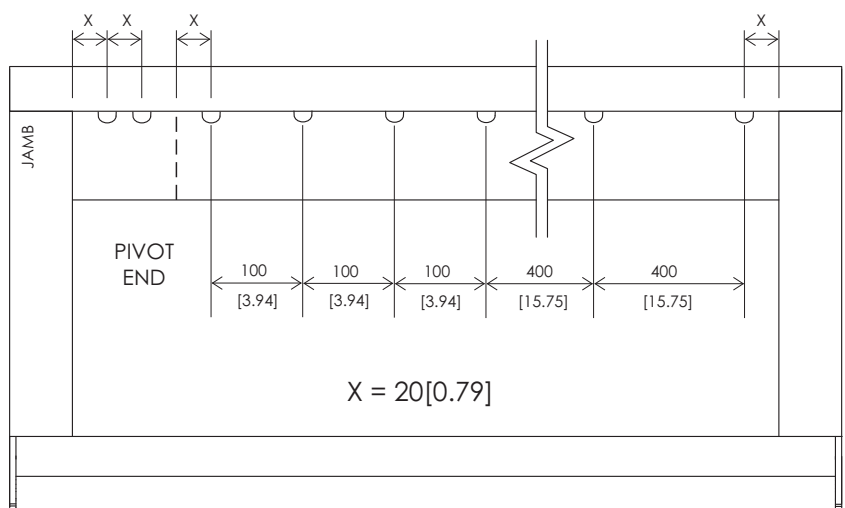

Fix track with 8G screws. After initial 6 fixings, fix screws at 400[15.75] intervals.

Panel Size Calculation

Brio Weatherfold Window & Seryery allow for equal size panels

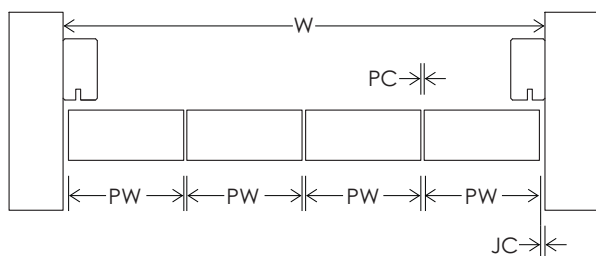

N = No. of Panels

PW = Panel Width


JC = Jamb Clearance = 6[0.24]

PC = Panel Clearance = 3[0.12]


$$PW = \frac{W - [PC(N-1) + 2(JC)]}{N}$$

JC based on panels 600[23.62] wide and 40[1.57] thick.

Seryery:
PH = Panel Height

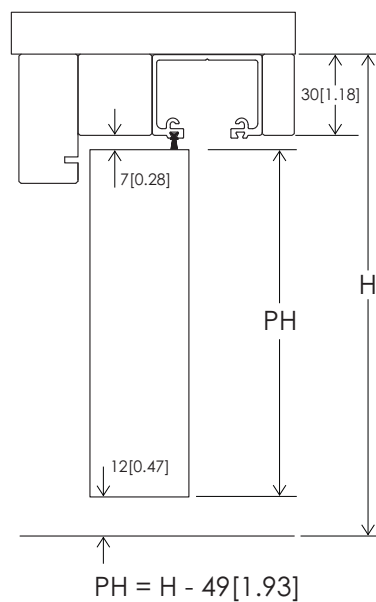


Window:
PH = Panel Height

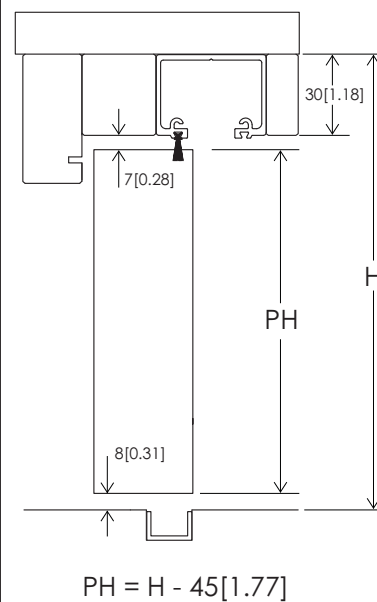


Seal Preparation

For exterior systems. Left, outward opening system shown

Frame - AQ21 perimeter seals to butt against each other in all corners

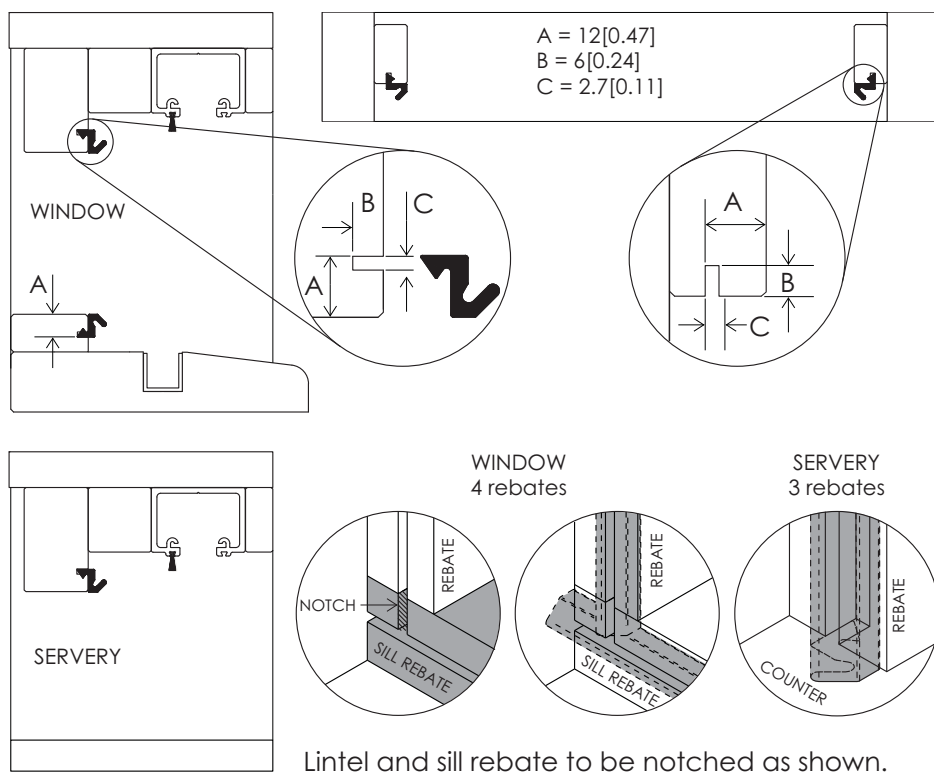


Panel - AQ48

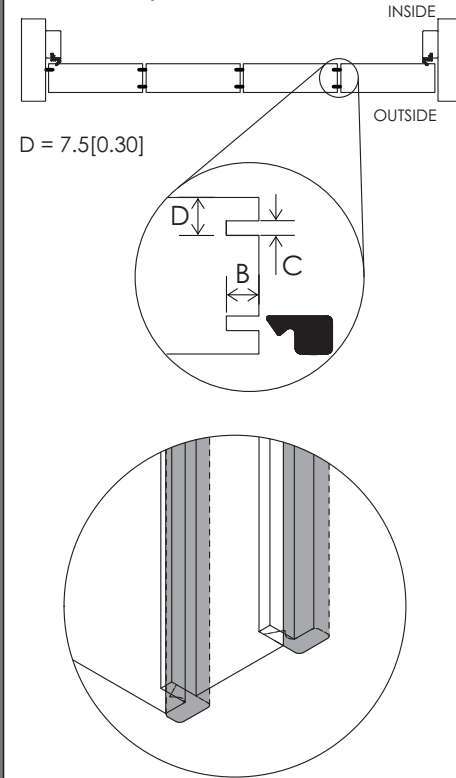

Meeting Door Selection

Panel thickness 30[1.18] minimum


2 Meeting square doors

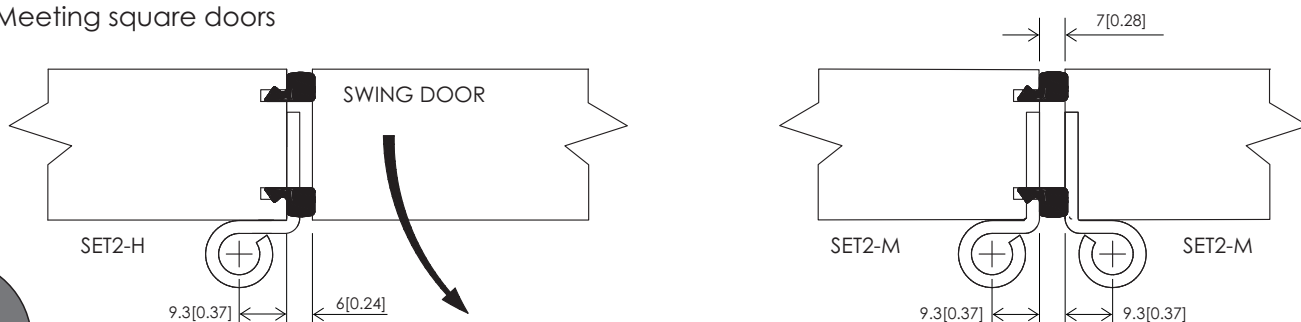


Hinge Installation

pilot hole of Ø2.5mm[0.12"] recommended. Panel thickness 30[1.18] minimum.

SETS 1 & 2H

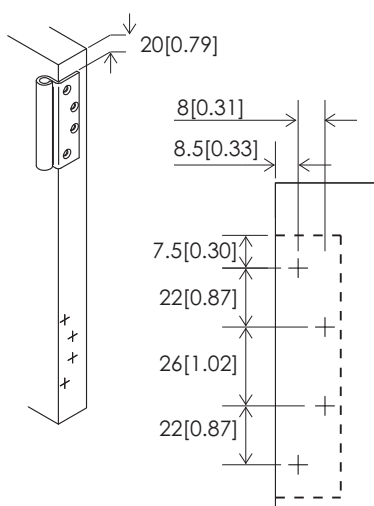


SETS 3, 4, 5, 6 & 7

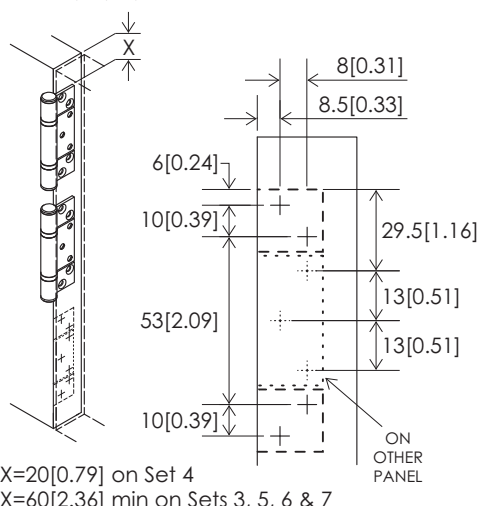

X=20[0.79] on Set 4
X=60[2.36] min on Sets 3, 5, 6 & 7


SET 2M

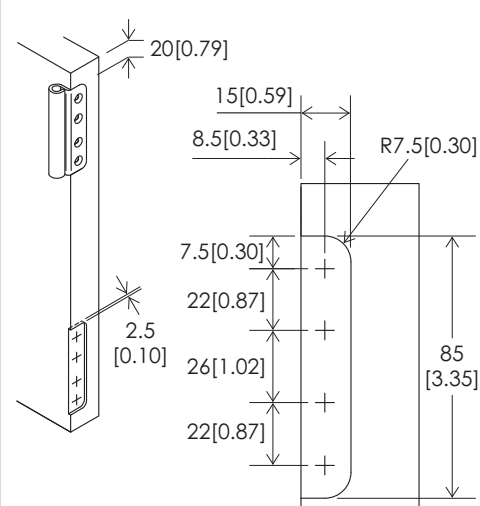


Flush bolt Position

see page 2 for flush bolt location for all configurations, router available

Install flush bolt to panel

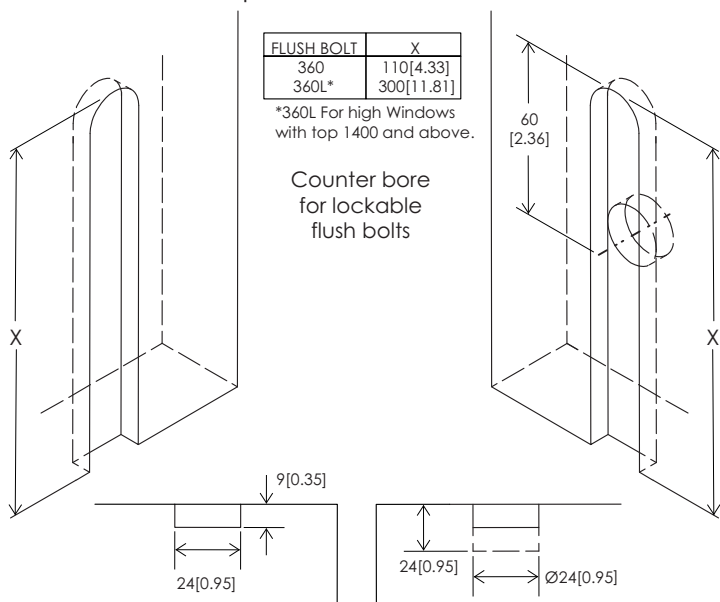


Install flush bolt keeper to sill

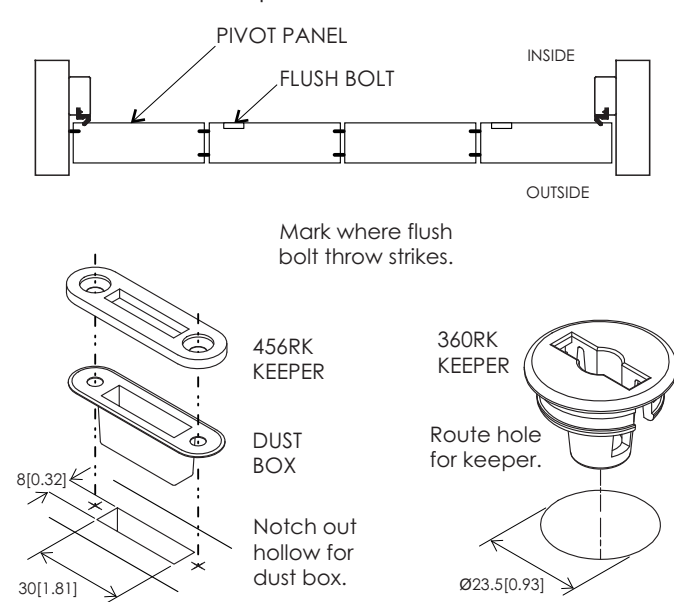


Installation of Bottom Pivot


Installation

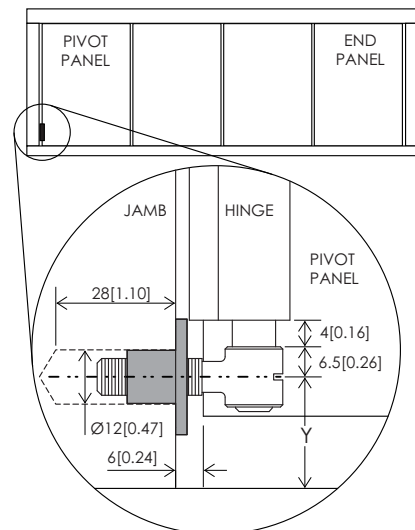


Y = 17.5[0.69] for WINDOW (from top of channel)
Y = 21.5[0.85] for SERVERY (from floor).

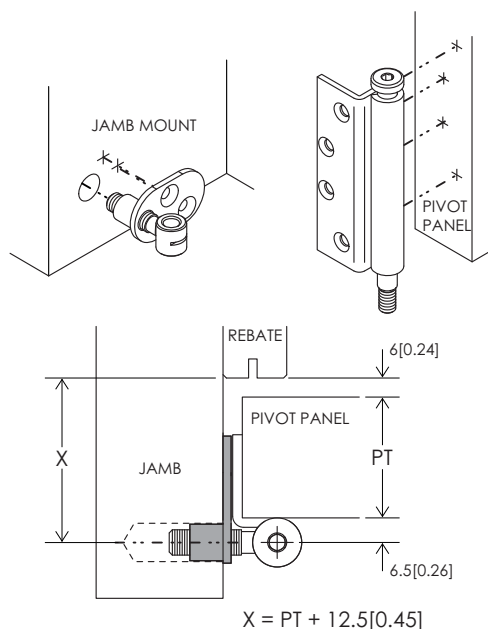


For adjustment see page 7
Bolt aligns

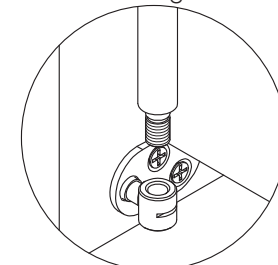


Wind bolt in:

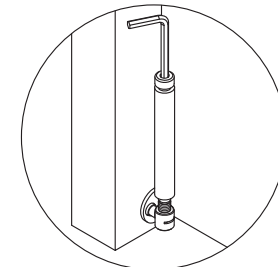


Determining System Orientation

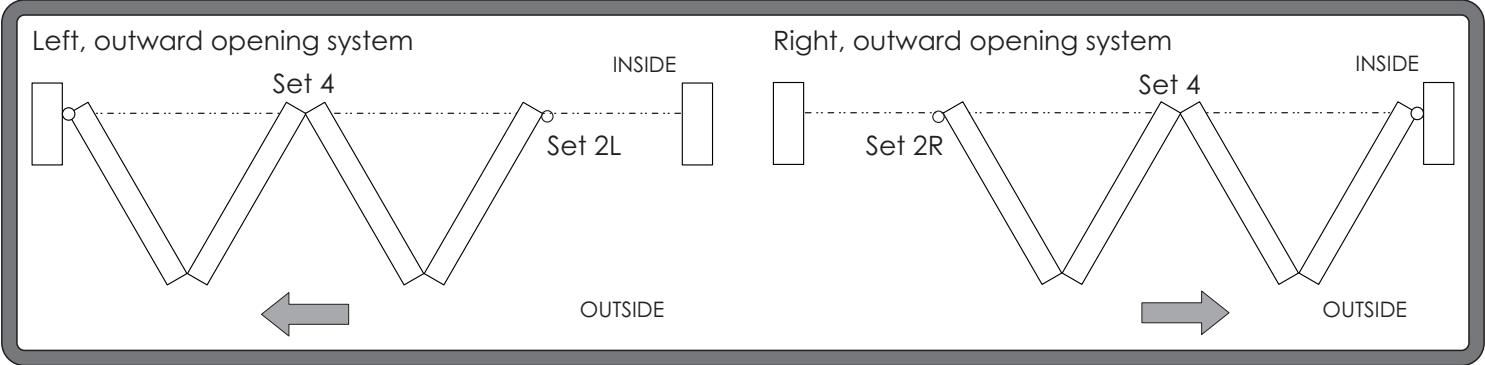

Attaching Hardware to Panels recommended before installation

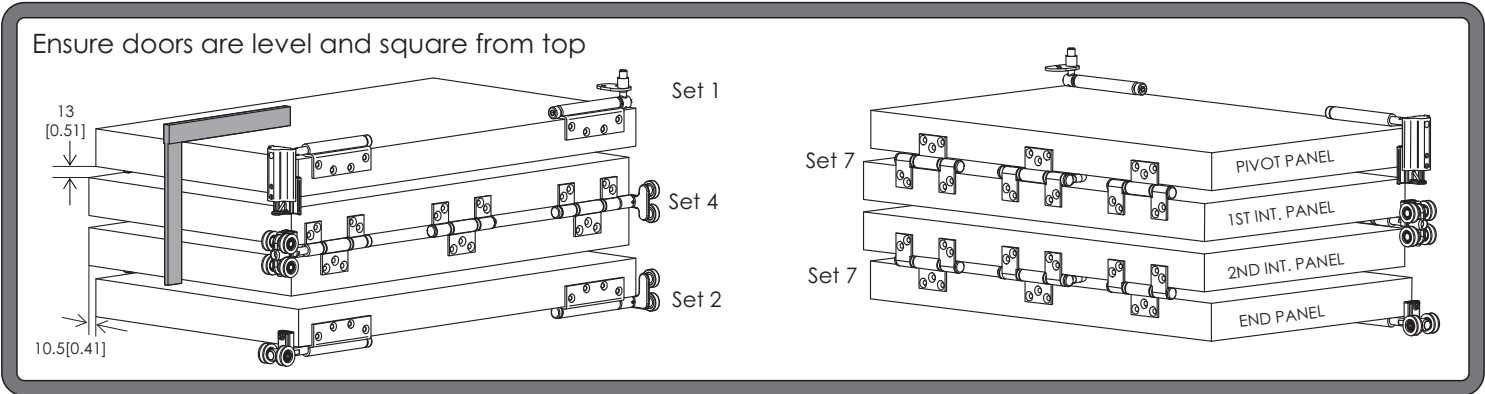


Installing Hardware and Hanging Panels clean down inside of track and channel

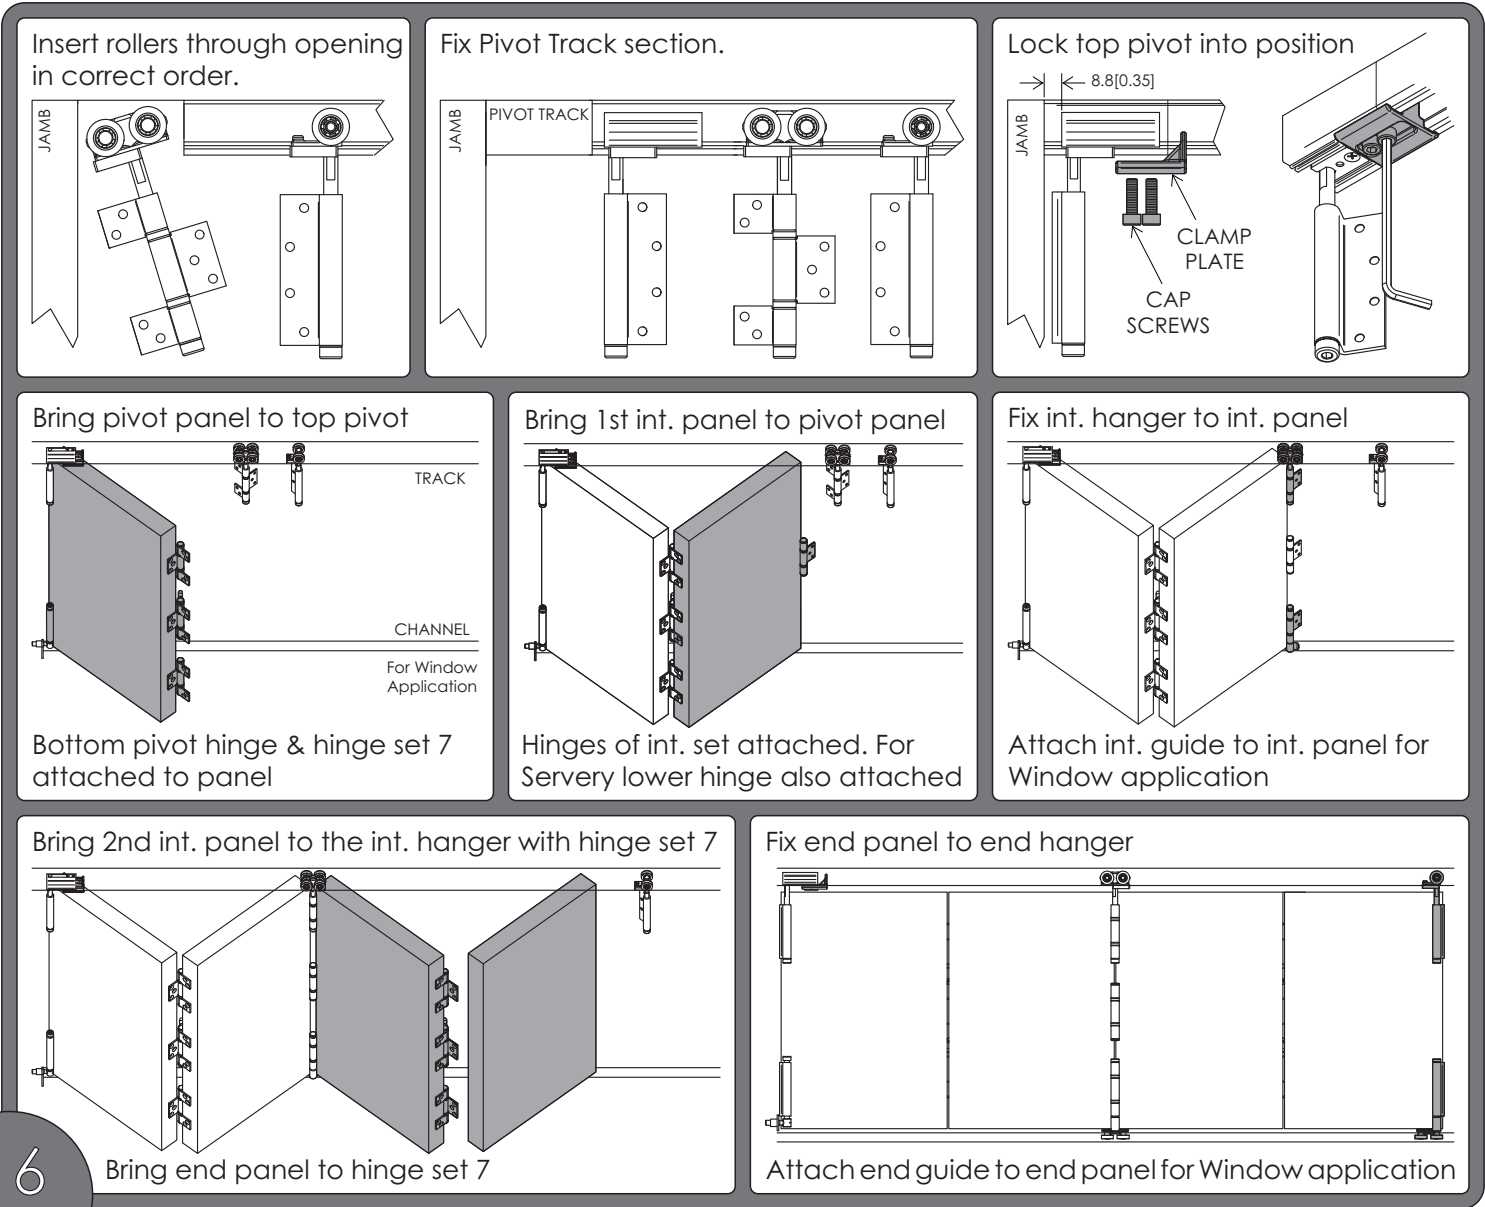

Adjustment


Hanger bolt locking block applied to all hangers and top pivot

Remove locking block

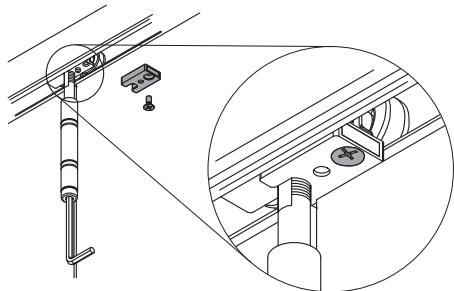


Wind pin into hanger.
Screw block back onto hanger.

Adjust all hangers and top pivot
until panels are level with track


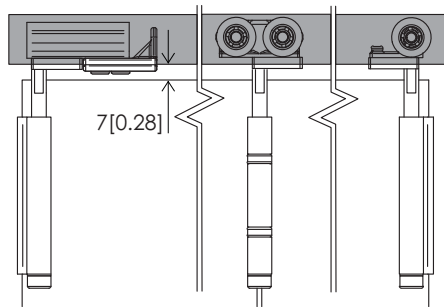


Wind jamb pivot bolt in or out until
it aligns with hinge bolt on panel
after top pivot is set.


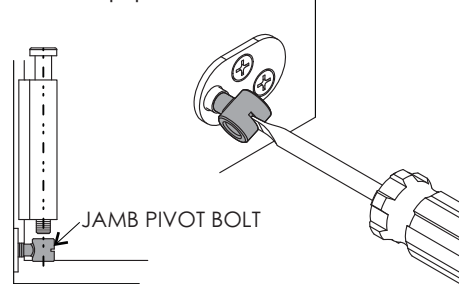


System Overview

WINDOW

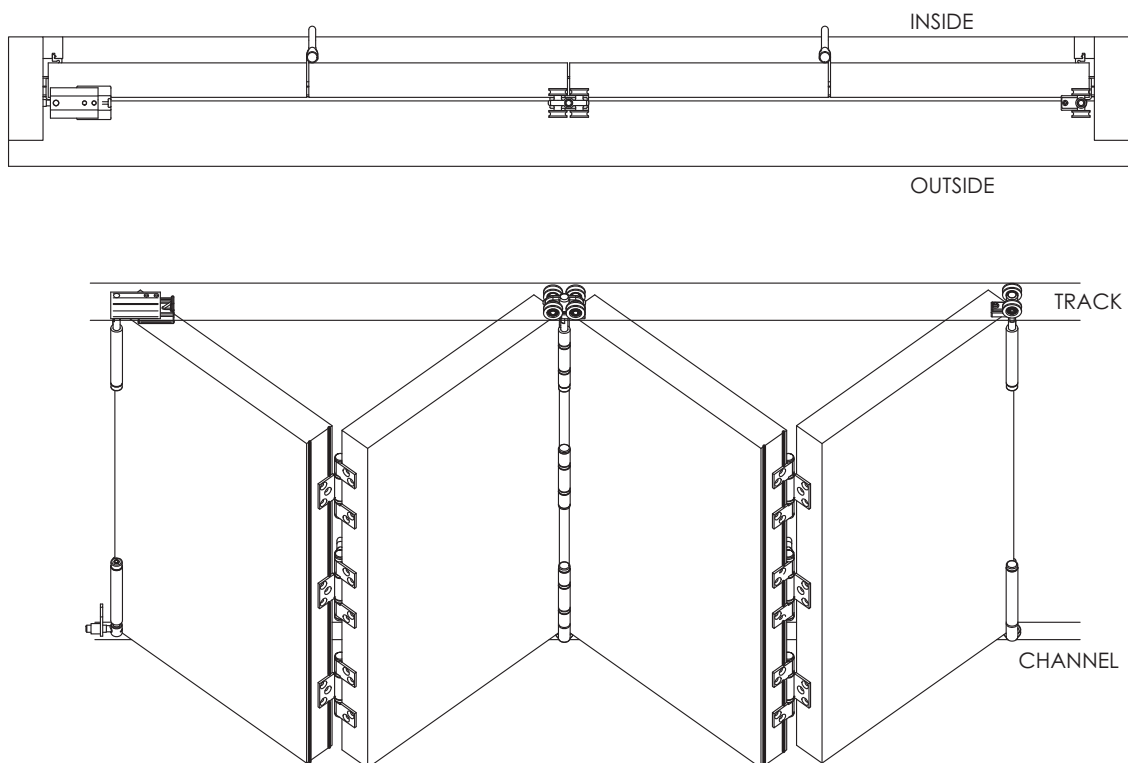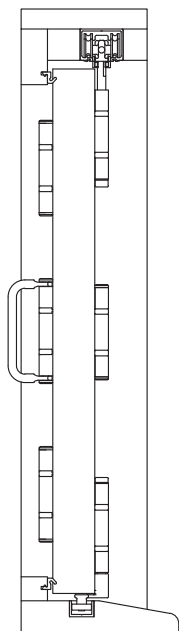

SERVERY

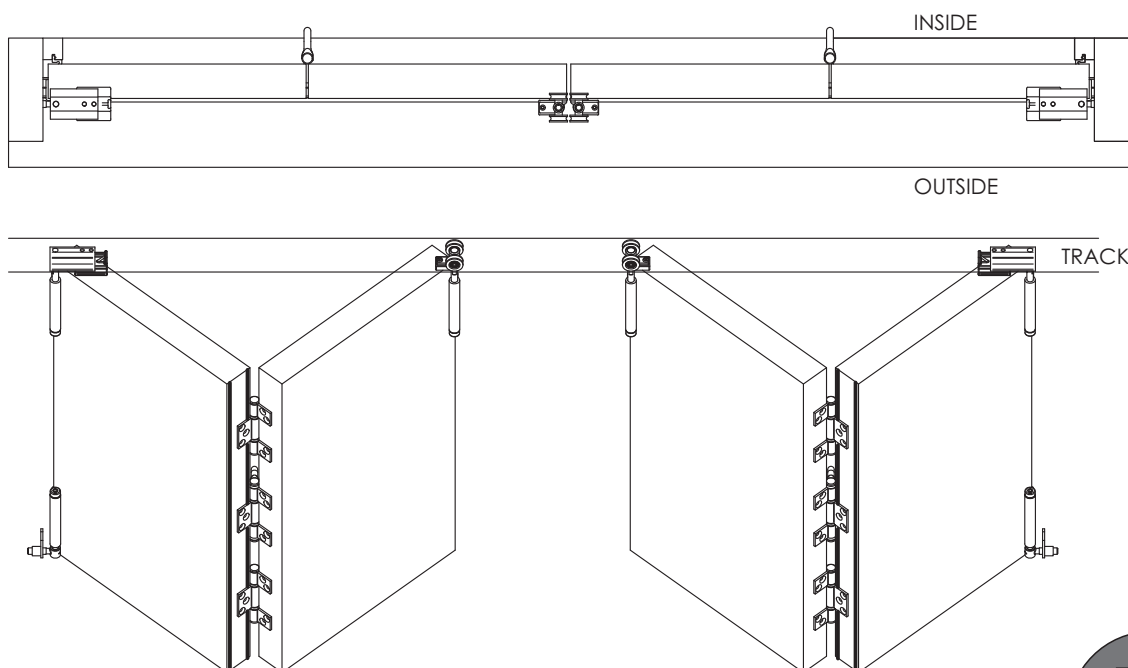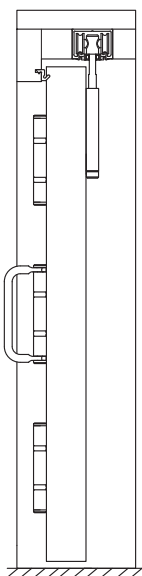

Care and Maintenance

Hardware is subject to deterioration from everyday use and from the environment that it is in. In particular, it is important that routine maintenance be carried out in harsh coastal or marine environments and industrial applications.

General

Inspect all fixing bolts for tightness every six months, including those securing brackets. Tighten if necessary. Routinely check for wear and if excessively worn, the part should be replaced.

To help prevent surface corrosion, Brio® recommends washing regularly; even stainless steel finishes in coastal environments may show signs of surface corrosion if not washed regularly. Sheltered areas that are not rain washed are particularly susceptible. Wash with soap or mild detergent and warm water followed by rinsing with clean cold water and wipe dry.

As a guide, if a window or door requires washing then wash the hardware, however Brio® recommend for marine and industrial environments washing a minimum of every 3 months and 6 months for general environments. In coastal or marine environments Brio® recommends applying a light application of corrosion preventative such as CRC Marine 66 or Inox® for Marine, to all surfaces and using a dry cloth to remove excess. When using lubricant or corrosion protection compounds, be careful to avoid the adjacent surfaces and always follow the manufacturer's instructions.

Track

Keep track free from obstruction and excessive dirt or water. Visible surfaces should be cleaned using a damp cloth and mild detergent, then wiped dry.

Where fitting to the outside of the building, it is recommended that the appropriate track is specified.

Hangers & Pivots

All hangers are fitted with lubricated ball-bearings or plain bearings, requiring no greasing. If doors 'settle' and door clearance is reduced causing friction, raise the door by the hanger adjustment nuts.

Wash as per the above recommendation and apply a light application of corrosion preventative to all surfaces, using a dry cloth to remove excess.

Guides

Guide roller and guide channel must be kept clear and free of obstructions.

Wash as per the above recommendation and apply a light application of corrosion preventative to all surfaces, using a dry cloth to remove excess.

Rollers

All bottom rails should be free from obstruction and excessive dirt or water. Visible surfaces should be cleaned using a damp cloth and mild detergent, then wiped dry. All rollers are fitted with sealed precision bearings requiring no maintenance.

Hinges

Visible surfaces should be cleaned using a damp cloth and mild detergent, then wiped dry. Apply a light application of corrosion preventative to all surfaces, using a dry cloth to remove excess. Repeat at intervals no greater than 3 months.

Flush Bolts

Visible surfaces should be cleaned using a damp cloth and mild detergent, then wiped dry. Apply a light application of lubricant to internal mechanisms and bolt using a suitable nozzle-spray.