

Soffit Linings

Beautifully designed to perfectly match even the most modern construction styles







AVAILABLE IN BLACK & WHITE AND 2 NATURAL TIMBER LOOKS



TOUGH AND DURABLE AND NEXT TO NO MAINTENANCE



BEAUTIFUL DESIGN

AVAILABLE AS
SOLID OR
PERFORATED
PANELS AND
H, J & CORNER
STRIPS



Top Durable Quality Combined with Classical Elegance

Our Masons Soffit Linings consists of solid and perforated PVC boards, J and H strips, as well as an outer corner strip.

Mason Soffit ensures an aesthetic and durable finish.

It is weather resistant and requires no maintenance, so is the best choice for long-lasting satisfaction.

20 YEAR WARRANTY



Why choose Masons Soffit?

WOOD TEXTURE

A soffit lining finished with a texture and wood-like veneer perfectly imitates natural characteristics of timber whether stained or painted.

LOW WEIGHT

Low weight of our system facilitates installation on delicate structures without any loads imposed on roof structures.

SAVE TIME

Frame out, install boards and trim - done! No painting is required.

VERY LOW MAINTENANCE

The soffit element material is so durable that limited care or maintenance activities are required apart from the occassional low pressure wash down.

PERFORATED

Choose Masons perforated soffits toward a naturally ventilated healthy roof space.

FIRE RETARDANT

Masons soffit are fire retardant, and so use with confidence.



Beautiful Design



Colour Fastness



Weather Resistant



Easy Installation



Light Weight



Immitates
Wood Texture



Colours & Timber Look

Available in black and white as well as natural timber look Colour fastness is confirmed with labority testing and ageing tests.





WHITE

BLACK





WINCHESTER

CLASSIC NUT

The Soffit Panels



Soffit Panels	Masons Code	Qty per Box
Solid Lining Board - Black	SCSCBBLK	18
Solid Lining Board - White	SCSCBWHITE	18
Solid Lining Board - Winchester	SCSCBWIN	18
Solid Lining Board - Nut Classic	SCSCBNUTC	18
Perforated Lining Board - Black	SCPSBBLK	18
Perforated Lining Board - White	SCPSBWHITE	18
Perforated Lining Board - Winchester	SCPSBWIN	18
Perforated Lining Board - Nut Classic	SCPSBNUTC	18




CORNER STRIP OUTER

Soffit Strips	Masons Code	Qty Per Box
J Strip - Black	SCJSTRIPBLK	30
J Strip - White	SCJSTRIPWHITE	30
J Strip - Winchester	SCJSTRIPWIN	30
J Strip - Nut Classic	SCJSTRIPNUTC	30
H Strip - Black	SCHSTRIPBLK	24
H Strip - White	SCHSTRIPWHITE	24
H Strip - Winchester	SCHSTRIPWIN	24
H Strip - Nut Classic	SCHSTRIPNUTC	24
Corner Strip Outer - Black	SCCSTRIPBLK	12
Corner Strip Outer - White	SCCSTRIPWHITE	12
Corner Strip Outer - Winchester	SCCSTRIPWIN	12
Corner Strip Outer - Nut Classic	SCCSTRIPNUTC	12



Visit
mpb.co.nz for
INSTALLATION
INSTRUCTIONS

Gallery of Latest Installations

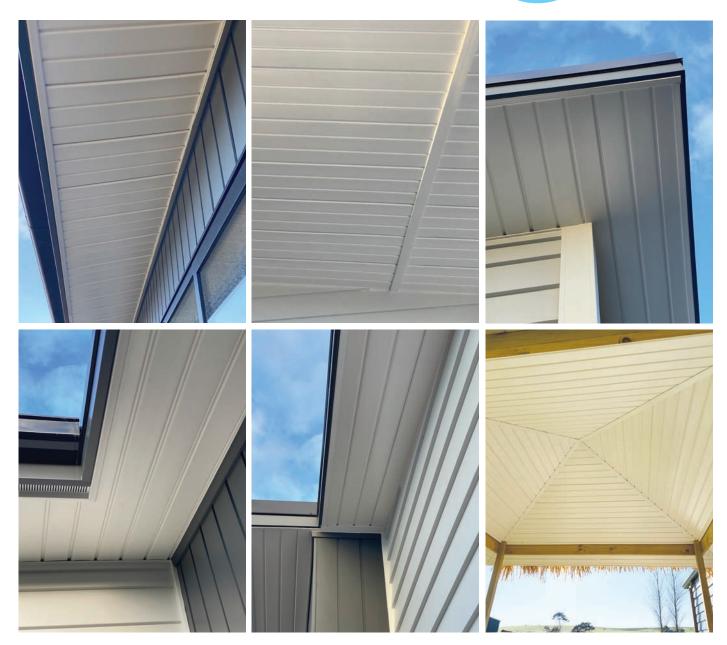

Installation of a Soffit Lining

The soffit boards require battens or blocks to be installed between the rafters or soffit framing adjacent to the fascia board, and next to the cladding if no ribbon board fitted. Fit battens flush and level to the lower face of soffit framing.

For full instructions please visit mpb.co.nz

- Installation of the soffit boards perpendicular to the cladding surface is recommended.
- Maximum recommended span is 400mm.
- Installation should be completed when ambient temperature is 5°C or above .
- Masons soffits should not be installed where exposed to direct sunlight.