


SASH UNDER VENTIENT

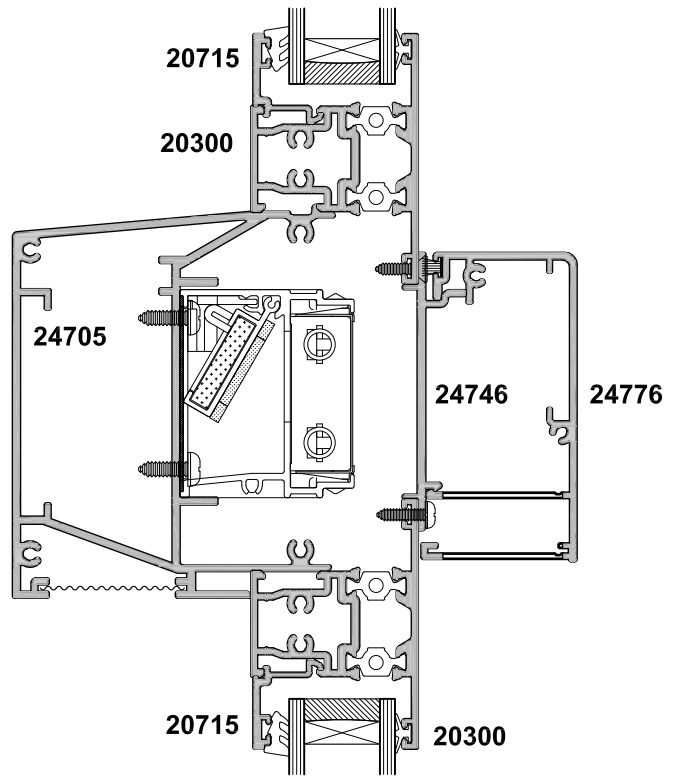

VENTIENT UNDER TRANSOM