

## Set Out Details - Longrun

# 185 Multifit External Fascia

"NEW: Woodgrain Embossed Fascia Available Now!"

Roof Pitch

(Degrees)

3°

4°

300


56

61

450

64

71

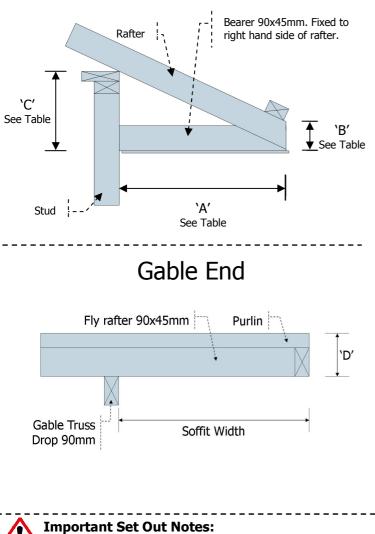

	-		· -				
`D'	5°	66	79	92	105	118	130
	10°	92	118	144	171	197	130
	15°	117	157	198	238	278	130
	17.5°	135	183	230	277	324	135
	20°	148	203	258	312	367	135
	22.5°	162	224	286	348	410	135
	25°	181	251	320	390	460	140
	27.5°	195	273	351	429	507	140
	30°	209	296	382	469	556	140
	35°	245	350	455	560	665	145
	40°	279	405	531	657	783	145
	45°	318	468	618	768	918	145

### All measurements must be checked on site prior to installation.

Soffit Widths

Dimension 'A' (mm)

600

Soffit Drop Heights Dimension 'C' (mm)

71

82

750

79

92

900

87

103

- In all cases gable end will require a packer under rafter to accommodate the various pitches (D).
- Soffit bearer fixed to right hand side of the rafter, looking at the building.
- To ensure birds cannot enter the roof space leave the bottom purlin off until fascia has been installed.
- Based on minimum purlin thickness of 45mm.
- A 10mm soffit clearance has been allowed for.
- 185 Multifit Big Panel Fascia System is suitable for use with longrun roofs with sloping soffits up to 35°.
- Soffit bearers are required on all hip corners.

## **Important Product Notes:**

- Store product securely on site away from incompatible materials and protect from wind and operating machinery.
- Product surface protected with plastic film should be stored under cover, away from u/v light, and film removed immediately after installation.
- It is a requirement of the products warrantee to obtain and thoroughly read a copy of Roofing Industries handling, storage and installation guide. Available from the supplying branch or alternatively from www.roof.co.nz

## Steps To Follow:

- Inform precutter that Multifit External Fascia is being used.
- Keep in contact with the authorised installer in your area of progress/when ready for installation.
- Multifit fascia can be installed to other fascia system set outs, only by a few simple steps. Contact your local installer or Roofing Industries.

ROOFING INDUSTRIES | FREEPHONE 0800 844 822 | WWW.ROOF.CO.NZ



 $\square$ 

Fascia Drop

Dimension

'B' (mm)

130

130