
RESIDENTIAL CORRUGATE WALL CLADDING SLOPING SOFFIT FLASHING FOR VERTICAL CORRUGATED

Detail Number: RI-RCW007A

Date drawn: 02/02/2017

Scale: 1:5@ A4

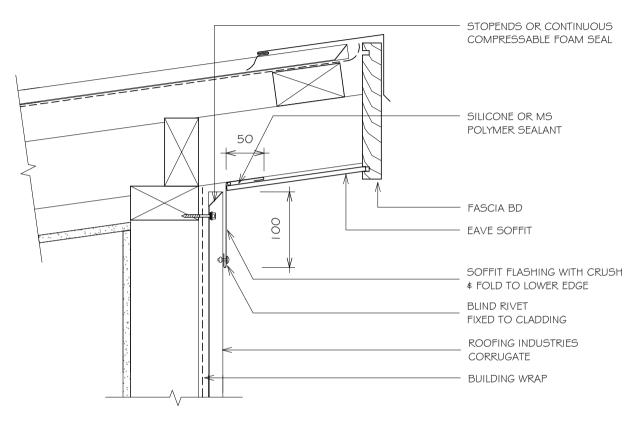

NOTES:

- These details are generally in compliance with E2/AS I and/or the NZ Metal Roof \$ Wall Cladding Code of Practice and in some cases specific details by 'Roofing Industries'.
- The building designer is ultimatley responsible to ensure that details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure including cavity batters are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity batters may be required.
- Underlay selection and building wrap types are the responsibility of the designer. When rigid wall underlay is required it is the designers responsibility to ensure the correct type is used and follow the manufacturers recommendation for installation.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof # Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS I.





