
EUROSTYLE SPANLOK® VARIABLE PAN(VP) WALL CLADDING ON PLYWOOD SUBSTRATE SILL FLASHING FOR VERTICAL CLADDING (WINDOW/DOOR **OPTION 3**) FRAME BLOCK

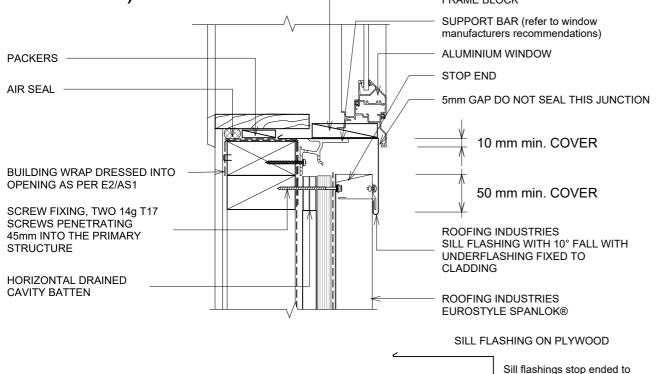

GENERAL NOTES:

- These details are to be read with Roofing Industries SPANLOK™ Product Technical Statement and installation guide.
- These details are generally in compliance with E2/AS1 and/or the NZ Metal Roof & Wall Cladding Code of Practice and in some cases specific details by 'Roofing Industries'.

receive iamb flashings

3-5mm

Hem to be clear of pan

- The building designer is ultimatley responsible to ensure that details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure including cavity battens are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1.
- Details are for steel based materials, other substrates may require some changes.
- All dimensions are nominal

Detail Number: RI-ESRWVP-140C Date drawn: 03/04/2025

Scale: 1:5@ A4

DETAIL ANNOTATION:

- REFER TO E2/AS1 FOR GENERAL WINDOW OPENING FOR WRAPPING OF FRAMED OPENING PRIOR TO WINDOW INSTALLATION
- 2. WINDOW PROFILE TO BE SELECTED TO ACHIEVE COVER SHOWN IN DETAILS.
- 3. ARCHITRAVE'S ARE SHOWN FOR CONSISTENCY ONLY, DETAIL MAY BE USED WITH REBATED LINER.
- 4 WHERE SUPPORT BRACKETS REQUIRED BY THE WINDOW MANUFACTURER TO CARRY THE FRAME AND GLAZING LOADS THEY MUST BE SUPPLIED AS AN INTEGRAL PART OF THE WINDOW MANUFACTURER'S RECOMMDENDATIONS.
- 5. LIAISE WITH WINDOW MANUFACTURER PRIOR TO INSTALLATION
- SEAL HEAD FLASHING TO WINDOW IN VERY HIGH & EXTRA HIGH 6. WIND ZONES
- 7. TREATED TIMBER CAVITY BATTENS CONTAINING CORROSIVE TREATMENTS MUST BE SEPARATED FROM METAL CLADDING
- CASTELLATED BATTEN OR APPROVED DRAINED BATTEN CAN BE 8. USED WITH THIS SYSTEM
- 9 FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED
- 10 ALTERNATIVELY REFER TO E2/AS1 FOR ELASHING COVER GUIDANCE
- CLIPS OMITTED FOR CLARITY 11.
- HIGH TO EXTRA HIGH WIND ZONES DOUBLE FIX 12. UNDERFLASHING



Apple App Store/Google Play