COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING SHEET LIST

Detail Number: RI-CSCWVDT-00A
Date drawn: 25/08/2026
Scale: @ A3

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING		
Sheet Number	Type	Sheet Name
RI-CSCWVDT-00A	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	SHEET LIST
RI-CSCWVDT-00B	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	PROFILES & ACCESSORIES
RI-CSCWVDT-00C	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	PROFILE SUMMARY
RI-CSCWVDT-010	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	BARGE DIRECT FIX
RI-CSCWVDT-010A	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	STANDARD EXTERNAL CORNER DIRECT FIX
RI-CSCWVDT-020A	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	HEAD BARGE DIRECT FIX
RI-CSCWVDT-030A	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	EXTERNAL CORNER DIRECT FIX WITH CLADDING CHANGE
RI-CSCWVDT-040A	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	STANDARD INTERNAL CORNER DIRECT FIX
RI-CSCWVDT-040B	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	INTERNAL CORNER DIRECT FIX WITH CLADDING CHANGE
RI-CSCWVDT-050A	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	BOTTOM OF CLADDING
RI-CSCWVDT-050B	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	JUNCTION FLASHING DIRECT FIX
RI-CSCWVDT-060	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	SOFFIT FLASHING DIRECT FIX
RI-CSCWVDT-070	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	SLOPING SOFFIT FLASHING DIRECT FIX
RI-CSCWVDT-090	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	VERTICAL BUTT JOINT DIRECT FIX WITH CLADDING CHANGE OPTION 1
RI-CSCWVDT-090B	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	VERTICAL BUTT JOINT DIRECT FIX WITH CLADDING CHANGE OPTION 2
RI-CSCWVDT-120A	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	HEAD FLASHING DIRECT FIX RECESSED WINDOW/DOOR ON FRAMING LINE
RI-CSCWVDT-120B	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	JAMB FLASHING DIRECT FIX RECESSED WINDOW/DOOR ON FRAMING LINE OPTION 1
RI-CSCWVDT-120B-1	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	JAMB FLASHING DIRECT FIX RECESSED WINDOW/DOOR ON FRAMING LINE OPTION 2
RI-CSCWVDT-120C	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	SILL FLASHING DIRECT FIX RECESSED WINDOW/DOOR
RI-CSCWVDT-120D	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	FLASHING LAYOUT DIRECT FIXED RECESSED WINDOW/DOOR ON FRAMING LINE OPTION 1
RI-CSCWVDT-120D-1	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	FLASHING LAYOUT DIRECT FIXED RECESSED WINDOW/DOOR ON FRAMING LINE OPTION 2
RI-CSCWVDT-150	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	METER BOX HEAD FLASHING DIRECT FIX
RI-CSCWVDT-160	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	METER BOX SIDE FLASHING DIRECT FIX
RI-CSCWVDT-170	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	METER BOX BASE FLASHING DIRECT FIX
RI-CSCWVDT-190A	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	ROLLER DOOR HEAD
RI-CSCWVDT-190B	COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING	ROLLER DOOR JAMB


Copyright detail © 2026

Roofing Industries
roof.co.nz


COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
PROFILES & ACCESSORIES

Detail Number: RI-CSCWVDT-00B
Date drawn: 25/08/2026
Scale: 1 : 5@ A3


ROOFING INDUSTRIES
SLIMCLAD™
PROFILED METAL CLADDING




ROOFING INDUSTRIES
BARGE FLASHING

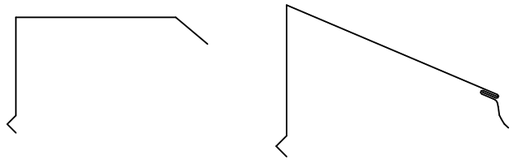


ROOFING INDUSTRIES
BARGE/PARAPET FLASHING

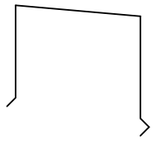

ROOFING INDUSTRIES
CHANGE IN PITCH FLASHING

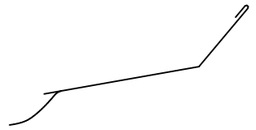


ROOFING INDUSTRIES
GUTTER APRON FLASHING




ROOFING INDUSTRIES
SLIMCLAD™
PROFILED METAL CLADDING



ROOFING INDUSTRIES
RIDGE FLASHING

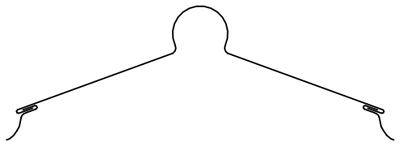

ROOFING INDUSTRIES
APRON FLASHING

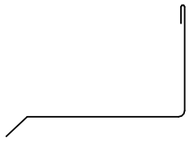

ROOFING INDUSTRIES
HEAD FLASHING




ROOFING INDUSTRIES
COVER FLASHING



ROOFING INDUSTRIES
SOFFIT FLASHING



FIXINGS



CAVITY CLOSER




METAL ANGLE




HEAD FLASHING




JAMB FLASHING



ALTERNATE JAMB FALSHING




SILL FLASHING




ROOFING INDUSTRIES
METER BOX BASE
FLASHING




ROOFING INDUSTRIES
JAMB FLASHING




ROOFING INDUSTRIES
CORNER FLASHING

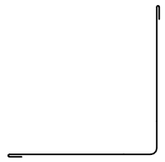

ROOFING INDUSTRIES
INTERNAL CORNER

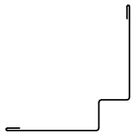

ROOFING INDUSTRIES
EXTERNAL CORNER

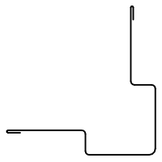

ROOFING INDUSTRIES
VERTICAL BUTT JOINT FLASHING



ROOFING INDUSTRIES
CLADDING BASE FLASHING




Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
PROFILE SUMMARY

Detail Number: RI-CSCWVDT-00C
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

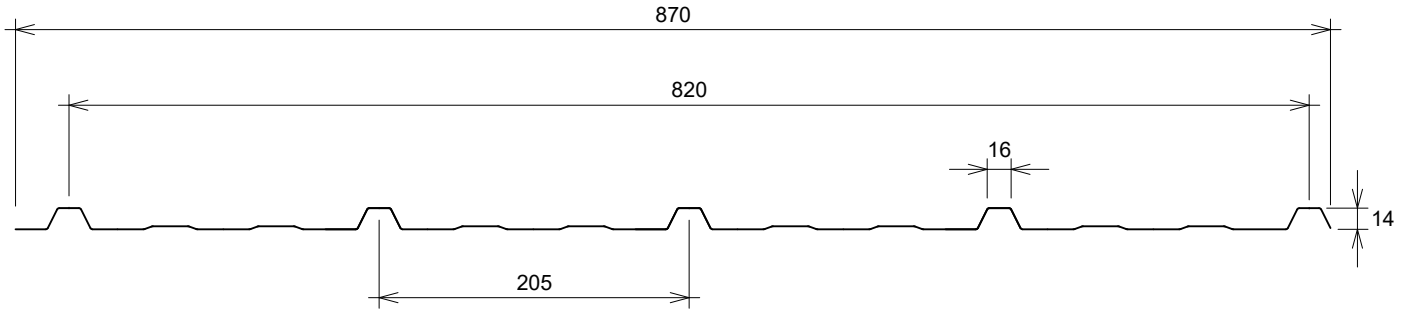

SLIMCLAD™ WITH SWAGES
A REDUCED ('LIGHT') SWAGE IS ALSO AVAILABLE

Scale 1:5

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
BARGE DIRECT FIX


Detail Number: RI-CSCWVDT-010
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

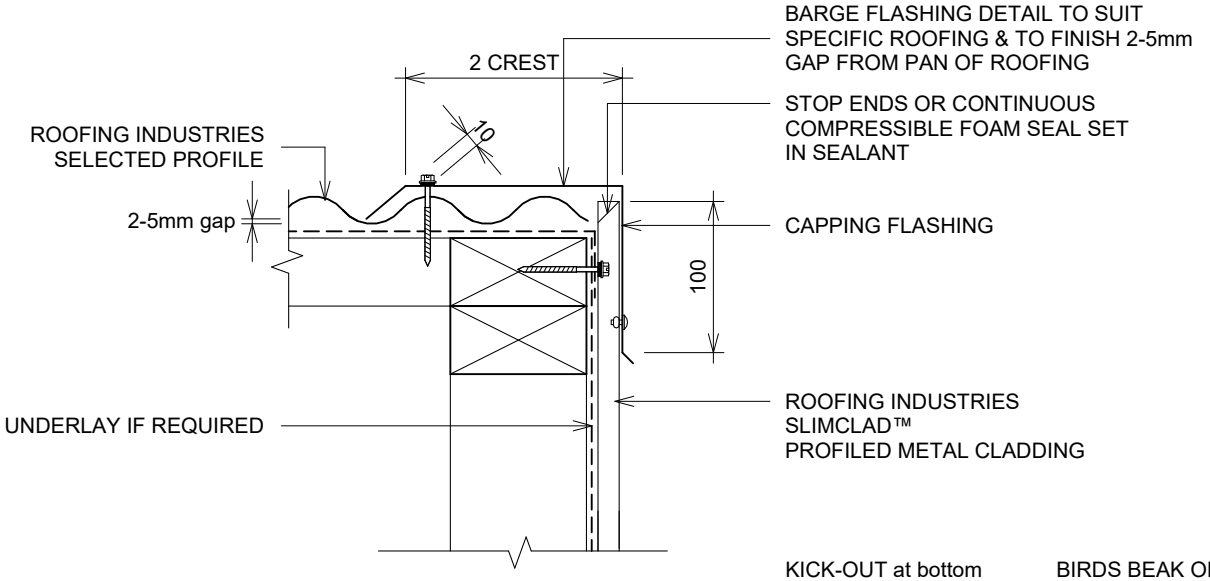


DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.

KICK-OUT at bottom edge of vertical flashing

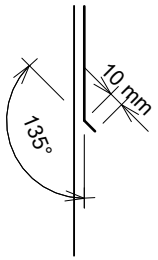

BIRDS BEAK OPTION at bottom edge of vertical flashing

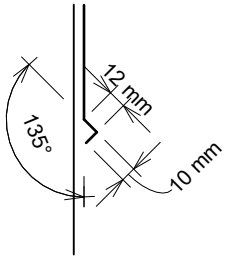

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
STANDARD EXTERNAL CORNER DIRECT FIX

Detail Number: RI-CSCWVDT-010A
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

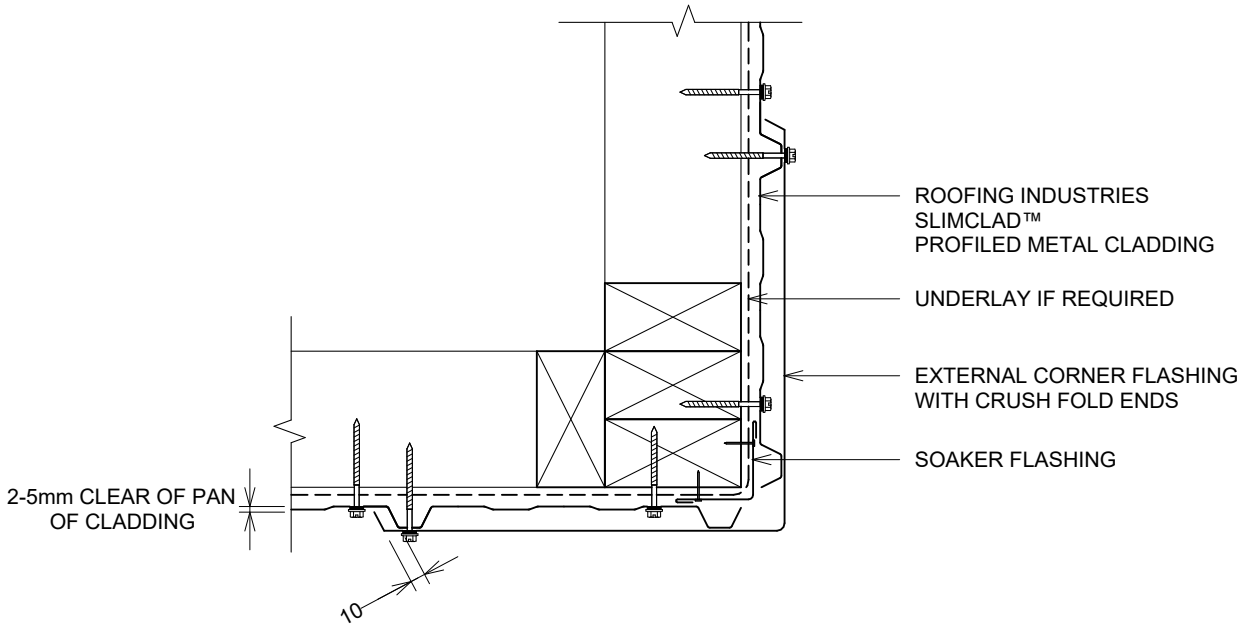

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
6. TIMBER CONTAINING CORROSIVE MATERIAL MUST BE SEPARATED FROM METAL CLADDING BY DPC, BUILDING WRAP, PVC OR PAINTING.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
HEAD BARGE DIRECT FIX


Detail Number: RI-CSCWVDT-020A
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

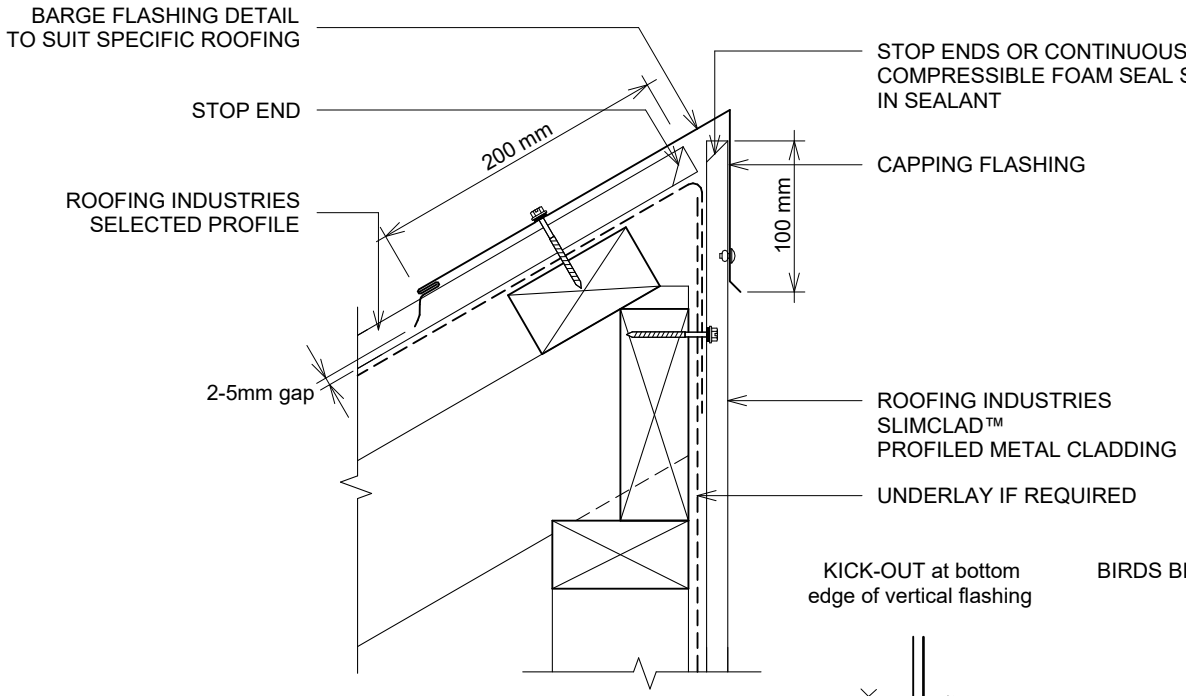


DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.

KICK-OUT at bottom edge of vertical flashing

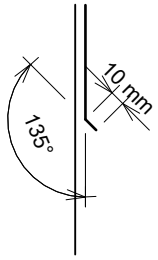

BIRDS BEAK OPTION at bottom edge of vertical flashing

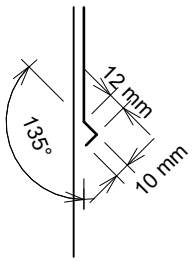

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
EXTERNAL CORNER DIRECT FIX WITH CLADDING CHANGE

Detail Number: RI-CSCWVDT-030A
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

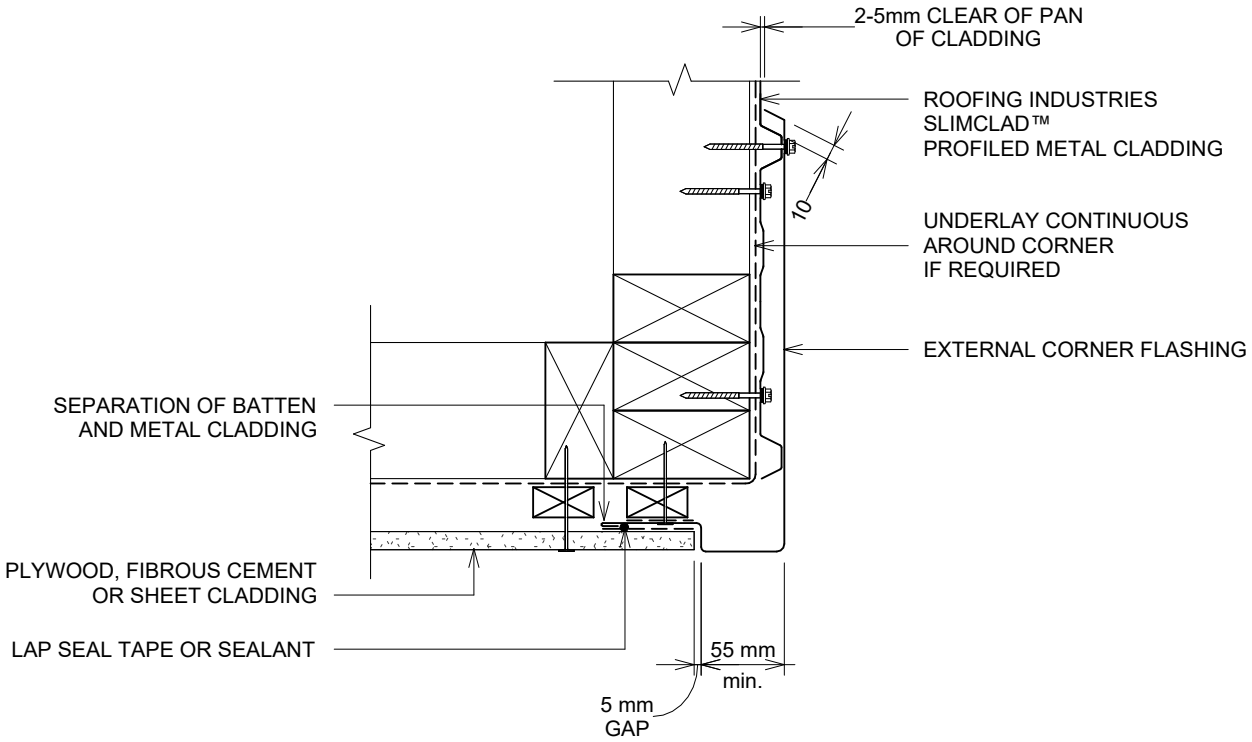

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
STANDARD INTERNAL CORNER DIRECT FIX

Detail Number: RI-CSCWVDT-040A
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

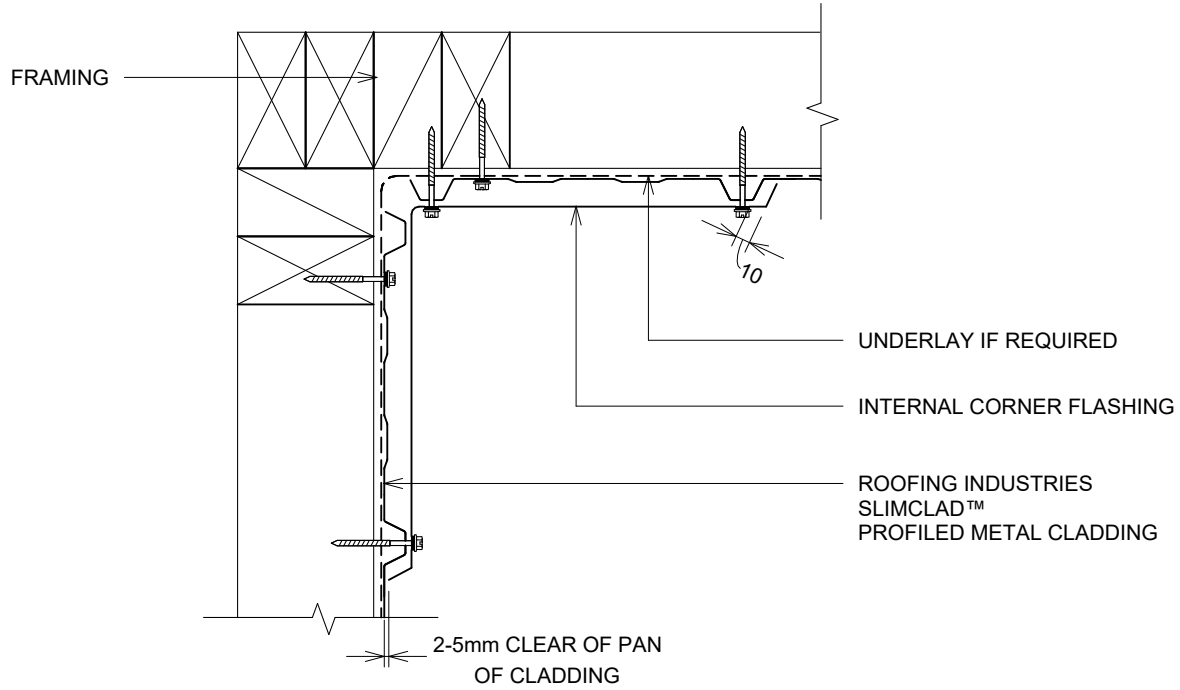

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
INTERNAL CORNER DIRECT FIX WITH CLADDING CHANGE

Detail Number: RI-CSCWVDT-040B
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

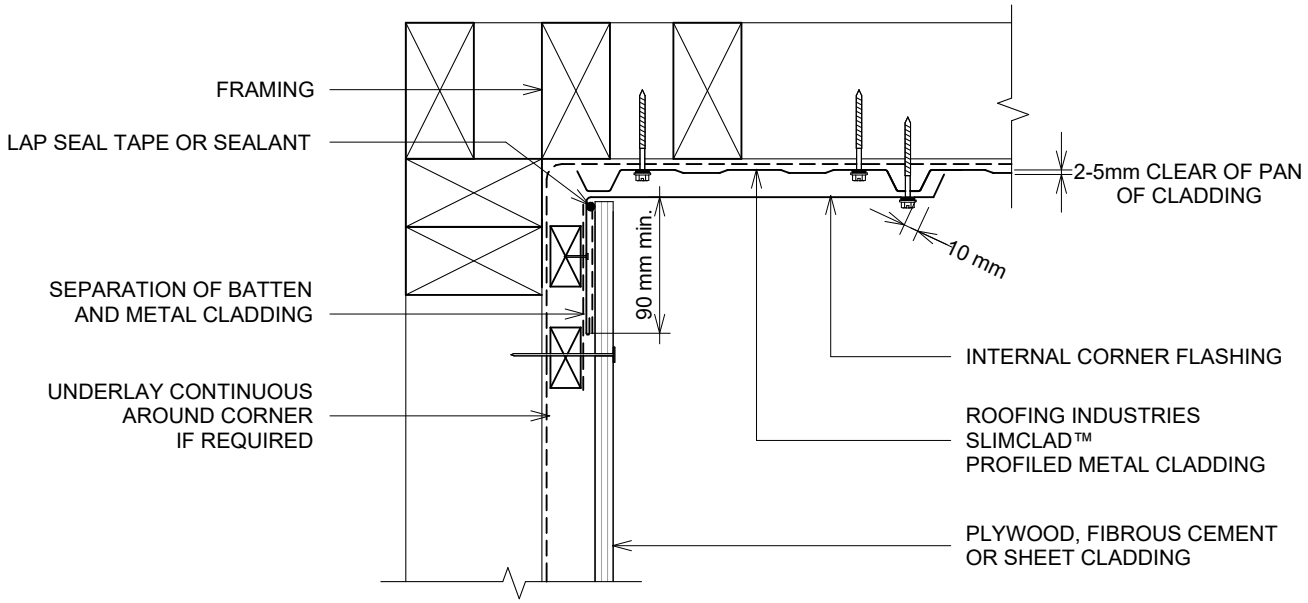

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
6. TIMBER CONTAINING CORROSIVE MATERIAL MUST BE SEPARATED FROM METAL CLADDING BY DPC, BUILDING WRAP, PVC OR PAINTING.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
BOTTOM OF CLADDING

Detail Number: RI-CSCWVDT-050A
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

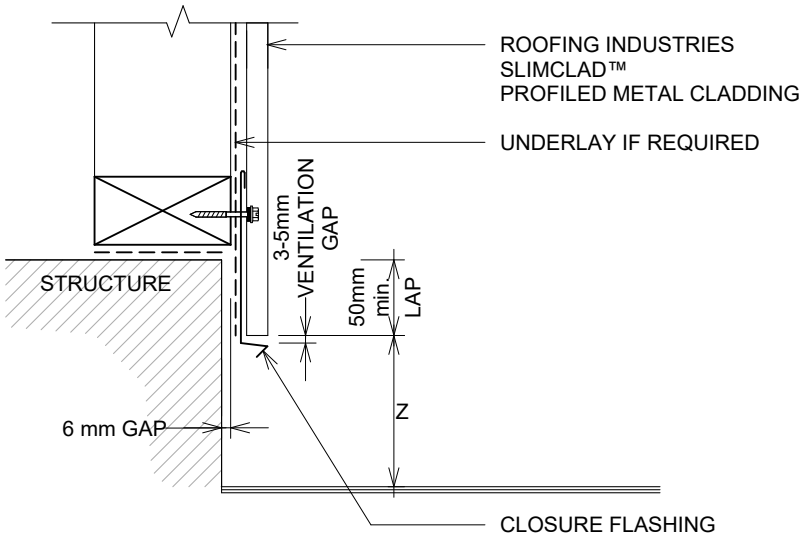


SET DOWN	MINIMUM
	Z
PAVED SURFACE	100mm
UNPAVED SURFACE	175mm

CLOSURE FLASHING OPTION 1



CLOSURE FLASHING OPTION 2



DETAIL ANNOTATION:

1. DPC MUST BE INSTALLED UNDER ALL SURFACES IN CONTACT WITH CONCRETE SUBSTRATE.
2. FOAM CLOSURE STRIP ONLY REQUIRED IN HIGH RISK SITUATIONS OF WIND BLOWN MOISTURE ENTERING.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
6. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
7. THE WALL CAVITY SHALL BE DRAINED AND VENTILATED TO THE EXTERIOR AT THE BASE OF WALL PANELS AND ABOVE OPENINGS. THIS SHALL BE ACHIEVED THROUGH THE USE OF OPEN PERPENDS, WHICH MUST BE FITTED WITH VERMIN-PROOFING WHERE ANY GAP EXCEEDS 13mm.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026


Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING JUNCTION FLASHING DIRECT FIX


Detail Number: RI-CSCWVDT-050B
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

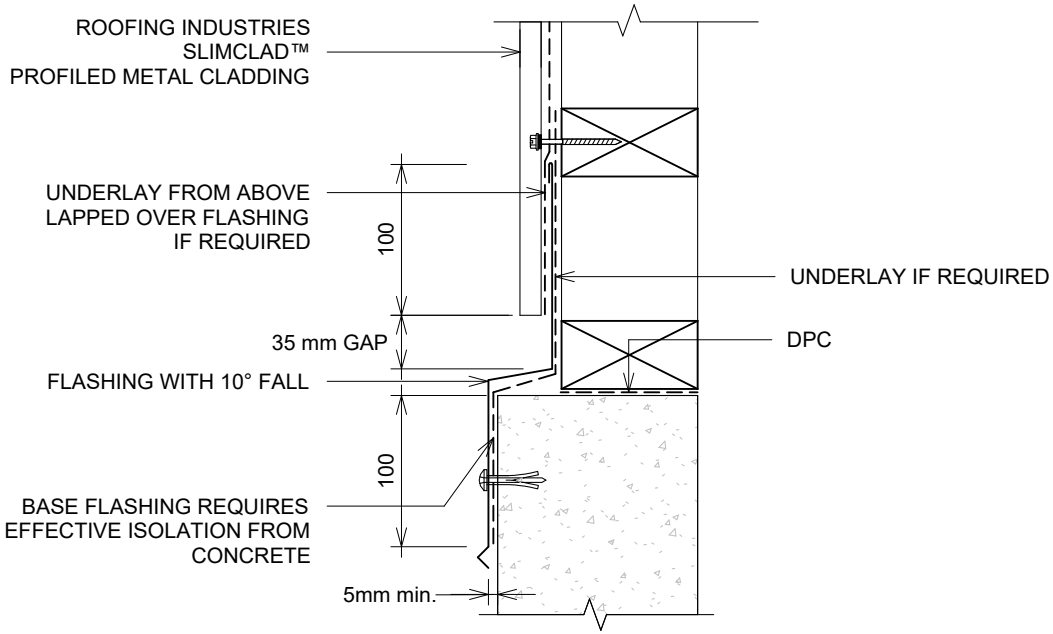

KICK-OUT OPTION at bottom edge of vertical flashing

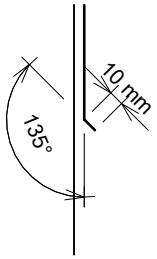

BIRDS BEAK at bottom edge of vertical flashing

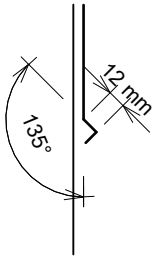

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
SOFFIT FLASHING DIRECT FIX

Detail Number: RI-CSCWVDT-060
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

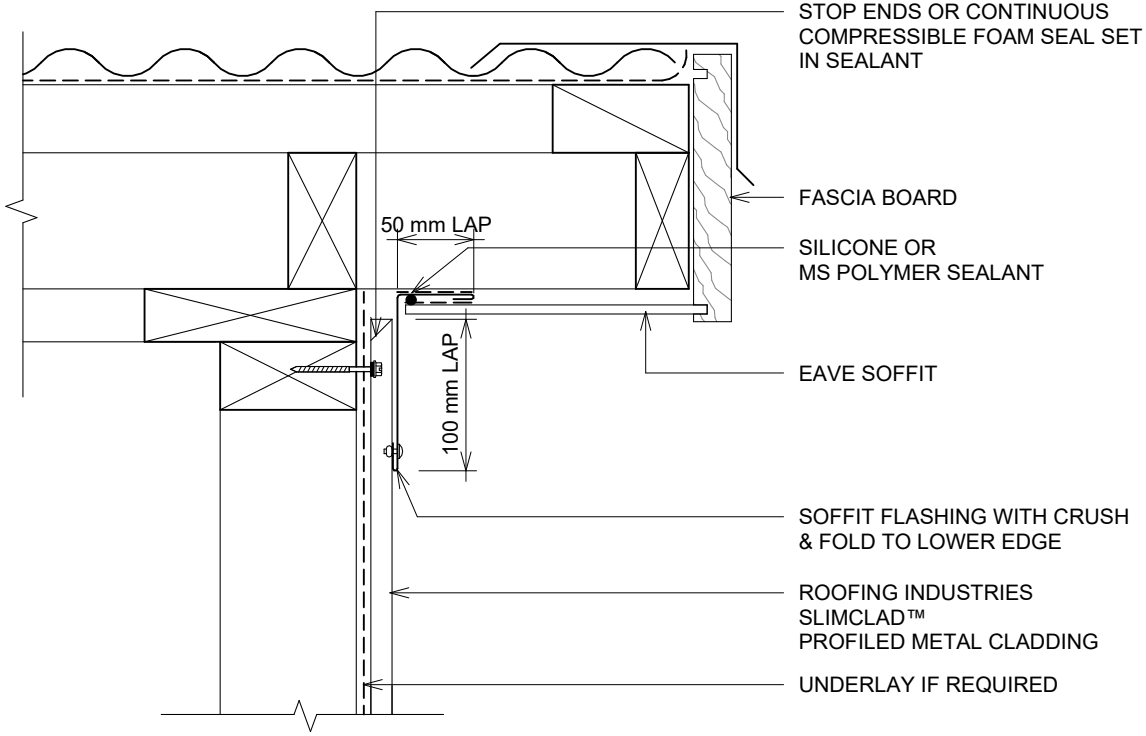

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
6. TIMBER CONTAINING CORROSIVE MATERIAL MUST BE SEPARATED FROM METAL CLADDING BY DPC, BUILDING WRAP, PVC OR PAINTING.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
SLOPING SOFFIT FLASHING DIRECT FIX

Detail Number: RI-CSCWVDT-070
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

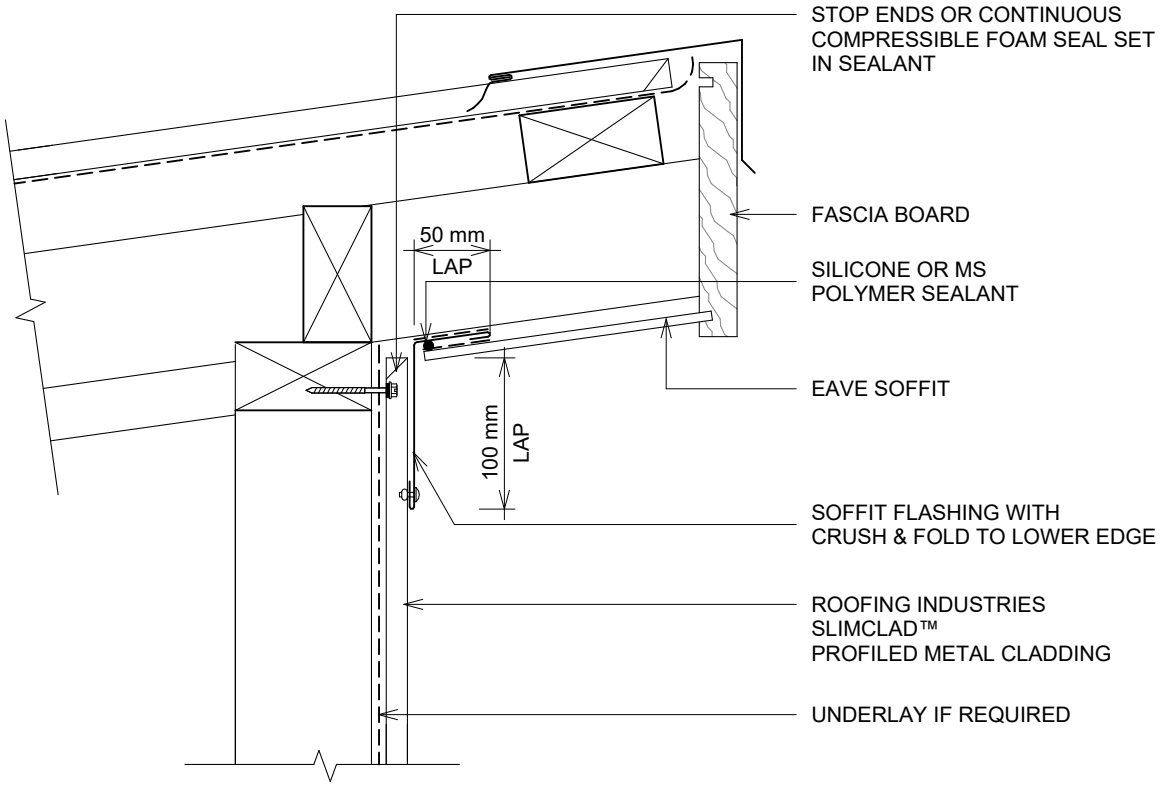

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
6. TIMBER CONTAINING CORROSIVE MATERIAL MUST BE SEPARATED FROM METAL CLADDING BY DPC, BUILDING WRAP, PVC OR PAINTING.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
VERTICAL BUTT JOINT DIRECT FIX WITH CLADDING CHANGE OPTION 1

Detail Number: RI-CSCWVDT-090
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

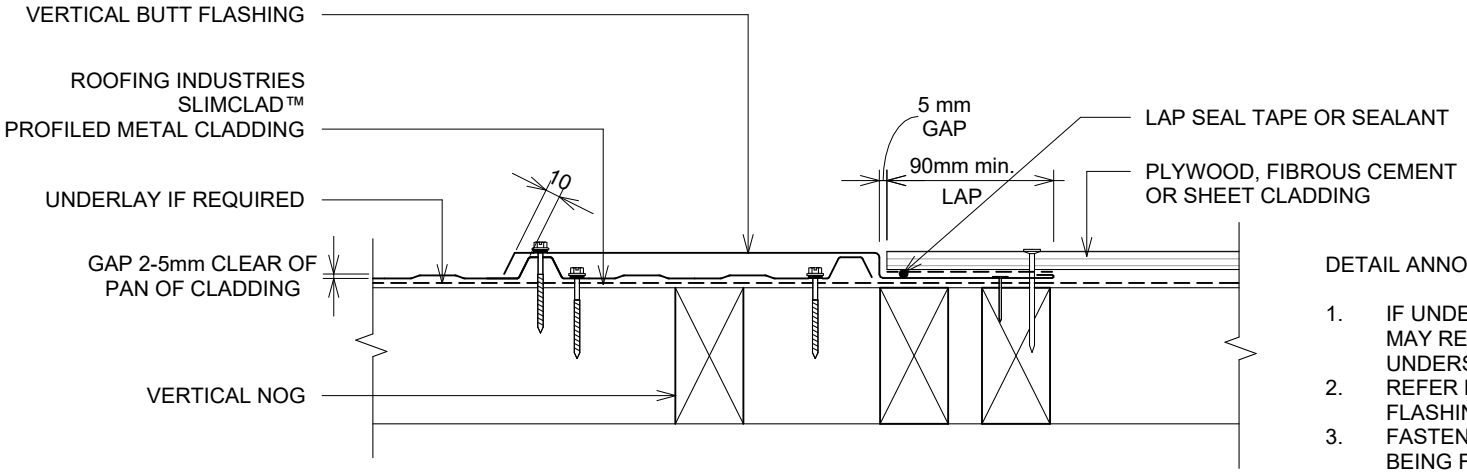

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
6. TIMBER CONTAINING CORROSIVE MATERIAL MUST BE SEPARATED FROM METAL CLADDING BY DPC, BUILDING WRAP, PVC OR PAINTING.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
VERTICAL BUTT JOINT DIRECT FIX WITH CLADDING CHANGE OPTION 2

Detail Number: RI-CSCWVDT-090B
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

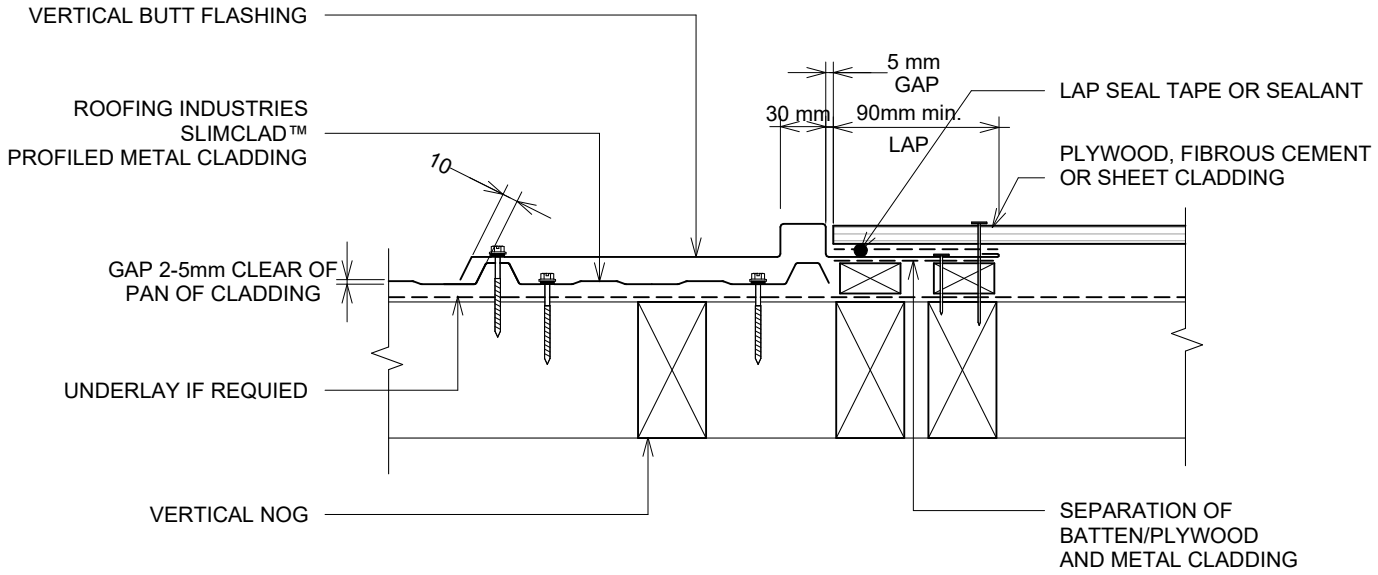

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: "THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO."
5. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
6. TIMBER CONTAINING CORROSIVE MATERIAL MUST BE SEPARATED FROM METAL CLADDING BY DPC, BUILDING WRAP, PVC OR PAINTING.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.


Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
HEAD FLASHING DIRECT FIX RECESSED WINDOW/DOOR ON FRAMING LINE

Detail Number: RI-CSCWVDT-120A
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

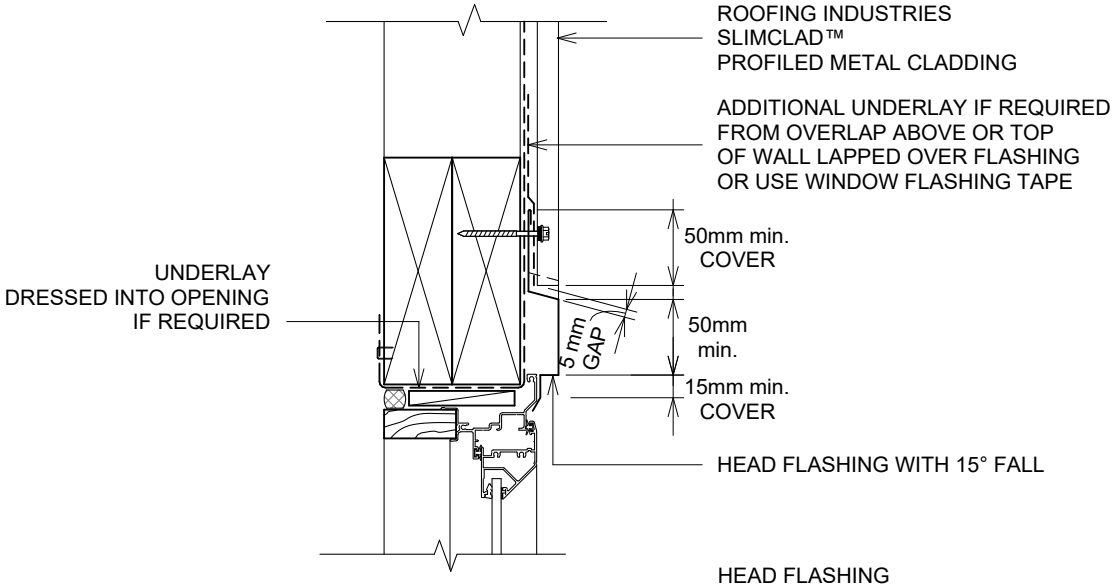

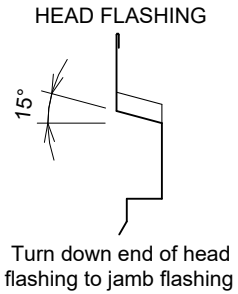

DETAIL ANNOTATION:

1. LIAISE WITH WINDOW MANUFACTURER PRIOR TO INSTALLATION.
2. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
3. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
4. JOINERY AND JOINERY FLASHING INTERFACE IS INDICATIVE ONLY. REFER TO SELECTED JOINERY MANUFACTURER'S RECOMMENDATIONS AND DETAILS.
5. THE WALL CAVITY SHALL BE DRAINED AND VENTILATED TO THE EXTERIOR AT THE BASE OF WALL PANELS AND ABOVE OPENINGS. THIS SHALL BE ACHIEVED THROUGH THE USE OF OPEN PERPENDS, WHICH MUST BE FITTED WITH VERMIN-PROOFING WHERE ANY GAP EXCEEDS 13mm.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
JAMB FLASHING DIRECT FIX RECESSED WINDOW/DOOR ON FRAMING LINE
OPTION 1

Detail Number: RI-CSCWVDT-120B
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

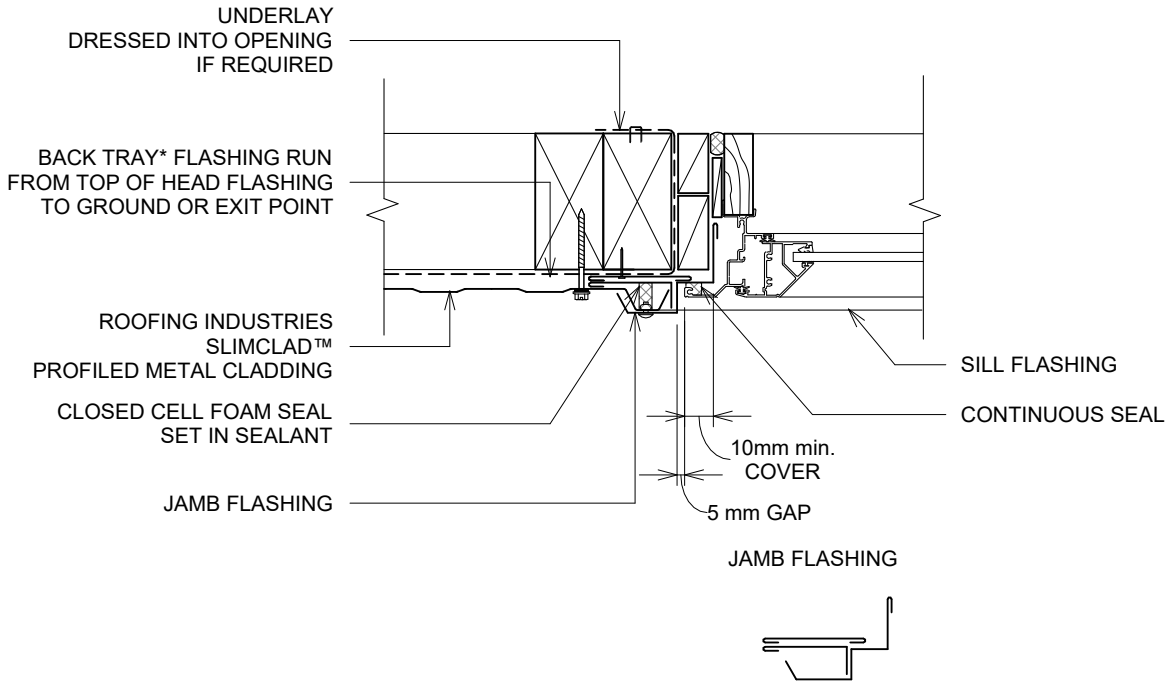

* Back tray size may require to increase to ensure coverage at ends of head flashiing.

DETAIL ANNOTATION:

1. LIAISE WITH WINDOW MANUFACTURER PRIOR TO INSTALLATION.
2. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
3. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
4. JOINERY AND JOINERY FLASHING INTERFACE IS INDICATIVE ONLY. REFER TO SELECTED JOINERY MANUFACTURER'S RECOMMENDATIONS AND DETAILS.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING JAMB FLASHING DIRECT FIX RECESSED WINDOW/DOOR ON FRAMING LINE OPTION 2

Detail Number: RI-CSCWVDT-120B-1
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

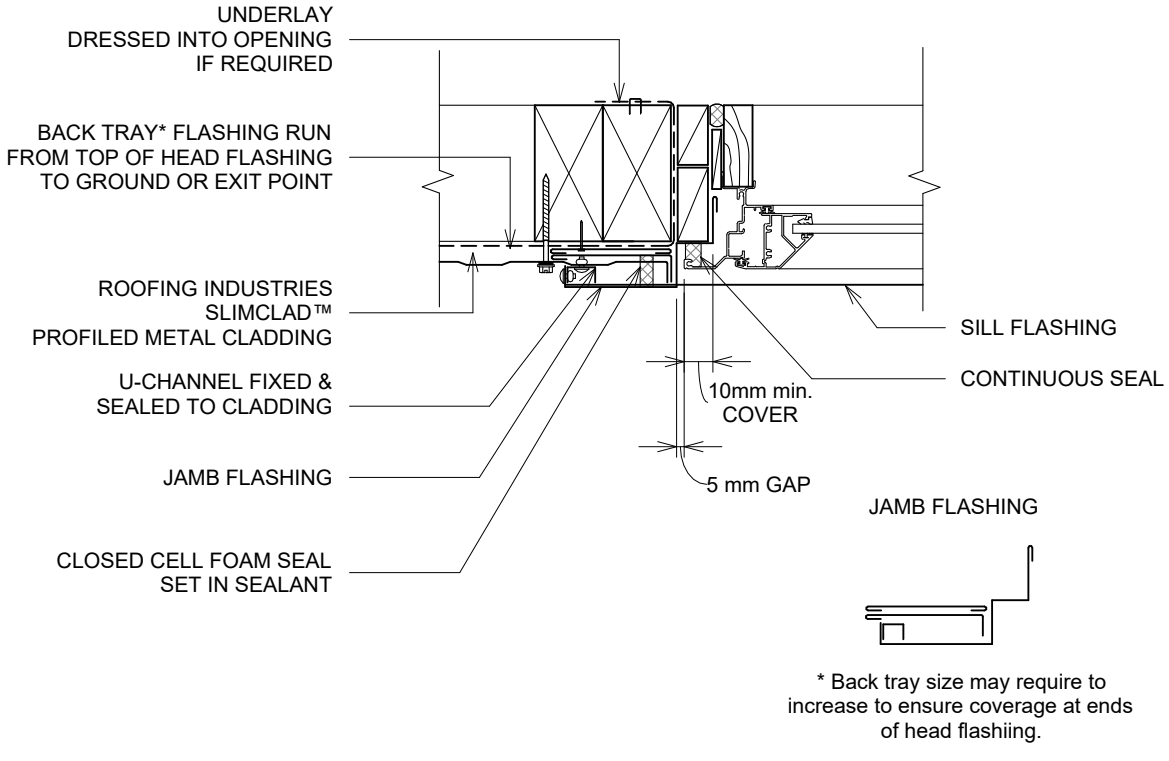

* Back tray size may require to increase to ensure coverage at ends of head flashiing.

DETAIL ANNOTATION:

1. LIAISE WITH WINDOW MANUFACTURER PRIOR TO INSTALLATION.
2. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
3. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
4. JOINERY AND JOINERY FLASHING INTERFACE IS INDICATIVE ONLY. REFER TO SELECTED JOINERY MANUFACTURER'S RECOMMENDATIONS AND DETAILS.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
SILL FLASHING DIRECT FIX RECESSED WINDOW/DOOR


Detail Number: RI-CSCWVDT-120C
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

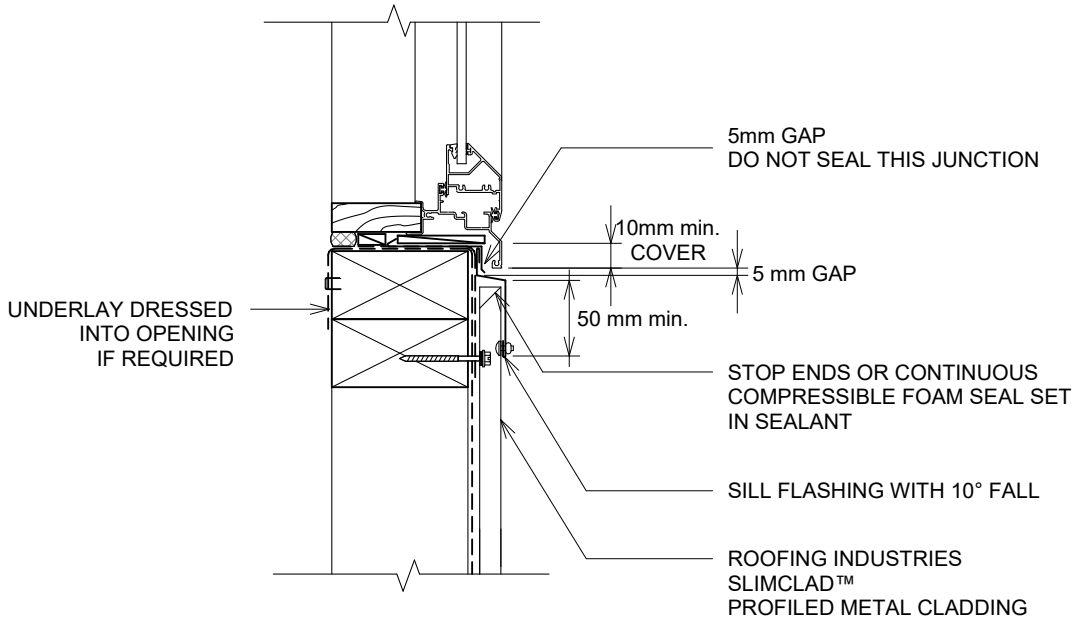

DETAIL ANNOTATION:

1. LIAISE WITH WINDOW MANUFACTURER PRIOR TO INSTALLATION.
2. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
3. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
4. JOINERY AND JOINERY FLASHING INTERFACE IS INDICATIVE ONLY. REFER TO SELECTED JOINERY MANUFACTURER'S RECOMMENDATIONS AND DETAILS.

SILL FLASHING

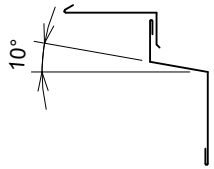

Sill flashings stop ended to receive jamb flashings.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING FLASHING LAYOUT DIRECT FIXED RECESSED WINDOW/DOOR ON FRAMING LINE OPTION 1

Detail Number: RI-CSCWVDT-120D
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

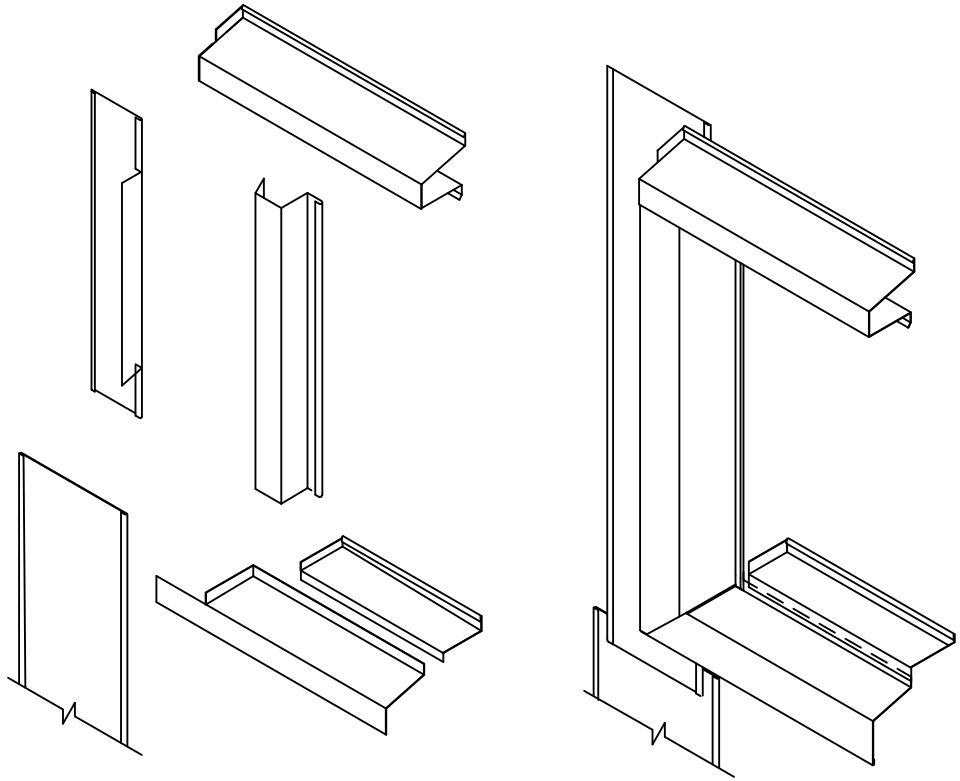

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING FLASHING LAYOUT DIRECT FIXED RECESSED WINDOW/DOOR ON FRAMING LINE OPTION 2

Detail Number: RI-CSCWVDT-120D-1
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

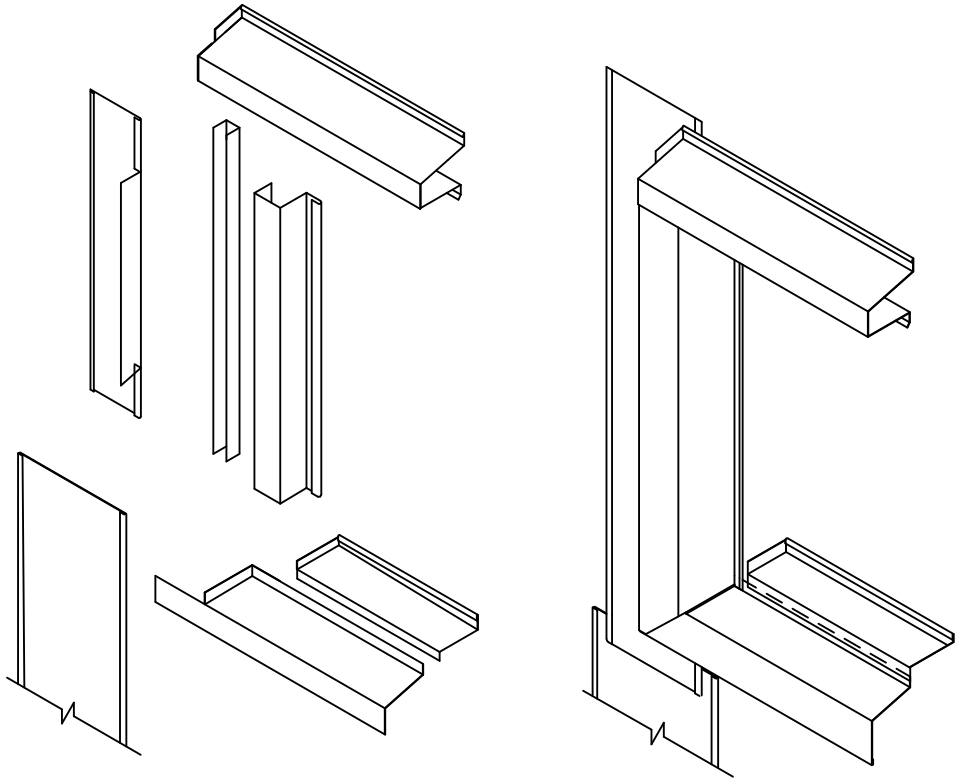

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
METER BOX HEAD FLASHING DIRECT FIX

Detail Number: RI-CSCWVDT-150
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

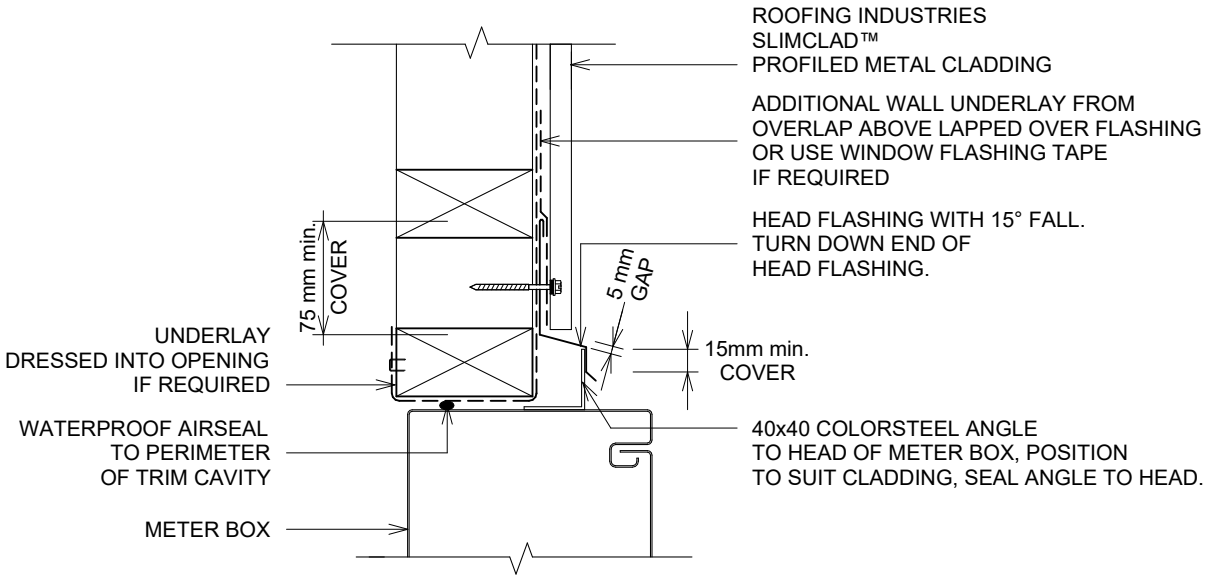

METER BOX HEAD FLASHING



DETAIL ANNOTATION:

1. REFER TO E2/AS1 FOR GENERAL WINDOW OPENING FOR WRAPPING OF FRAMED OPENING PRIOR TO WINDOW INSTALLATION
2. A min. OF 8mm EFFECTIVE COVER AT SILLS SHALL BE PERMITTED WHERE NECESSARY TO ALLOW FOR TOLERANCES.
3. WINDOW PROFILE TO BE SELECTED TO ACHIEVE COVER SHOWN IN DETAILS.
   (SOAKER FLASHING MAY BE INCREASED TO ENSURE COVERAGE AT ENDS OF THE HEAD FLASHINGS. TURN DOWN END OF HEAD FLASHING. DIMENSIONS ARE INDICATIVE.)
4. WHERE SUPPORT BRACKETS ARE REQUIRED BY THE WINDOW MANUFACTURER TO CARRY THE FRAME AND GLAZING LOADS THEY MUST BE SUPPLIED AS AN INTEGRAL PART OF THE WINDOW MANUFACTURER'S RECOMMENDATIONS.
5. LIAISE WITH WINDOW MANUFACTURER PRIOR TO INSTALLATION.
6. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
7. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
8. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
9. JOINERY AND JOINERY FLASHING INTERFACE IS INDICATIVE ONLY. REFER TO SELECTED JOINERY MANUFACTURER'S RECOMMENDATIONS AND DETAILS.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026


Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
METER BOX SIDE FLASHING DIRECT FIX

Detail Number: RI-CSCWVDT-160
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

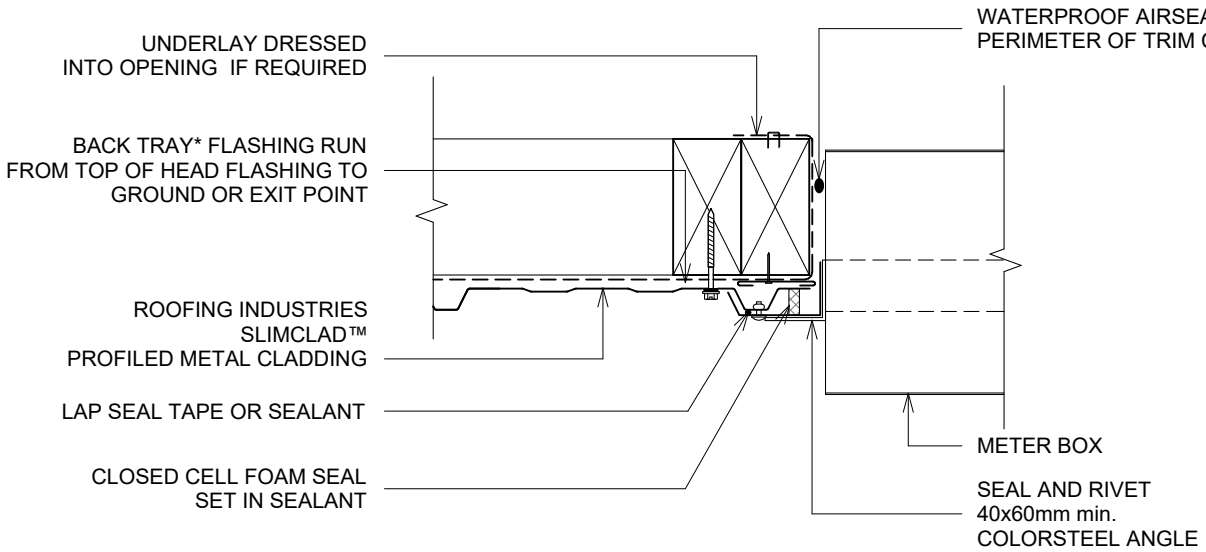

METER BOX SIDE FLASHING



* Back tray size may require to increase to ensure coverage at ends of head flashing.

DETAIL ANNOTATION:

1. REFER TO E2/AS1 FOR GENERAL WINDOW OPENING FOR WRAPPING OF FRAMED OPENING PRIOR TO WINDOW INSTALLATION
2. A min. OF 8mm EFFECTIVE COVER AT SILLS SHALL BE PERMITTED WHERE NECESSARY TO ALLOW FOR TOLERANCES.
3. WINDOW PROFILE TO BE SELECTED TO ACHIEVE COVER SHOWN IN DETAILS.
   (SOAKER FLASHING MAY BE INCREASED TO ENSURE COVERAGE AT ENDS OF THE HEAD FLASHINGS. TURN DOWN END OF HEAD FLASHING. DIMENSIONS ARE INDICATIVE.)
4. WHERE SUPPORT BRACKETS ARE REQUIRED BY THE WINDOW MANUFACTURER TO CARRY THE FRAME AND GLAZING LOADS THEY MUST BE SUPPLIED AS AN INTEGRAL PART OF THE WINDOW MANUFACTURER'S RECOMMENDATIONS.
5. LIAISE WITH WINDOW MANUFACTURER PRIOR TO INSTALLATION.
6. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
7. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
8. REFER TO UNDERLAY MANUFACTURERS REQUIREMENTS FOR INSTALLATION RECOMMENDATIONS.
9. JOINERY AND JOINERY FLASHING INTERFACE IS INDICATIVE ONLY. REFER TO SELECTED JOINERY MANUFACTURER'S RECOMMENDATIONS AND DETAILS.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
METER BOX BASE FLASHING DIRECT FIX

Detail Number: RI-CSCWVDT-170
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

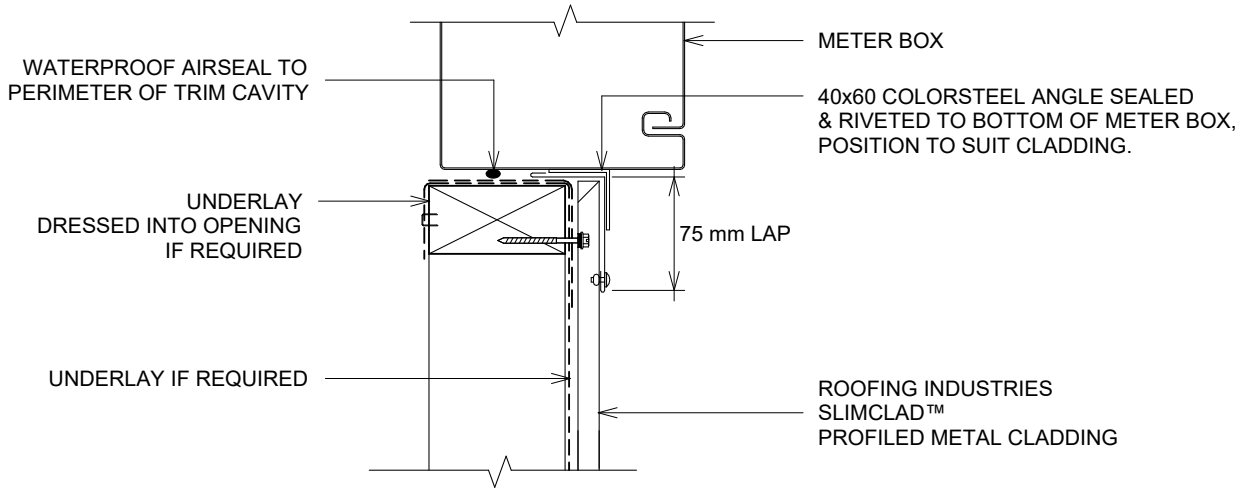

DETAIL ANNOTATION:

1. REFER TO E2/AS1 FOR GENERAL METERBOX AND SIMILAR PENETRATIONS / OPENINGS.
2. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED
3. ALTERNATIVELY REFER TO E2/AS1 FOR FLASHING COVER GUIDANCE

METER BOX BASE FLASHING



GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
ROLLER DOOR HEAD

Detail Number: RI-CSCWVDT-190A
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

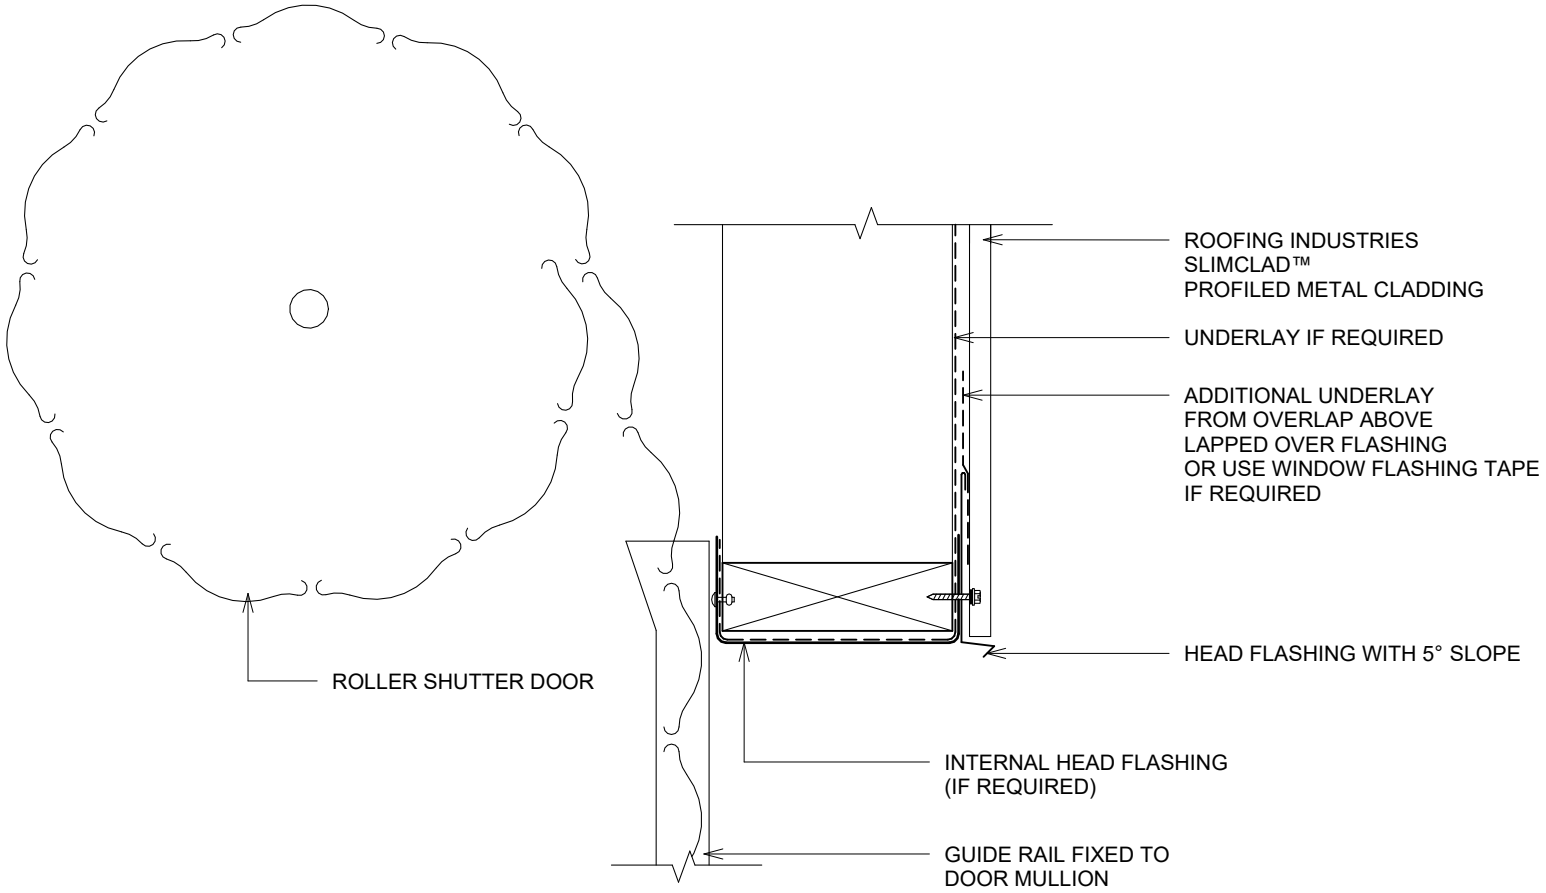

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER TO NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: “THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO”.
5. THE WALL CAVITY SHALL BE DRAINED AND VENTILATED TO THE EXTERIOR AT THE BASE OF WALL PANELS AND ABOVE OPENINGS. THIS SHALL BE ACHIEVED THROUGH THE USE OF OPEN PERPENDS, WHICH MUST BE FITTED WITH VERMIN-PROOFING WHERE ANY GAP EXCEEDS 13mm.

GENERAL NOTES:


- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz

COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
ROLLER DOOR JAMB

Detail Number: RI-CSCWVDT-190B
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

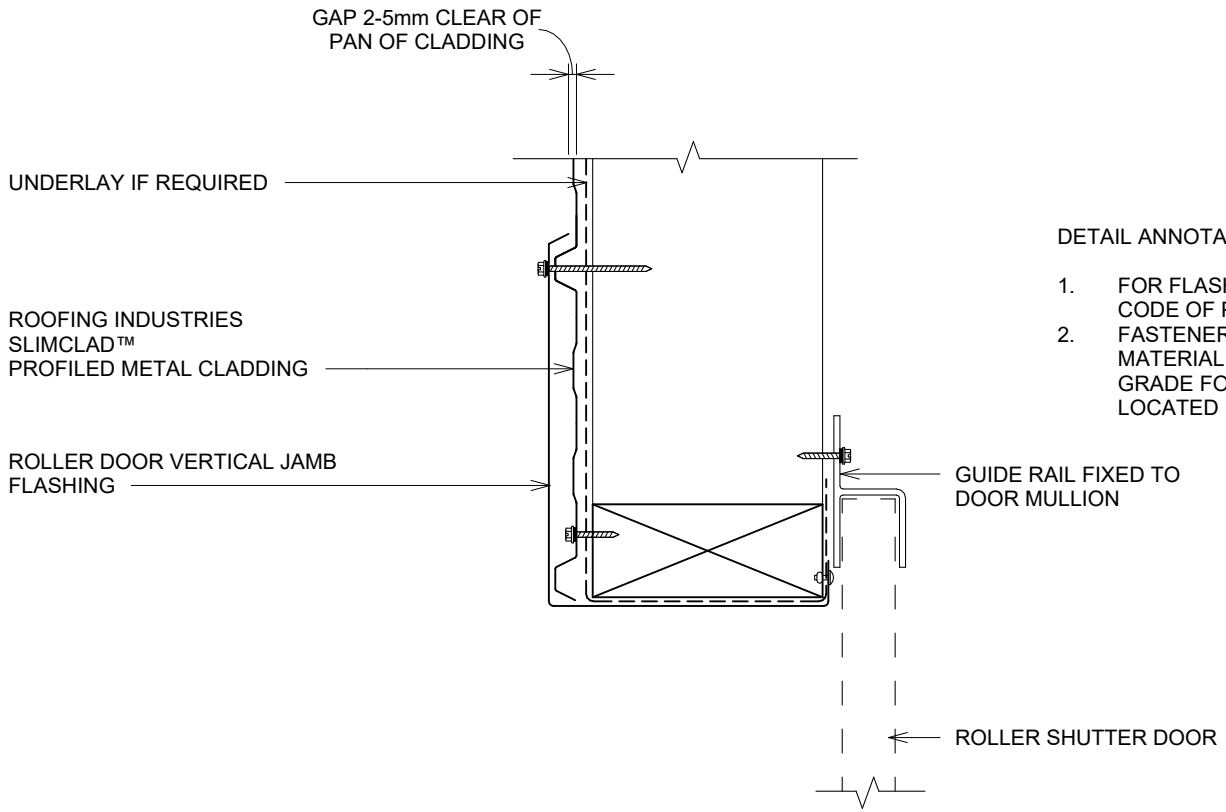

DETAIL ANNOTATION:

1. FOR FLASHING COVER REFER TO NZMRM CODE OF PRACTICE
2. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED

GENERAL NOTES:

- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz