
COMMERCIAL SLIMCLAD™ VERTICAL CLADDING ON TIMBER FRAMING
ROLLER DOOR HEAD

Detail Number: RI-CSCWVDT-190A
Date drawn: 25/08/2026
Scale: 1 : 5@ A4

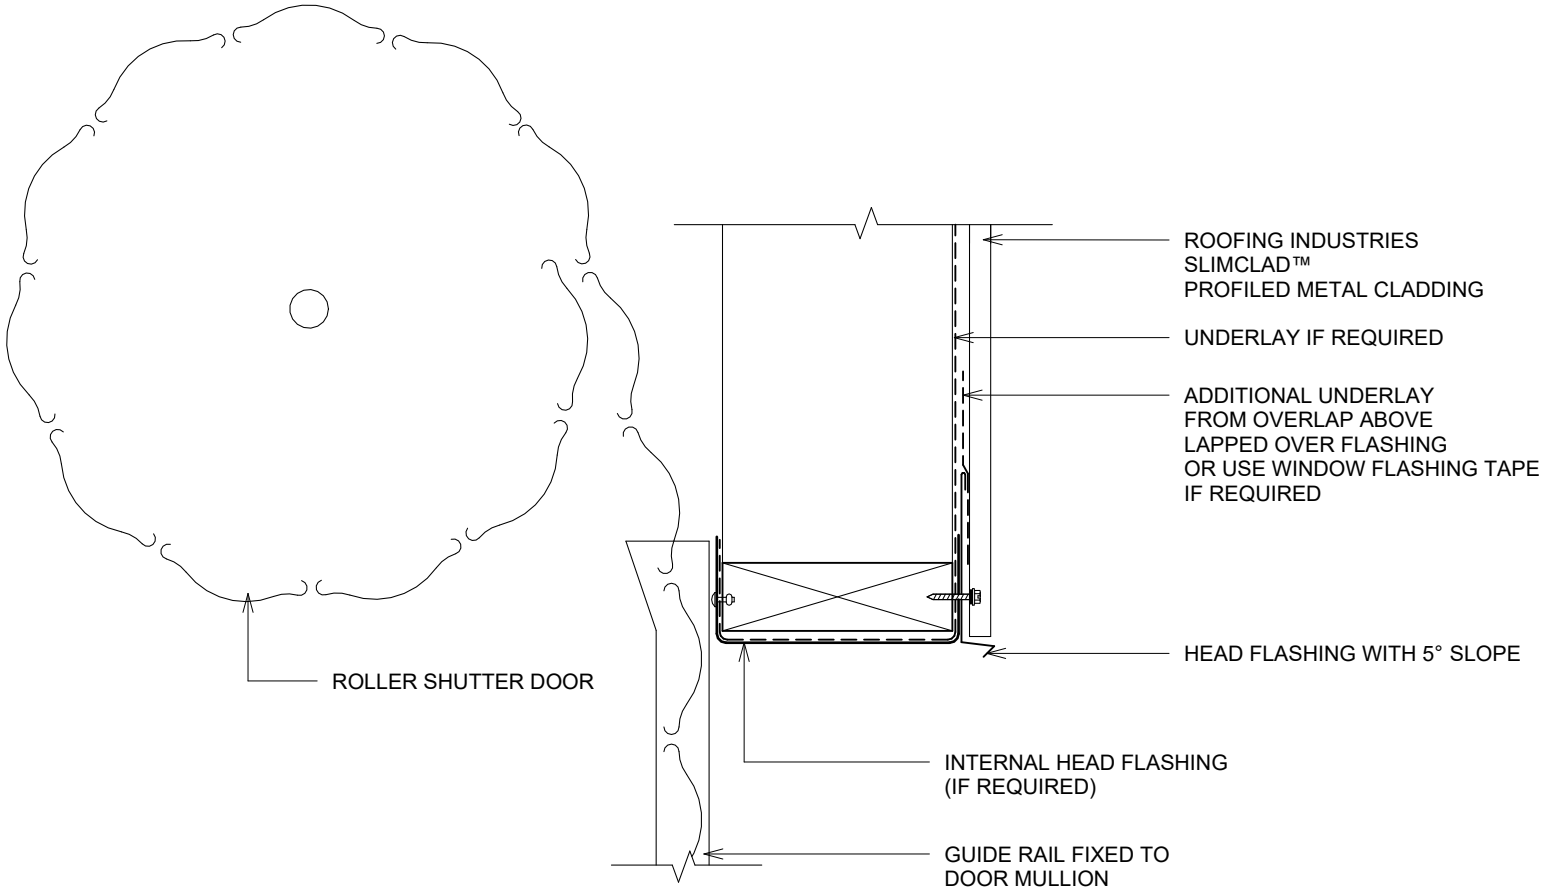

DETAIL ANNOTATION:

1. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20MM min. GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.
2. REFER TO NZMRM CODE OF PRACTICE FOR FLASHING COVER.
3. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED.
4. FIXINGS: “THE DESIGNER NEEDS TO CHECK THE SCREW MANUFACTURERS TECHNICAL DATA OF THE SELECTED SCREW TYPE FOR THE DESIGN LOAD AND THE MATERIAL BEING FASTENED TO”.
5. THE WALL CAVITY SHALL BE DRAINED AND VENTILATED TO THE EXTERIOR AT THE BASE OF WALL PANELS AND ABOVE OPENINGS. THIS SHALL BE ACHIEVED THROUGH THE USE OF OPEN PERPENDS, WHICH MUST BE FITTED WITH VERMIN-PROOFING WHERE ANY GAP EXCEEDS 13mm.

GENERAL NOTES:

- These details to be read with Roofing Industries SLIMCLAD™ REVERSE RUN Product Technical Statement and Installation Guide.
- The building designer is ultimately responsible to ensure that the details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure (including cavity battens if used) are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1 where applicable.
- Details are for steel-based materials, other substrates may require some changes.
- All dimensions are nominal.
- Fixing: The designer needs to check the screw manufacturers technical data of the selected screw type for the design wind load and the material being fastened to.

Copyright detail © 2026

Roofing Industries
roof.co.nz