




## FRAMELESS BALUSTRADE SYSTEMS

### Infinity BA124 Typical Installation Examples

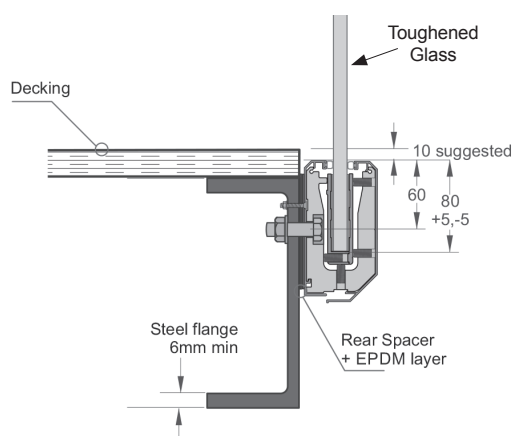


#### Steel Structure - M12 Bolt

##### Occupancy

A & C3 Residential 12mm Glass

B, E or C3 Commercial 15mm Glass

- 1 - A Rubber, EPDM or Foam Tape layer must be installed between the Clamp and Steel.

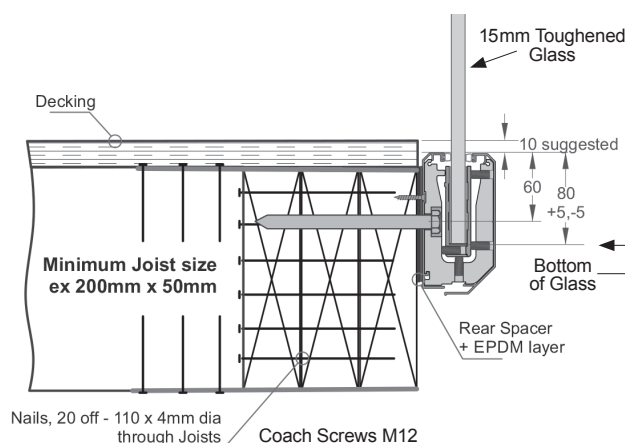


#### Timber Deck - M12 Coach Screw

##### Occupancy

B, E or C3 Commercial

- 1 - Coach screws 120mm min thread engagement into joists.
- 2 - Bond all coach screws with SIKa Supergrip to full depth.
- 3 - A Rubber, EPDM or Foam Tape layer must be installed between the Clamp and Timber.

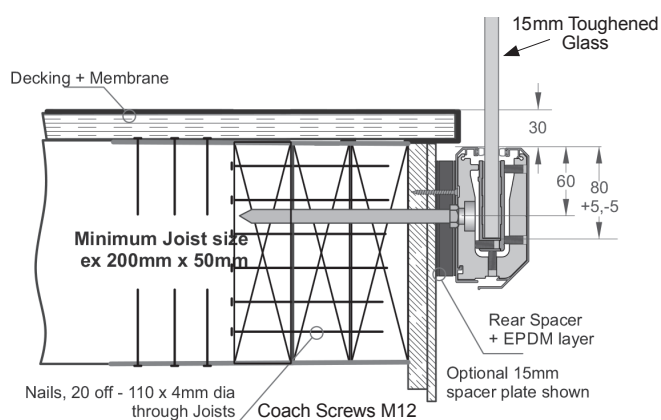

#### Waterproof Timber Deck

##### Occupancy

B, E or C3 Commercial

- 1 - Coach screws 120mm min thread engagement into joists.
- 2 - Bond all coach screws with SIKa Supergrip to full depth.
- 3 - A Rubber, EPDM or Foam Tape layer must be installed between the Clamp and Timber.

**For full installation details please refer to Infinity BA124 System Manual and Producer Statement.  
 For protection against a fall, refer building code and / or any proprietary design document.**

Ex Auckland Store. All prices exclude G.S.T.