



## Application Guide

### FRAMELESS COMMERCIAL HARDWARE

## Patch Fitting Application Guide

### Fin Requirements


#### For 10mm glass

As a guide, when the height of the overpanel (A) plus the width of the side panel (B) exceeds a total of 1200mm a support fin is required. A fin is not necessary if either A or B are less than 400mm.

#### For 12mm glass

As a guide, when the height of the overpanel (A) plus the width of the side panel (B) exceeds a total of 1500mm a support fin is required. A fin is not necessary if either A or B are less than 500mm.

Fins are required to stiffen an assembly from the door action and windloads.

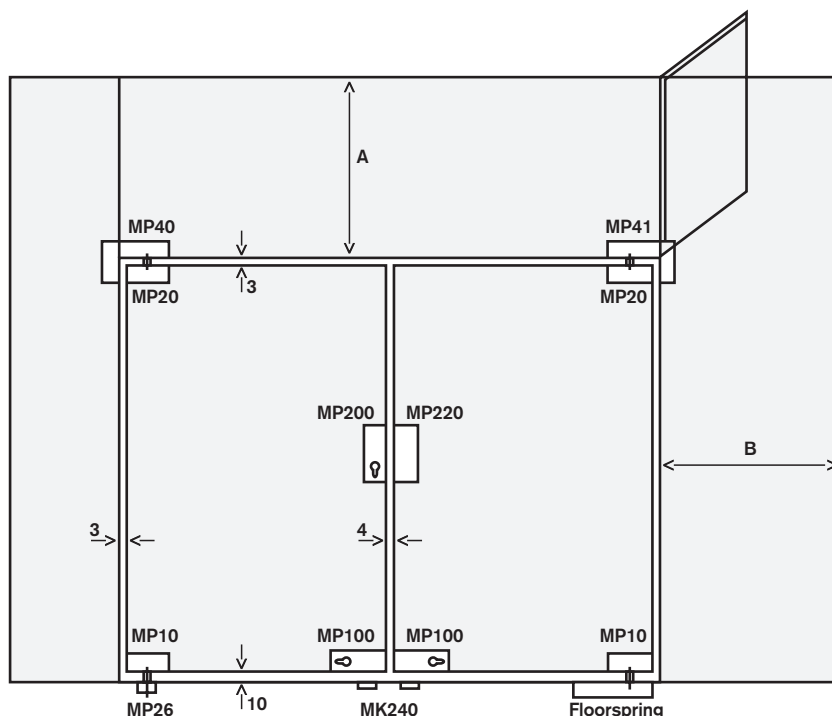

### Doors

#### Maximum recommended sizes

##### For 10mm glass

Doors with patch fittings 2400h x 1000w

Doors with door rails 2500h x 1100w


##### For 12mm glass

Doors with patch fittings 2700h x 1100w

Doors with door rails 2700h x 1200w

#### Door Clearances

Recommended clearances are as detailed on drawings

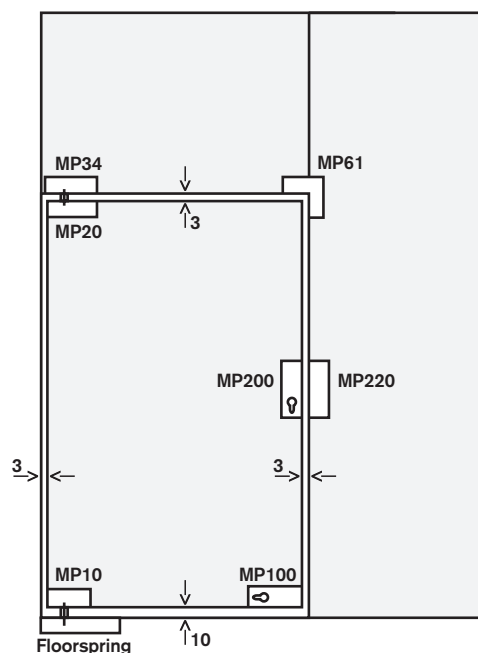

Ex Auckland Store. All prices exclude G.S.T.