




Buzon PH5000 slope correction 0 - 5%
add to DPH000 / DPH100 / DPH200
adds 10mm of height




Buzon Batten Holder
to support 65mm wide joist




A17000 Tile Tab 4.5mm spacer
Add to each pedestal if supporting Tile or Pavers




Buzon DPH000 17mm




Buzon DPH100 28mm

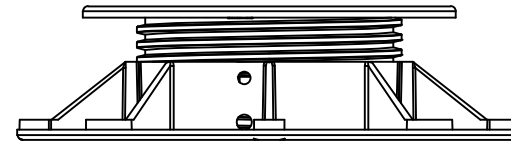


Buzon DPH200 35 - 53mm

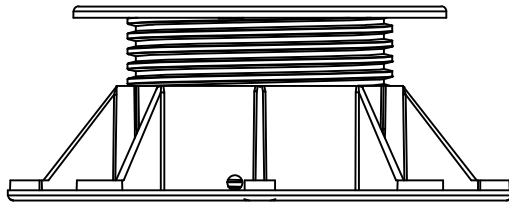


Buzon DPH300 50 - 78mm

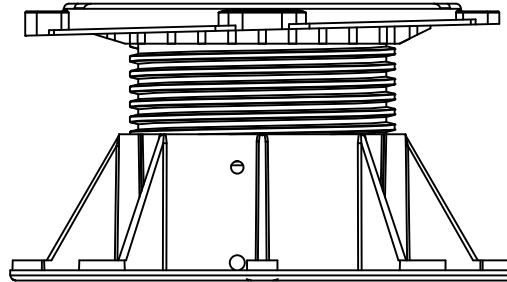


Buzon DPH400 74 - 110mm

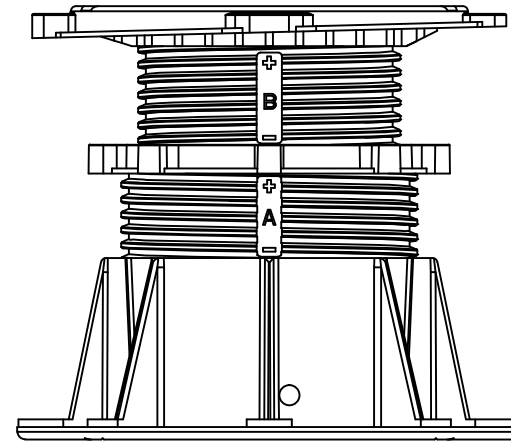

Buzon DPH500 100 - 170mm

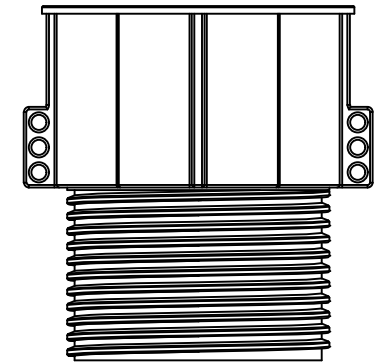

Buzon Coupler / extension
adds 120mm height

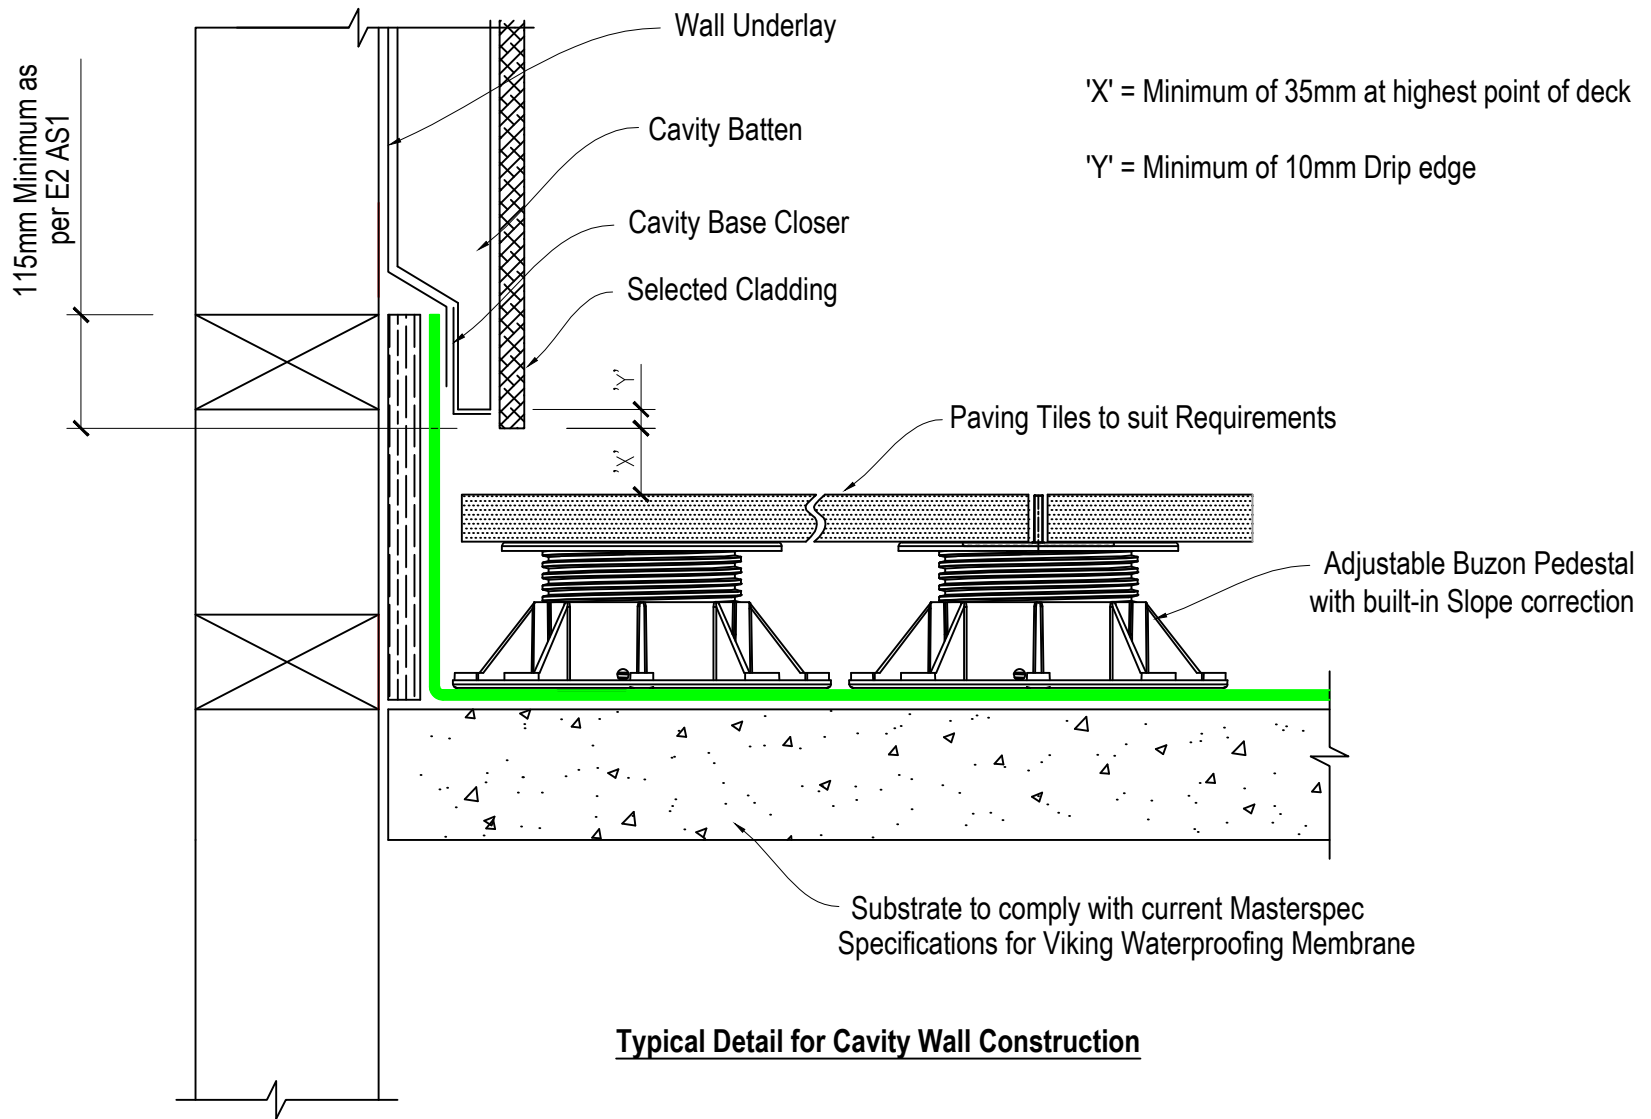


DRAWING TITLE
Viking Buzon Typical detail for Cavity Wall BZ01

NOTES:
Substrate Indicative Only

DRAWING STATUS			
INFORMATION ONLY			
Not to Scale	DATE 13/06/2016	Detail Ref.	ISSUE
DRAWN	Viking	BZ01	A

'Z' = Variable according to wind zoning.


Please refer to table 7 page 39 E2/AS1

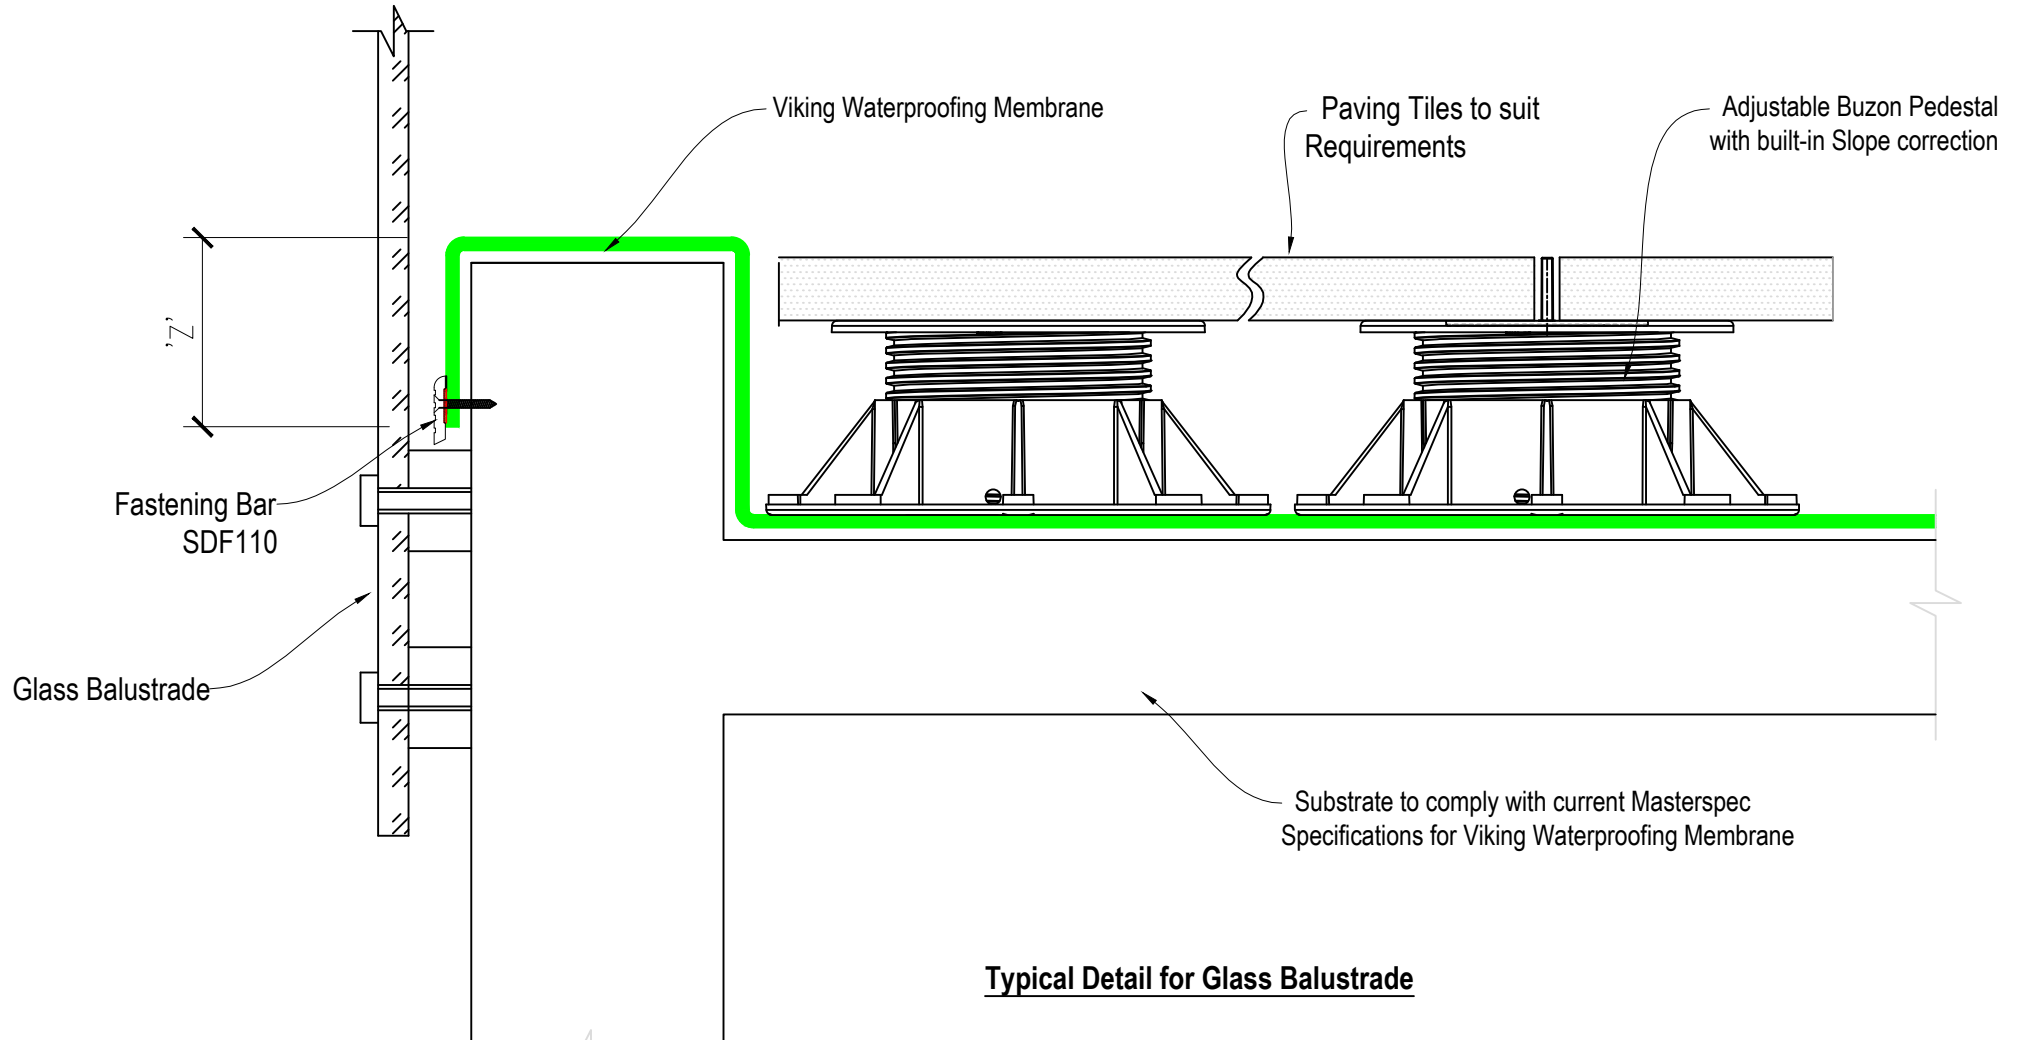


DRAWING TITLE
Viking Buzon Typical detail for Glass Balustrade BZ02

NOTES:
Substrate Indicative Only

DRAWING STATUS			
INFORMATION ONLY			
Not to Scale	DATE 13/06/2016	Detail Ref.	ISSUE
DRAWN	Viking	BZ02	A

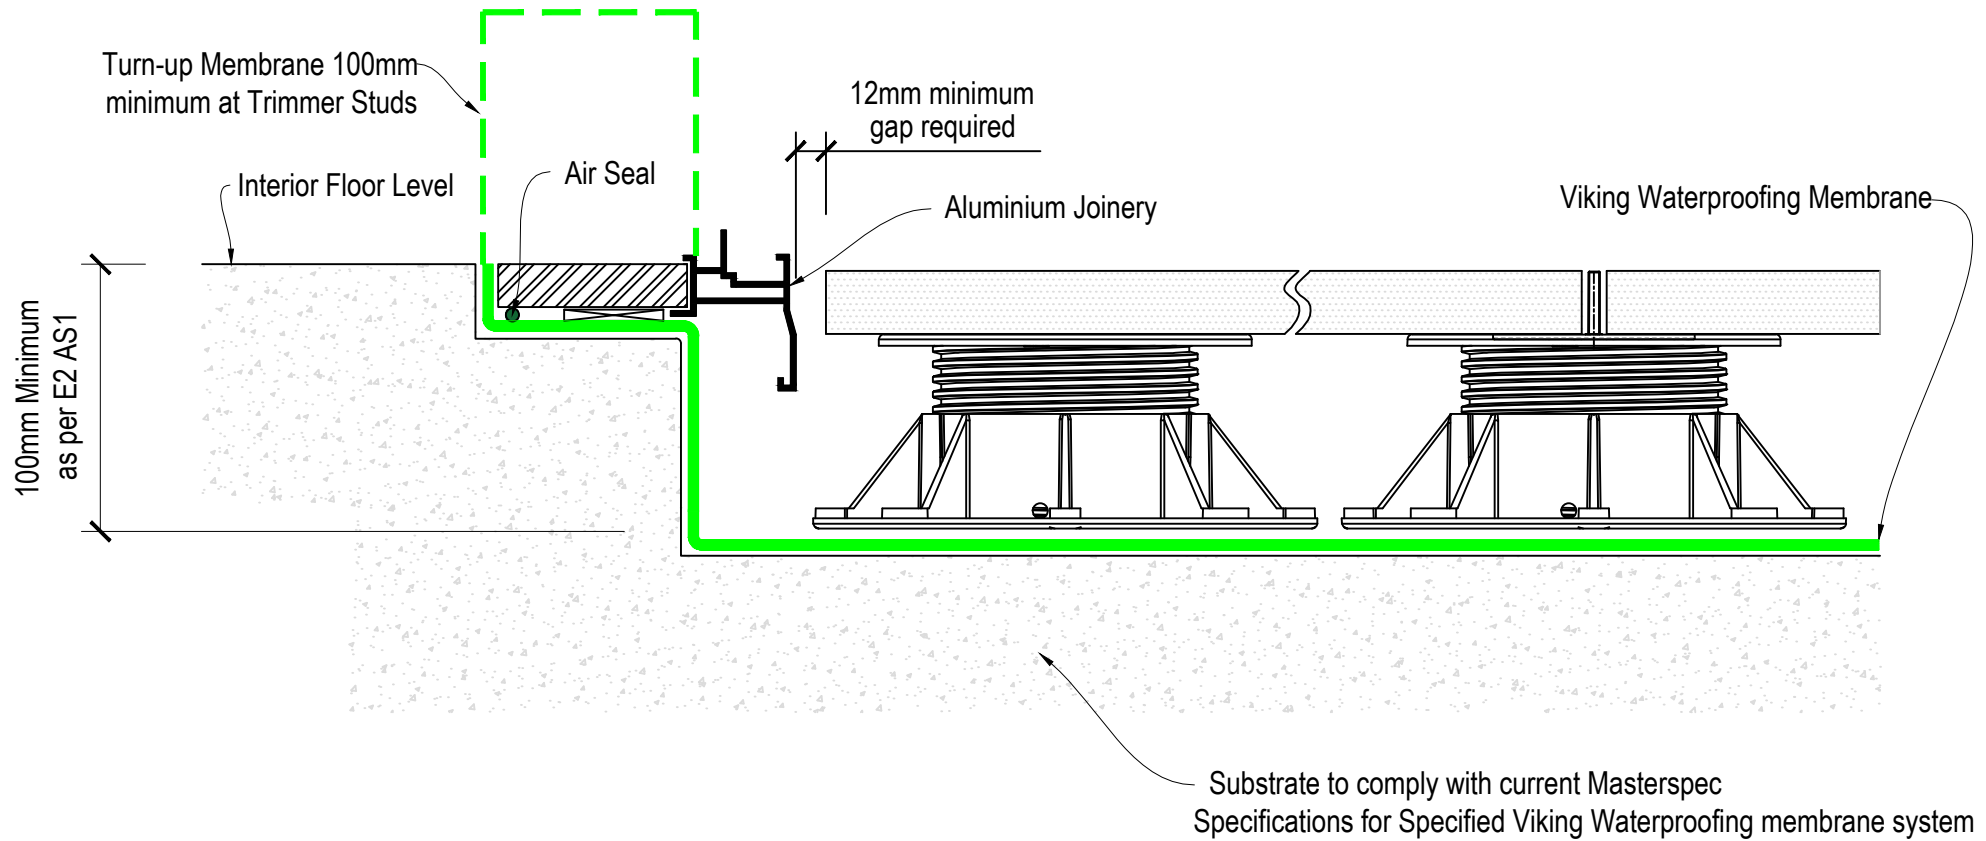

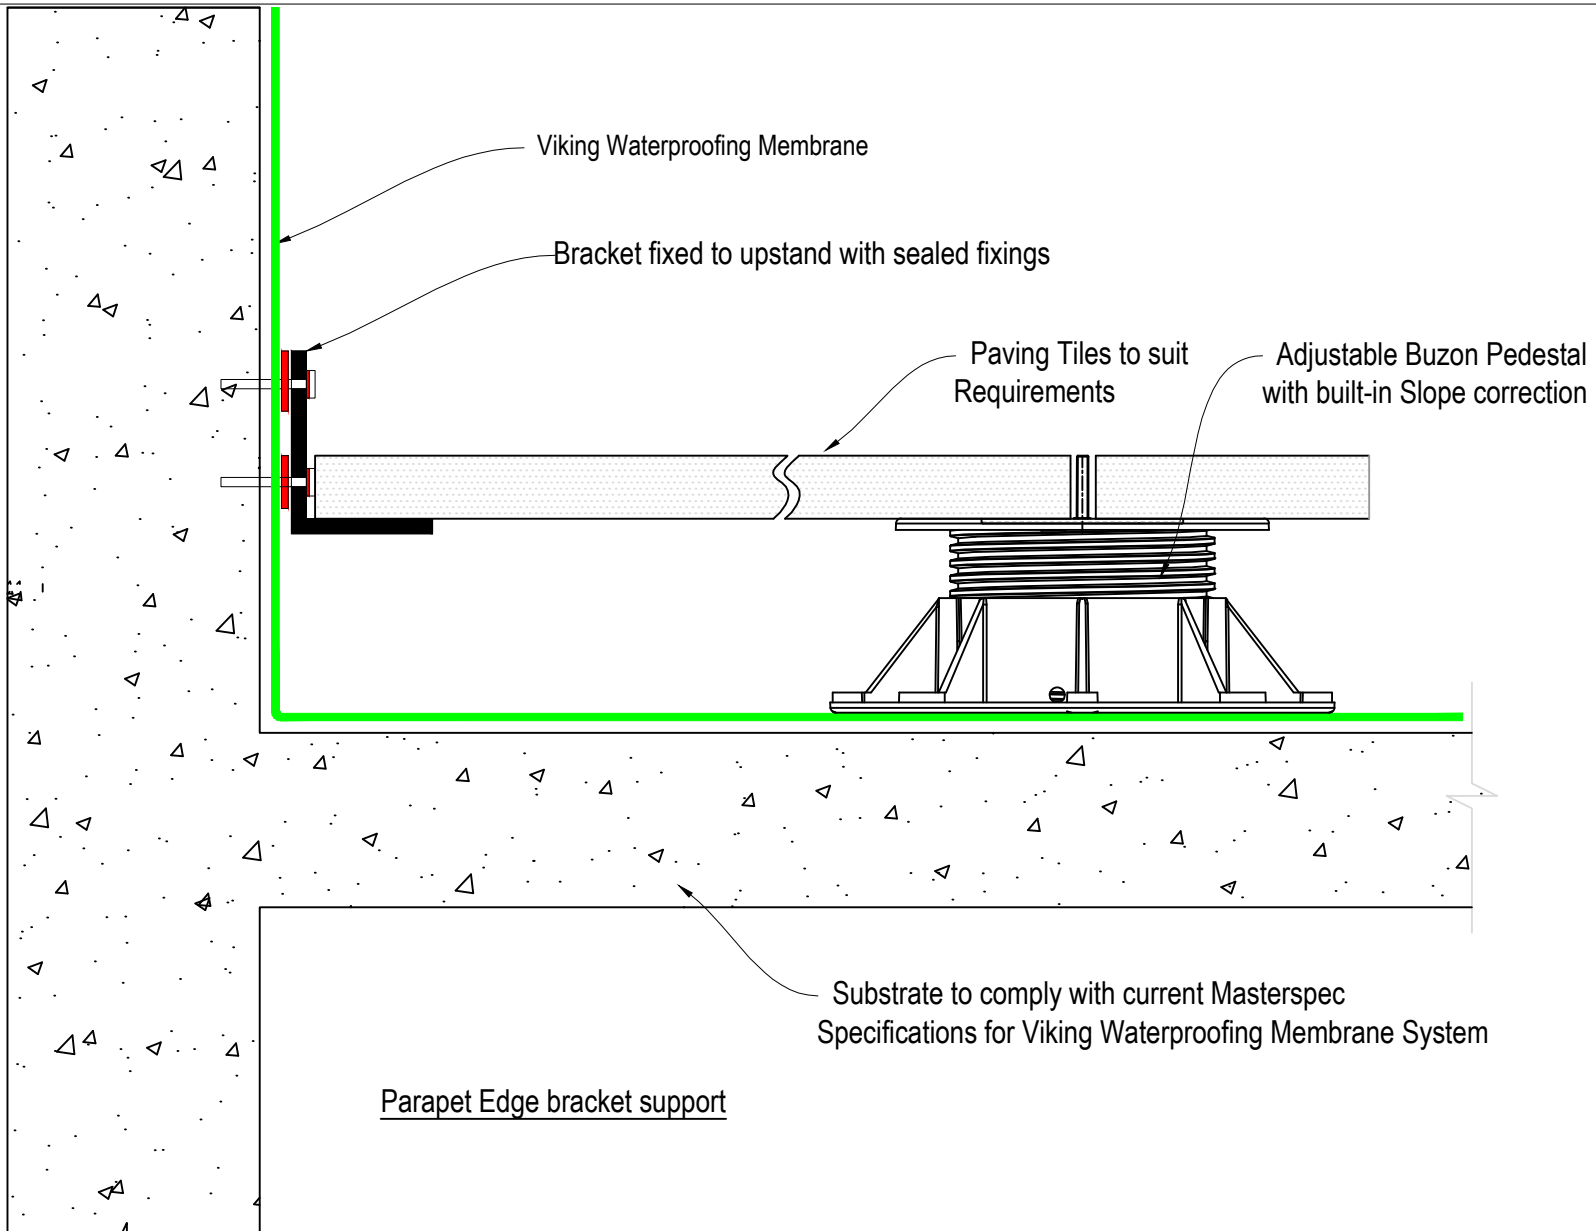

DRAWING TITLE
Viking Buzon Parapet bracket support

NOTES:
Substrate Indicative Only

DRAWING STATUS			
INFORMATION ONLY			
Not to Scale	DATE 22/03/2017	Detail Ref.	ISSUE
DRAWN	Viking	BZ04	A