
## COMMERCIAL CORRUGATE WALL CLADDING WINDOW / DOOR SILL FLASHING - VERTICAL CLADDING

Detail Number: RI-CCW012C

Date drawn: 01/08/2019

Scale: 1:5@ A4

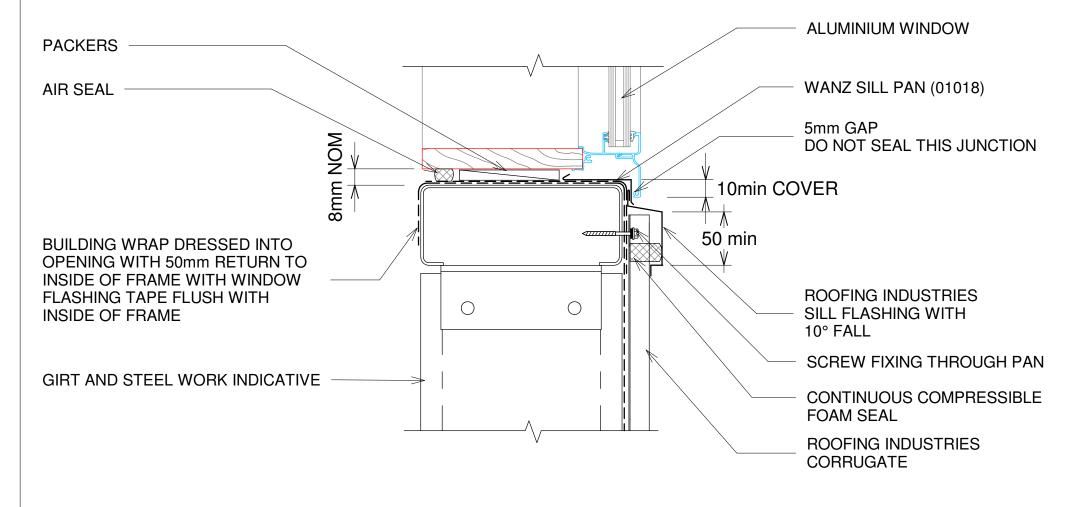


## **GENERAL NOTES:**

- REFER TO E2/AS1 FOR GENERAL WINDOW OPENING FOR WRAPPING OF FRAMED OPENING PRIOR TO WINDOW INSTALLATION.
- 2. A MIN. OF 8mm EFFECTIVE COVER AT SILLS SHALL BE PERMITTED WHERE NECESSARY TO ALLOW FOR TOLERANCES.
- WINDOW PROFILE TO BE SELECTED TO ACHIEVE COVER SHOWN IN DETAILS.
- WHERE SUPPORT BRACKETS ARE REQUIRED 4. BY THE WINDOW MANUFACTURER TO CARRY THE FRAME AND GLAZING LOADS THEY MUST BE SUPPLIED AS AN INTEGRAL PART OF THE WINDOW MANUFACTURER'S RECOMMENDATIONS.
- LIASE WITH WINDOW MANUFACTURER PRIOR 5. TO INSTALLATION.
- 6. IF UNDERLAY USED AS A VAPOUR BARRIER IT MAY REQUIRE A 20mm MIN AIR GAP BETWEEN THE UNDERSIDE OF THE ROOFING & UNDERLAY.

**REFERENCE FLASHINGS:** NZ METAL ROOF AND WALL CLADDING CODE OF PRACTICE NZMRM AND E2/AS1. DIMENSIONS ARE INDICATIVE ONLY

Sill flashings stop ended to receive jamb flashings (Dimensions are indicative only & show minimum lap covers)



## NOTES:

- These details are generally in compliance with E2/AS1, where applicable to profile, and the NZ Metal Roof & Wall Cladding Code of Practice and in some cases specific details by 'Roofing Industries'.
- The building designer is ultimately responsible to ensure that details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure are indicative only and are the responsibility of the building designer.
- Thermal break or cavity battens may be required in some circumstances.
- Underlay selection and building wrap types are the responsibility of the designer. Alternative support to galvanised netting should be used in severe coastal environments including when aluminium is used.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof & Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS1.
- Where necessary, adjust drawings for purlin or cavity battens.
- Details are for steel based materials, other substrate may require some changes.

Copyright detail (C)

