




# SEAMLESS FLOORING SYSTEMS

## Subfloor Preparation And Installation Of Sheet Vinyl/ Luxury Vinyl Tile (LVT) Over Composite Timber Subfloors\*

- 1 Composite Timber Subfloor: Particle Board/Plywood/ Strandfloor/Xlam/etc
- 2 Trim-Tec Hardboard 5.5mm thickness or Bamply 5.2mm plywood or
- 3 Uzin PE650 Flexible Primer with 3mm thickness of Uzin NC196 Fibre-reinforced levelling system over
- 4 Sheet vinyl adhesive: Uzin KE2000S or Giltgrip® 88 or Polymer 265
- 5 LVT adhesive: Uzin KE66 or Uzin KE68 or Giltgrip® 88

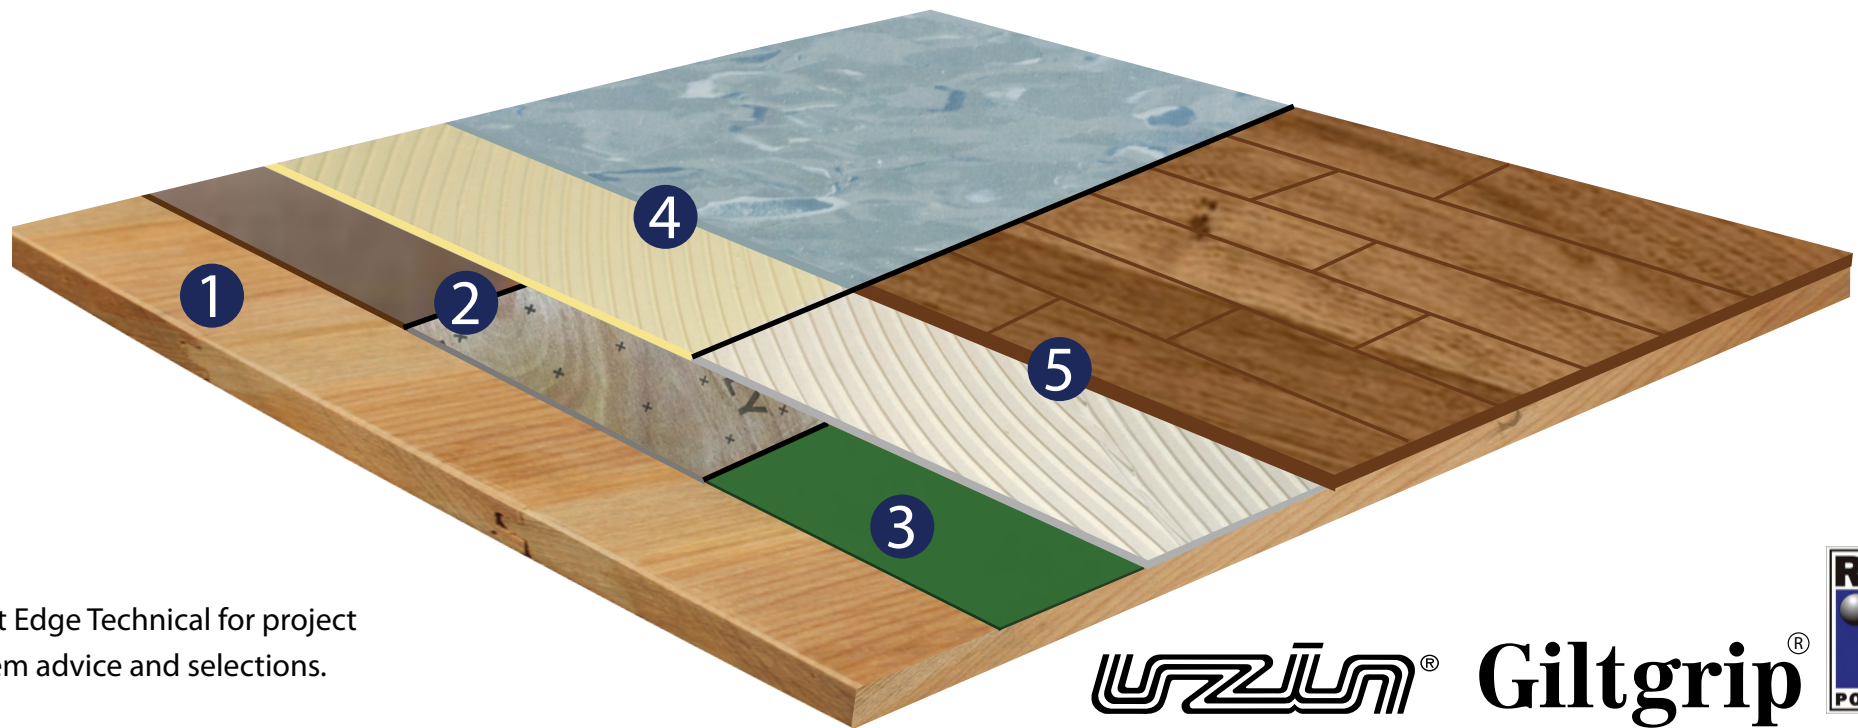

\* Contact Gilt Edge Technical for project specific system advice and selections.



Giltgrip®

