




# SEAMLESS FLOORING SYSTEMS

## Subfloor Preparation And Installation Of Direct Stick and Double Bond Carpet Tiles\*

- 1 Concrete substrate treated with Protect Crete Densi-Proof
- 2 Subfloor primed with UzinPE280 (Non-porous) or Uzin PE520 (Porous)
- 3 Uzin NC160 or NC170 levelling compound
- 4 Direct Stick: Giltgrip® 66 or Polymer 999 adhesive
- 5 Giltgrip® Supportapad Underlay to Subfloor:  
Option a.) Giltgrip®66 or Polymer 999 adhesive  
Option b.) Giltgrip®22 or Roberts 80 adhesive
- 6 Carpet Tile to Giltgrip®Supportapad Underlay:  
Giltgrip®66 or Polymer 999 adhesive

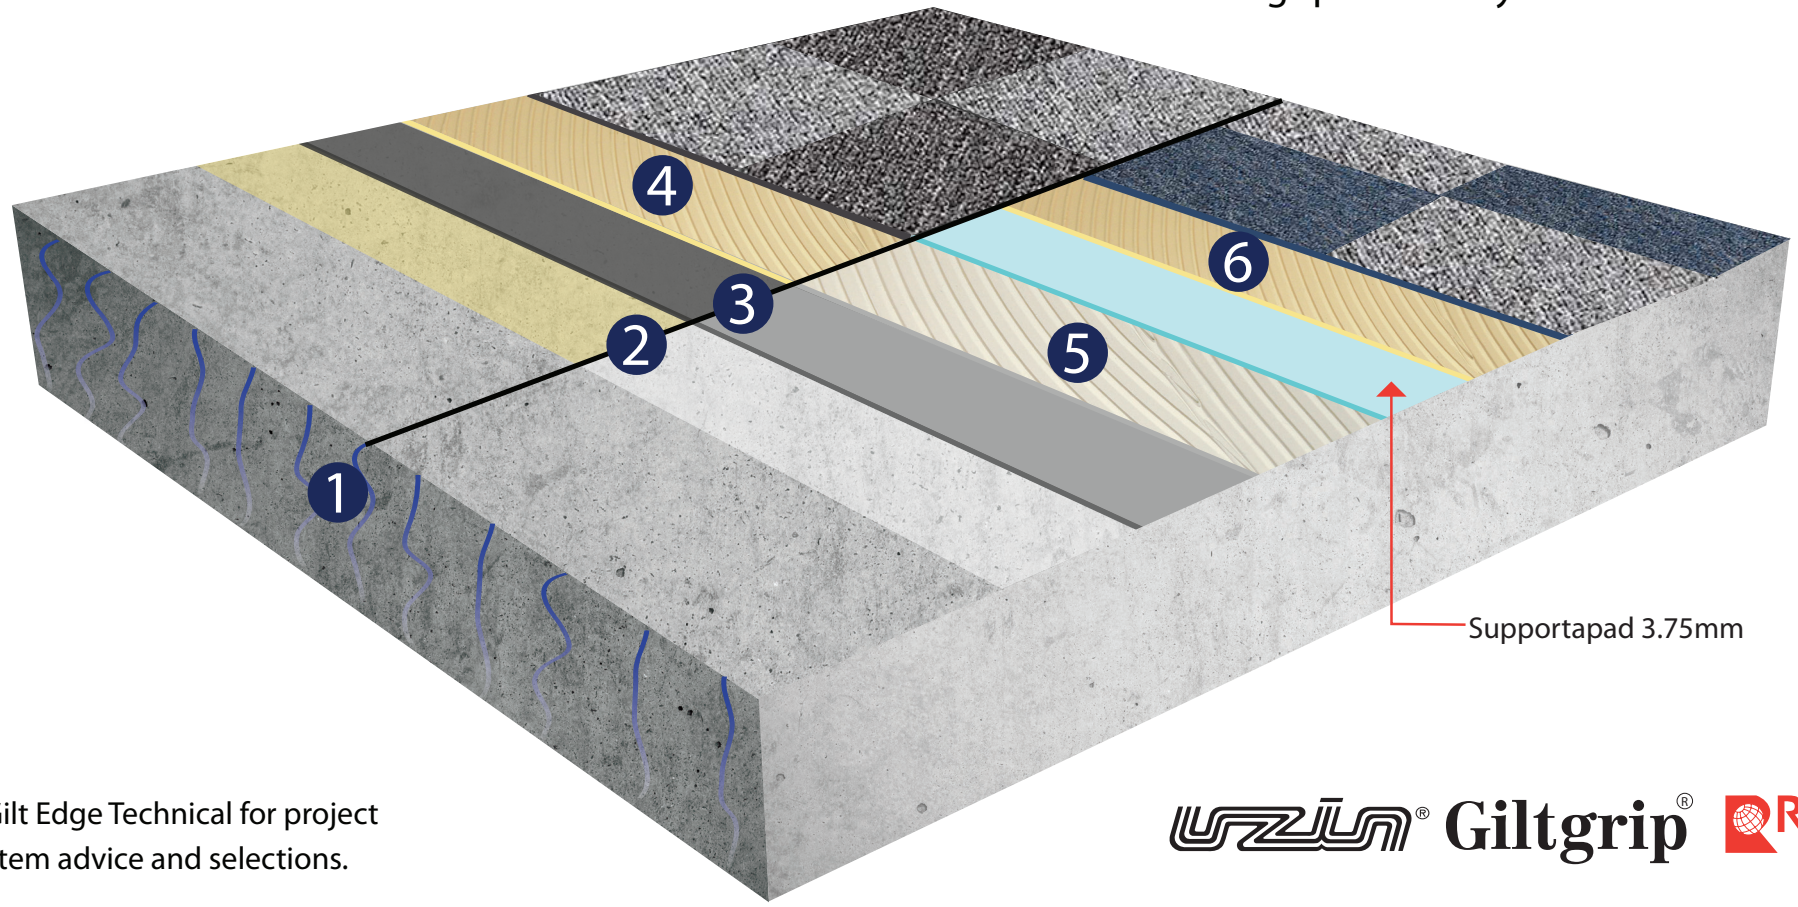

\* Contact Gilt Edge Technical for project specific system advice and selections.

