




SEAMLESS FLOORING SYSTEMS

Example of Installation of Floor Preparation for Timber Flooring*

- 1 Concrete substrate
- 2 Bostik Moisture Seal or
- 3 Selleys VBS Vapour Moisture barrier
- 4 Uzin PE280 Primer
- 5 Uzin NC170 Self levelling compound
- 6 Bostik Ultraset (prefinished timber) or
- 7 Selleys Direct stick adhesive (solid timber)
- 8 Timber Flooring

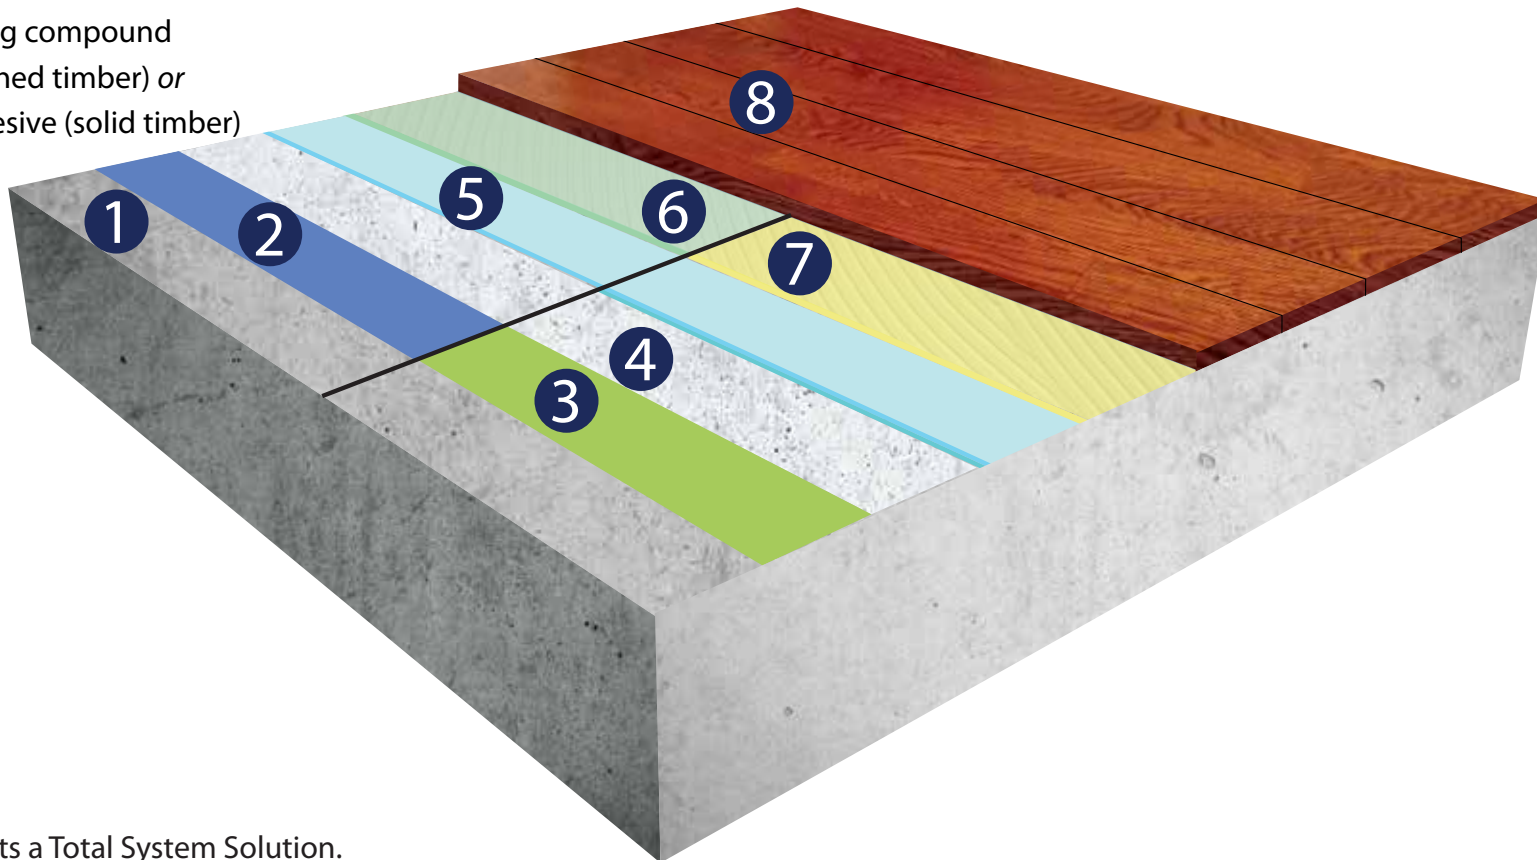

*This illustration represents a Total System Solution.
Not all products may be necessary depending on the
condition of the base substrate.

