
## RESIDENTIAL SLIMCLAD REVERSE RUN WALL CLADDING HEAD FLASHING FOR VERTICAL CLADDING (RECESSED WINDOW/DOOR)

Detail Number: RI-RSCW012A Date drawn: 25/11/2021

Scale: 1:5@ A4

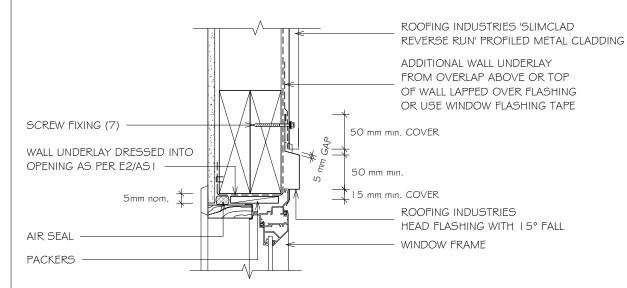

SLIMCLAD REVERSE RUN IS OUTSIDE THE SCOPE OF E2/AS I BUT MAYBE APPLICABLE FOR NON RESIDENTIAL BUILDINGS OR AS AN ALTERNATIVE SOLUTION

REFERENCE FLASHINGS:
NZ METAL ROOF AND WALL
CLADDING CODE OF PRACTICE.
DIMENSIONS ARE INDICATIVE ONLY


## NOTES:

- These details are to be read with Roofing Industries profile technical summary regarding wind loads and fixings.
- These details are generally in compliance E2/AS I and/or the NZ Metal Roof & Wall Cladding Code of Practice and in some cases specific details by 'Roofing Industries'.
- The building designer is ultimately responsible to ensure that details used meet the requirements of the NZ Building Code for the specific project.
- Details of the supporting structure including cavity battens are indicative only and are the responsibility of the building designer. For steel framed buildings thermal break cavity battens may be required.
- Roof/wall underlay selection are the responsibility of the designer. Underlay to be installed in accordance with underlay manufacturer's recommendations and requirements.
- These details are for Roofing Industries profile/s as nominated and may not be applicable to other profiles.
- This drawing is the copyright of 'Roofing Industries' and can only be copied or reproduced with their permission.
- Further information can be obtained from the NZ Metal Roof \$ Wall Cladding Code of Practice: www.metalroofing.org.nz or E2/AS I.
- Details are for steel based materials, other substrates may require some changes.
- All dimensions are nominal.

## DETAIL ANNOTATION:

- . REFER TO E2/AS I FOR GENERAL WINDOW OPENING FOR WRAPPING OF FRAMED OPENING PRIOR TO WINDOW INSTALLATION
- WINDOW PROFILE TO BE SELECTED TO ACHIEVE COVER SHOWN IN DETAILS.
- 3. ARCHITRAVE'S ARE SHOWN FOR CONSISTENCY ONLY, DETAIL MAY BE USED WITH REBATED LINER.
- 4. WHERE SUPPORT BRACKETS ARE REQUIRED BY THE WINDOW MANUFACTURER TO CARRY THE FRAME AND GLAZING LOADS THEY MUST BE SUPPLIED AS AN INTEGRAL PART OF THE WINDOW MANUFACTURER'S RECOMMENDATIONS.
- 5. LIASE WITH WINDOW MANUFACTURER PRIOR TO INSTALLATION
- G. SEAL HEAD FLASHING TO WINDOW IN VERY HIGH \$ EXTRA HIGH WIND ZONES.
- 7. FASTENERS TO BE COMPATIBLE WITH MATERIAL BEING FIXED AND THE SUITABLE GRADE FOR THE ENVIRONMENT IN WHICH LOCATED
- ALTERNATIVELY REFER TO E2/AS I FOR FLASHING COVER GUIDANCE

## HEAD FLASHING



Turn down end of head flashing to jamb flashing

