


DETAIL VIEW

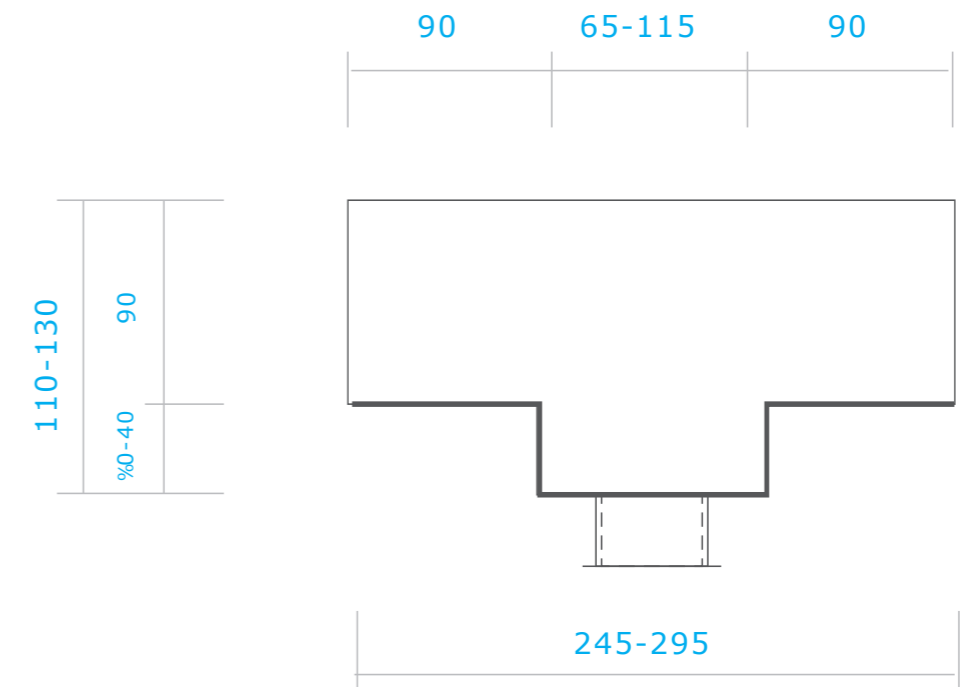

SECTION VIEW

NOTE:

1. Prepare plumbing prior to concrete pour for Shower Channel - 50mm threaded outlet / 30mm length
2. Cut slot for channel to sit into - flanges will sit/fix on top of floor and against framed wall and will support the hanging trough
3. Trough is 10-40mm deep - depending on design requirements (allowance required for boxing out trough)
4. Outlet is 50mm threaded - 30mm in length
5. Villa Board/Waterproofing/Adhesive/Tile product thickness' required prior to final manufacturing of channel to ascertain finished Grill/Grate measurements



**CENTRE SHOWER CHANNEL  
Concrete Substrate**

© JESANI LIMITED APRIL 2015  
ALL MEASUREMENTS IN MILLIMETRES