


DETAIL VIEW

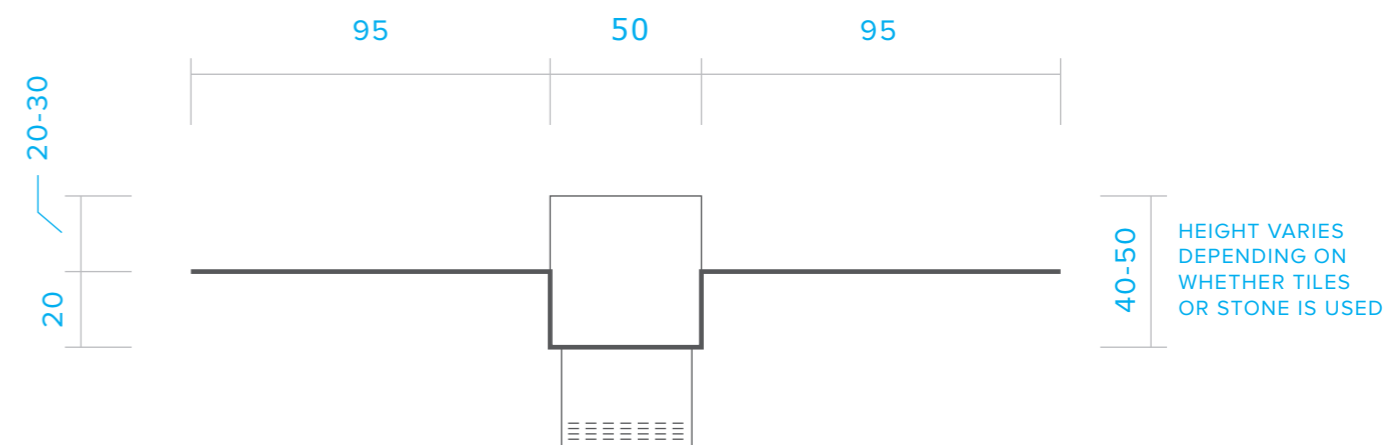

SECTION VIEW

NOTE:

1. Prepare timber floor for Door Channel
2. Cut 55-60mm wide slot for channel to sit into floor - flanges will sit/fix on top of floor and supports the hanging trough
3. Trough is 10-20mm deep - depending on design requirements
4. Outlet is 38mm threaded - 30mm in length
5. Tile & Slate/Underfloor Heating/Waterproofing/Adhesive/Tile Product thickness' required prior to final manufacturing of channel to ascertain finished Grill/Grate measurements.



**SHOWER DOOR CHANNEL
Timber Substrate**

© JESANI LIMITED APRIL 2015
ALL MEASUREMENTS IN MILLIMETRES