


DETAIL VIEW

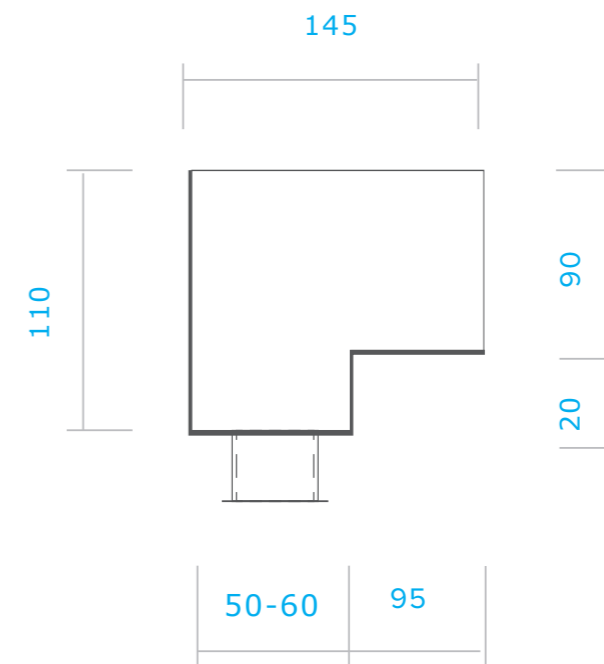

SECTION VIEW

NOTE:

1. Prepare timber floor for Shower Channel
2. Allow minimum 65mm wide slot for channel to sit into - flanges will sit/fix on top of floor and against framed wall and will support the hanging trough
3. Outlet is 38mm threaded - 30mm in length
4. Ensure you know location required for outlet vs floor joist position
5. Villa Board/Tile & Slate/Waterproofing/Adhesive/Tile Product thickness' required prior to final manufacturing of channel to ascertain finished Grill/Grate measurements.



SLIMLINE DRAINAGE CHANNEL
Timber Substrate

© JESANI LIMITED APRIL 2015
ALL MEASUREMENTS IN MILLIMETRES