

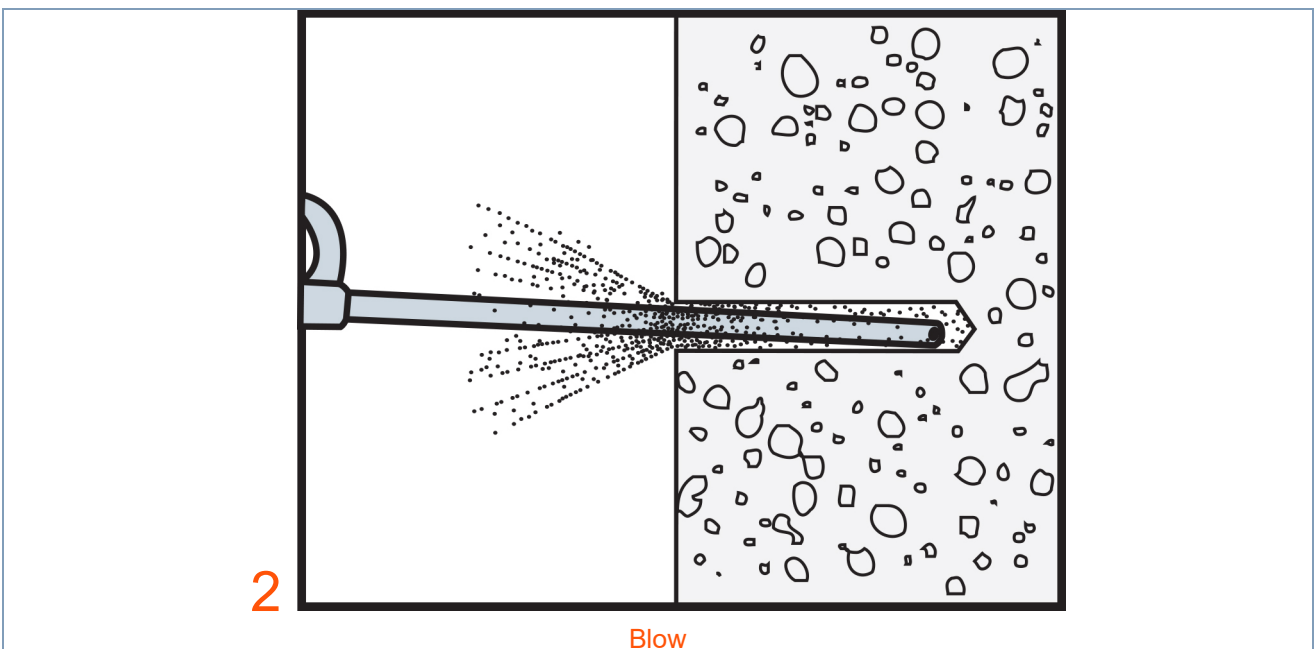


TNT Titen Turbo Concrete and Masonry Screw

Installation

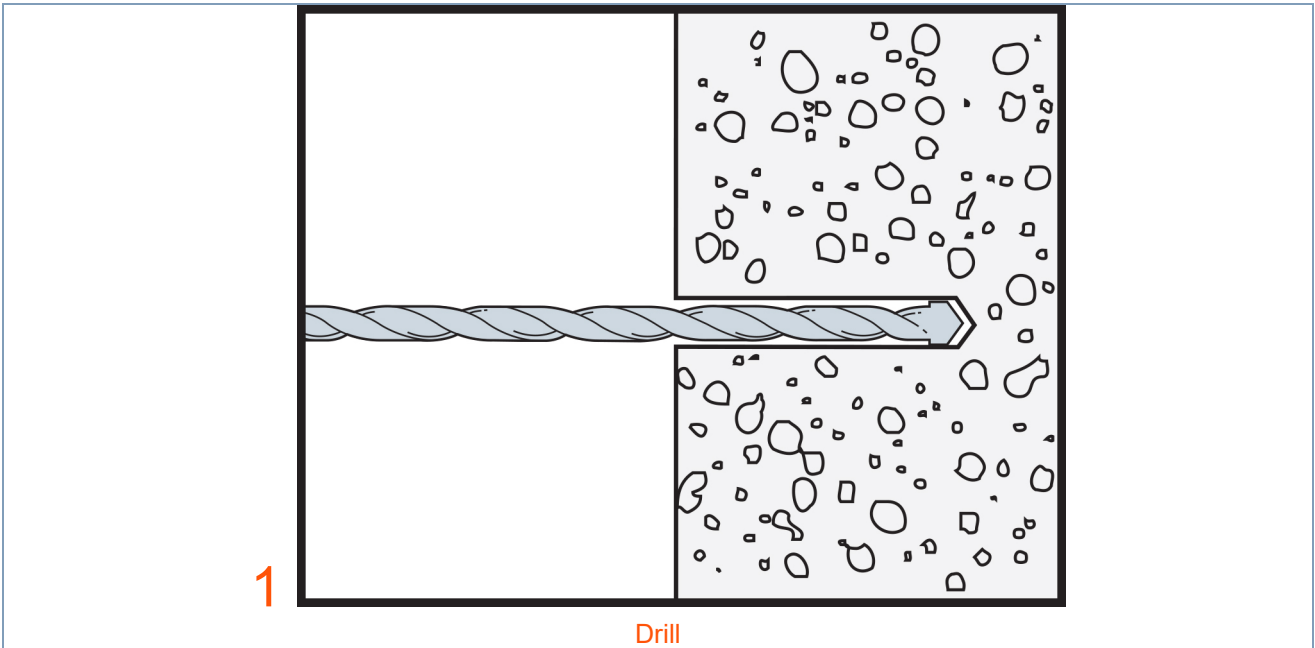


3

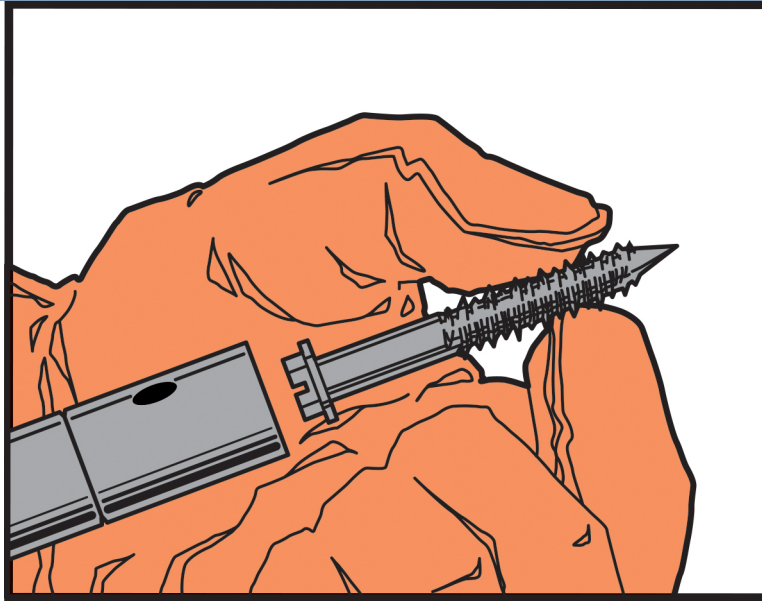

Use recommended driver bit

4

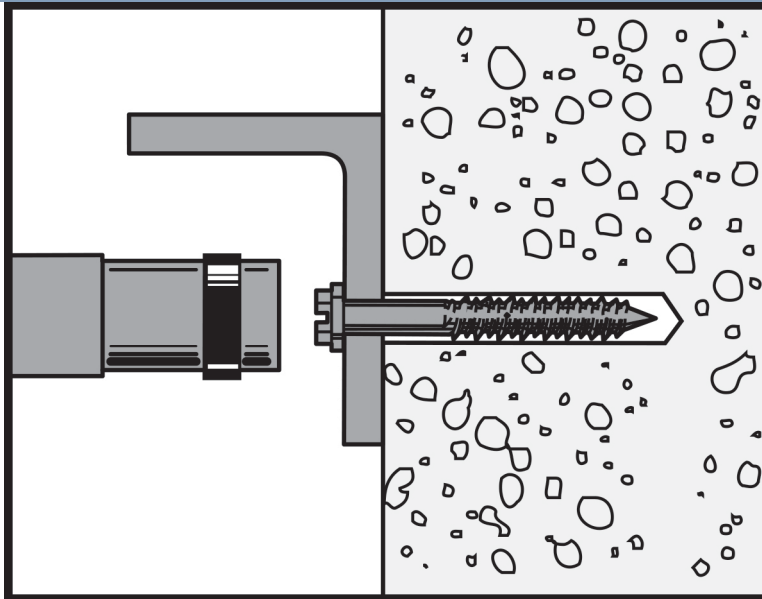

Install