

# TEXTILE TC RANGE

## TC-F6H & TC-SM6 INSTALLATION GUIDE

### TC-F6H & TC-SM6 Textile Clip Range

**TC-F6H**

**TC-SM6**


**USE WITH:**

Upholstery sewing machine using standard foot, size 110/18 needle and V92 thread.


For optimum adhesion, wipe the mounting surface clean with alcohol or solvent wipe and dry before pressing TC-SM6 to surface. Wait 24 - 72 hours before installing cushions.

**INSTALLATION STEPS:**


- 1** Sew TC-F6H to fabric using 110/18 needle and V92 size thread along stitch groove.

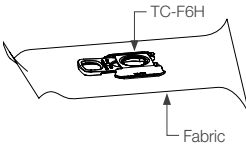


- 1B** Close up of TC-F6H sewn on

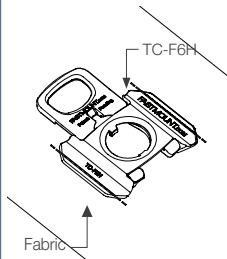


- 2** Complete cushion assembly

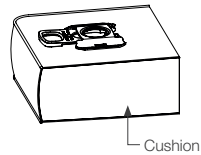


- 3** Insert TC-SM6 into TC-F6H

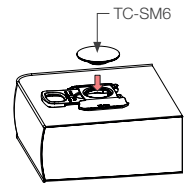


- 4** Lock TC-F6H

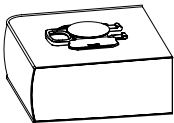

- 5** Peel off TC-SM6 backing

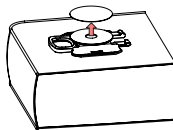

- 6** Align cushion in position

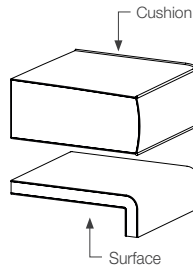

- 7** Press down firmly in place. To disengage, pull slide lock towards edge of cushion.

