











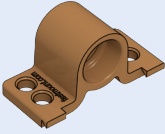

STANDARD PC RANGE


PC-RF1 INSTALLATION GUIDE

PC-RF1 Side Mount Female


PC-RF1	USE WITH:	INSTALL WITH:
	PC-M1B  PC-VM1  PC-M2H  PC-VMX  PC-SM2  PC-SVMX  PC-SM2H 	CP-01ST  CT-09  CT-10  CT-18DG 

INSTALLATION STEPS


- 1** Screw fit PC-RF1 to side of frame

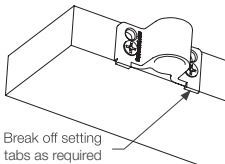


- 2** Fit CP-01ST into PC-RF1




- 3** Press panel onto CP-01ST to mark

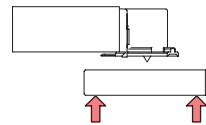


- 4** Drill panel on mark with CT-09

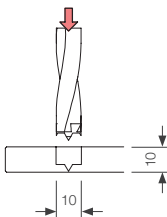

- 5** Screw fit male clip with CT-10

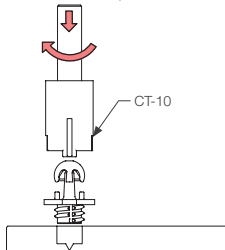


- 6** Panel clipped in place




OPTION WITH ADHESIVE FIT MALE (COMPLETE STEP ABOVE)


- A** Clip PC-SM2 into PC-RF1



- B** Apply adhesive to PC-SM2



- C** Place panel and support while adhesive dries

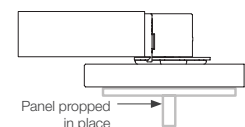

MORE INFO: Clip Layout Guide TD-02