


PART No.

PROJECT:
 DESIGNED:
 CHECKED:
 APPROVED:
 DRAWN: **A.BEZUIDENHOUT**
 SCALE: 1:1
 DATE: 03-03-2016

WITHIN 0.01 ANY DIAMETER TO CENTER LINE
 WITHIN 0.01 ANY FACE TO CENTER LINE
 ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED
 TOLERANCES: ±0.1 UNLESS OTHERWISE SPECIFIED
 MACHINING SURFACE FINISH: 3.2/ UNLESS OTHERWISE SPECIFIED
 HEAT TREATMENT: NIL

REMOVE ALL BURRS, SHARP CORNERS AND PROCESSING RESIDUE DRAWN TO AS100 DIMENSIONS IN MILLIMETRES




DORMA
 Building P. 61-63 Pukekohe Road
 Avondale 1026
 Auckland
 New Zealand
 FAX: (09) 830 2075
 PHONE: (09) 120 4909
 WEB SITE: www.dorma.com.au
DORMA NZ Ltd.

DORMA Automatics Pty. Ltd.
 INFORMATION SHOWN ON THIS DRAWING MAY ORIGINATE FROM OUTSIDE THE COMPANY. NO MANUFACTURE OR RE-SOURCING SHOULD BE MADE WITHOUT PRIOR CONSULTATION WITH THE MANAGER, ENGINEERING SERVICES.

THIS DOCUMENT CONTAINS CONFIDENTIAL INFORMATION WHICH MUST NOT BE COPIED WHOLLY OR IN PART, NOR DISCLOSED TO ANY PERSON WITHOUT OUR PRIOR AUTHORITY IN WRITING.
 © DORMA Automatics Pty. Ltd. 2002.

DISCLAIMER:-
 ALL ILLUSTRATIONS AND SPECIFICATIONS PRESENTED IN THIS DRAWING ARE A GUIDE ONLY FOR THE INSTALLATION OF DORMA AUTOMATIC DOOR OPERATORS. THESE ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME. FOR ALL CASES, CALCULATIONS FOR THE STRUCTURAL PERFORMANCE AND SITE CONDITIONS MUST BE COMPLETED BY A QUALIFIED STRUCTURAL ENGINEER.

GENERAL NOTES:

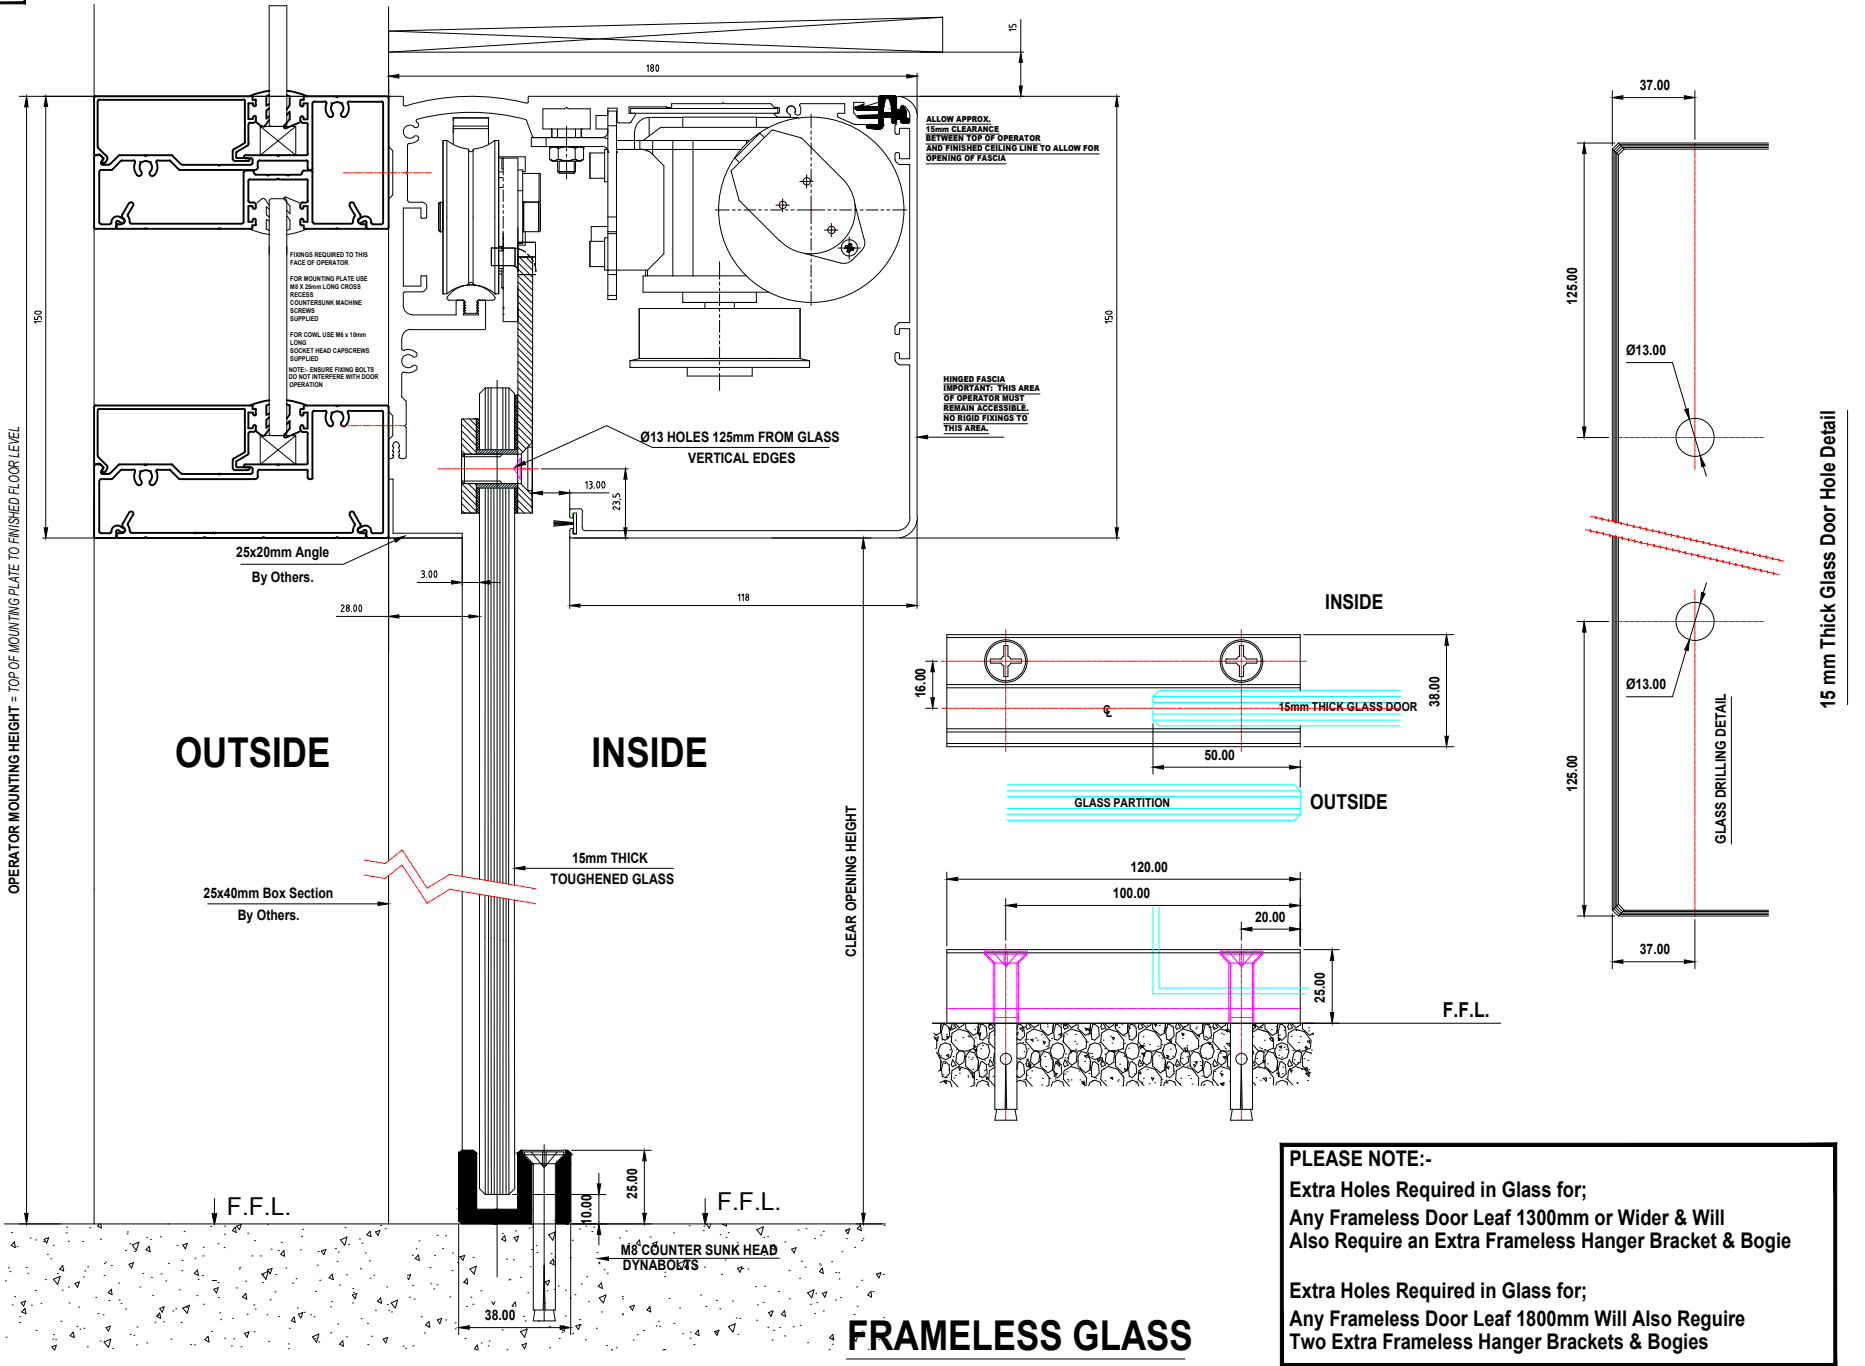

PLEASE NOTE:-
 Extra Holes Required in Glass for;
 Any Frameless Door Leaf 1300mm or Wider & Will Also Require an Extra Frameless Hanger Bracket & Bogie

Extra Holes Required in Glass for;
 Any Frameless Door Leaf 1800mm Will Also Require Two Extra Frameless Hanger Brackets & Boggles

MATERIAL:	1	TITLE:	ES200 NZ AUTOMATIC DOOR OPERATOR 15mm FRAMELESS	
FINISH:	1	DRG No:	A1	REV.