


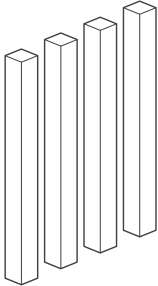
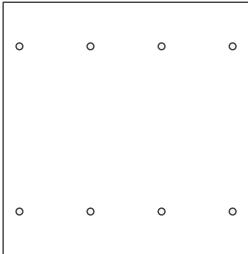
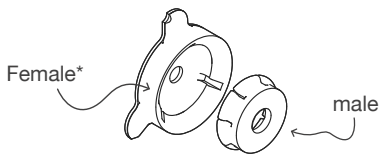




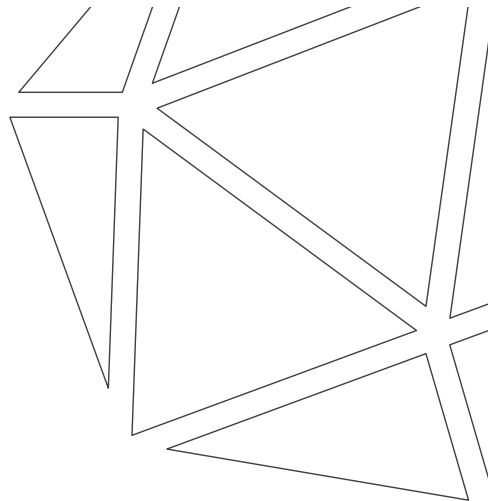


# dbBatten™ Installation Guide

<p><b>BATTENS</b></p> 	<p><b>STENCIL</b></p> 	<p><b>READY-CLIP™</b> *Already attached to batten</p>  <p>Female*      male</p> <p><b>SCREWS</b></p>  <p>8g GIB Screws</p>
---	--	--




**NOT INCLUDED**


 Phillips	+	 2 x person assembly recommended*
 Pencil		
 Masking Tape		
 Measuring tape		 2 x ladder recommended*

\*For ceiling


# dbBatten™ Installation Guide

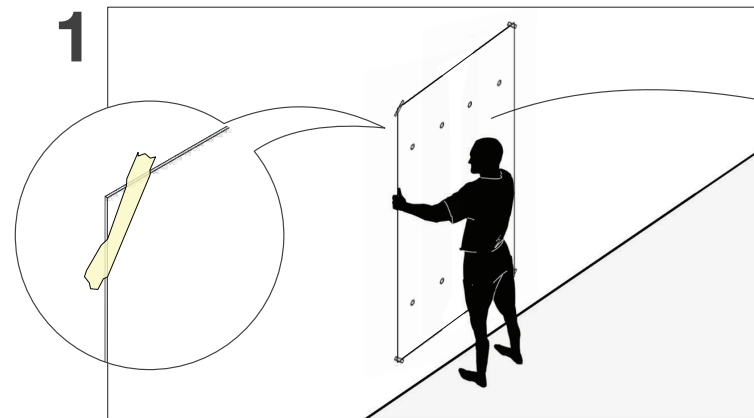

1 Align stencil to surface of install, attach to wall using a stapler, masking tape or pins. Take care that the stencil is flat, it is critical to have precise location of fitments.

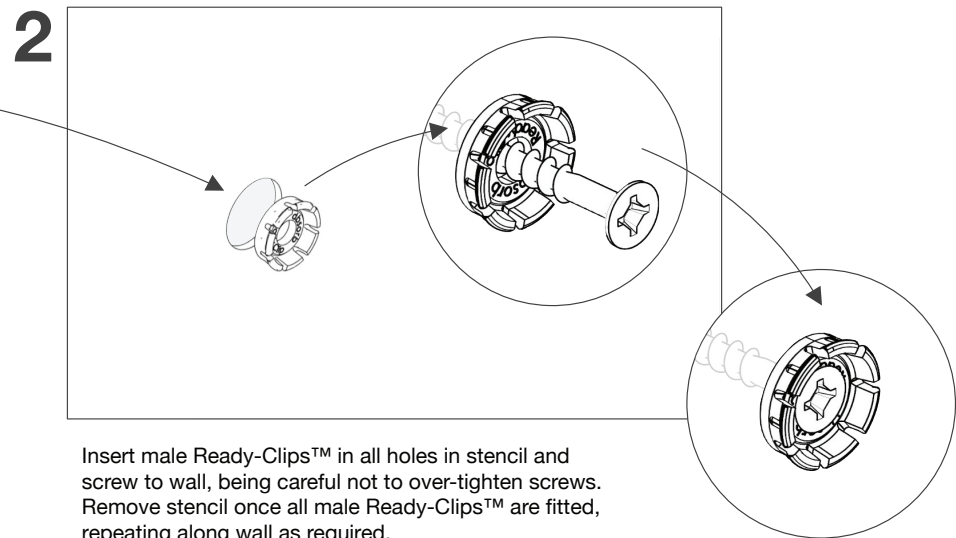


2 Insert male Ready-Clips™ in all holes in stencil and screw to wall, being careful not to over-tighten screws. Remove stencil once all male Ready-Clips™ are fitted, repeating along wall as required.

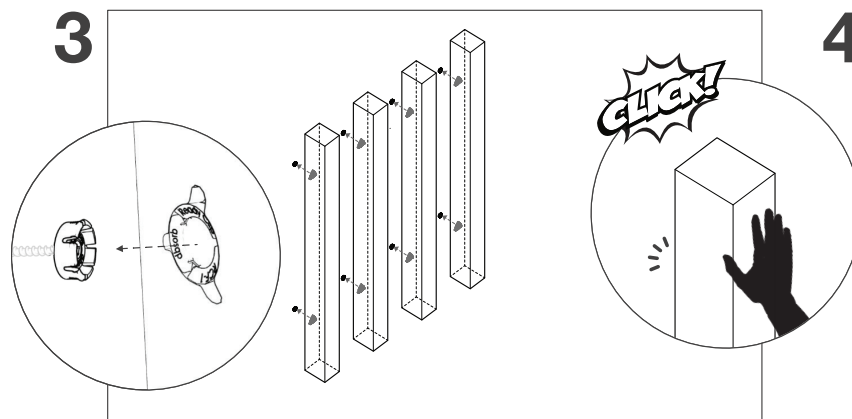

3 Align acoustic panel, making sure the Male and Female\* Ready-Clips™ are positioned correctly.

Firmly push at each fitment spot until Clips lock into place.

\*Female Ready-Clips™ already installed in Acoustic Batten

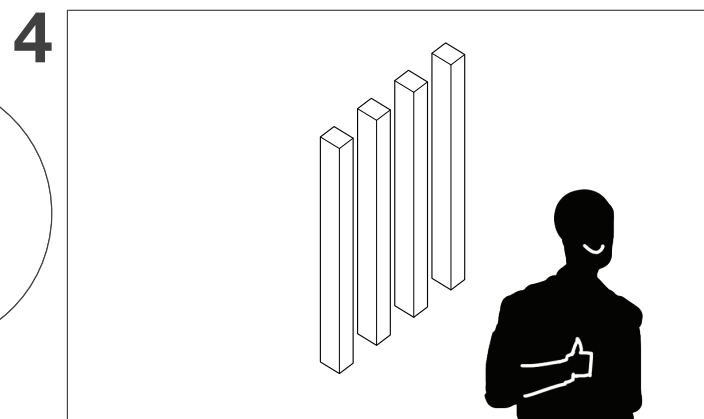

4 Enjoy your finished acoustic Battens!

