




800 Series Furniture Installation Instructions



When fitting plates they must be kept square with the door edge, otherwise the lock plate will not fit over the cylinder

It is very important that holes are drilled squarely. Failure to do so will lead to difficulty in lining up the tapped holes in the plate. To reduce drill run off to a minimum use the template provided below. Drill holes half way through door & repeat on other side of door, with the holes meeting in the middle of the door.

To cut the screws too size, fit screws through the countersunk plate and cut flush with the door.

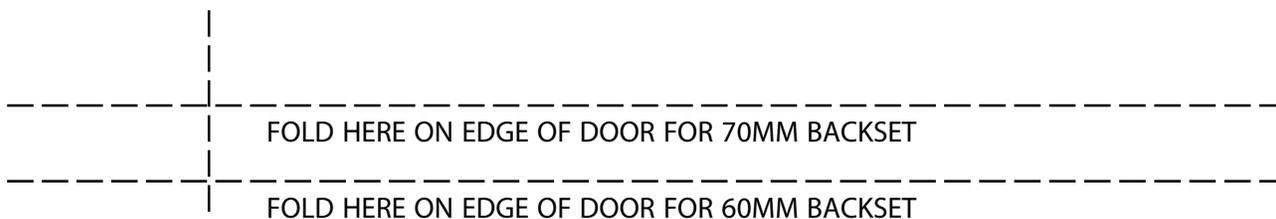

THIS WAY UP FOR RH EXTERNAL & LH INTERNAL PLATES

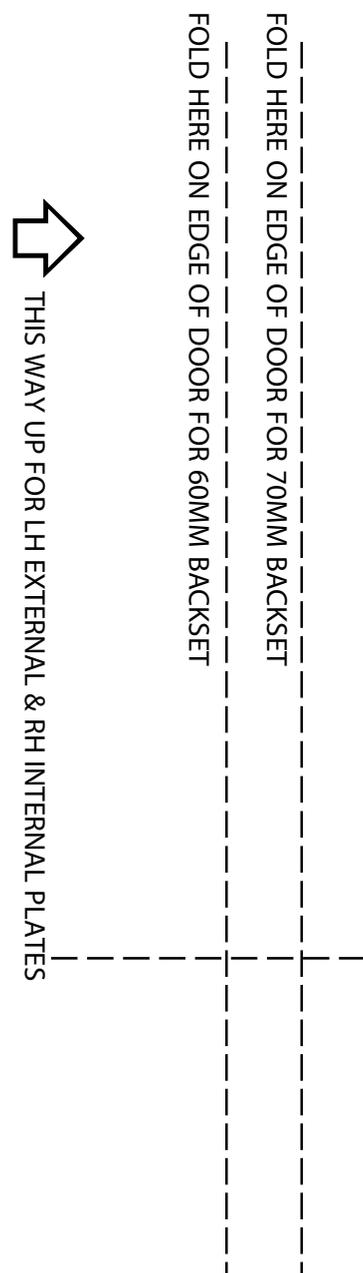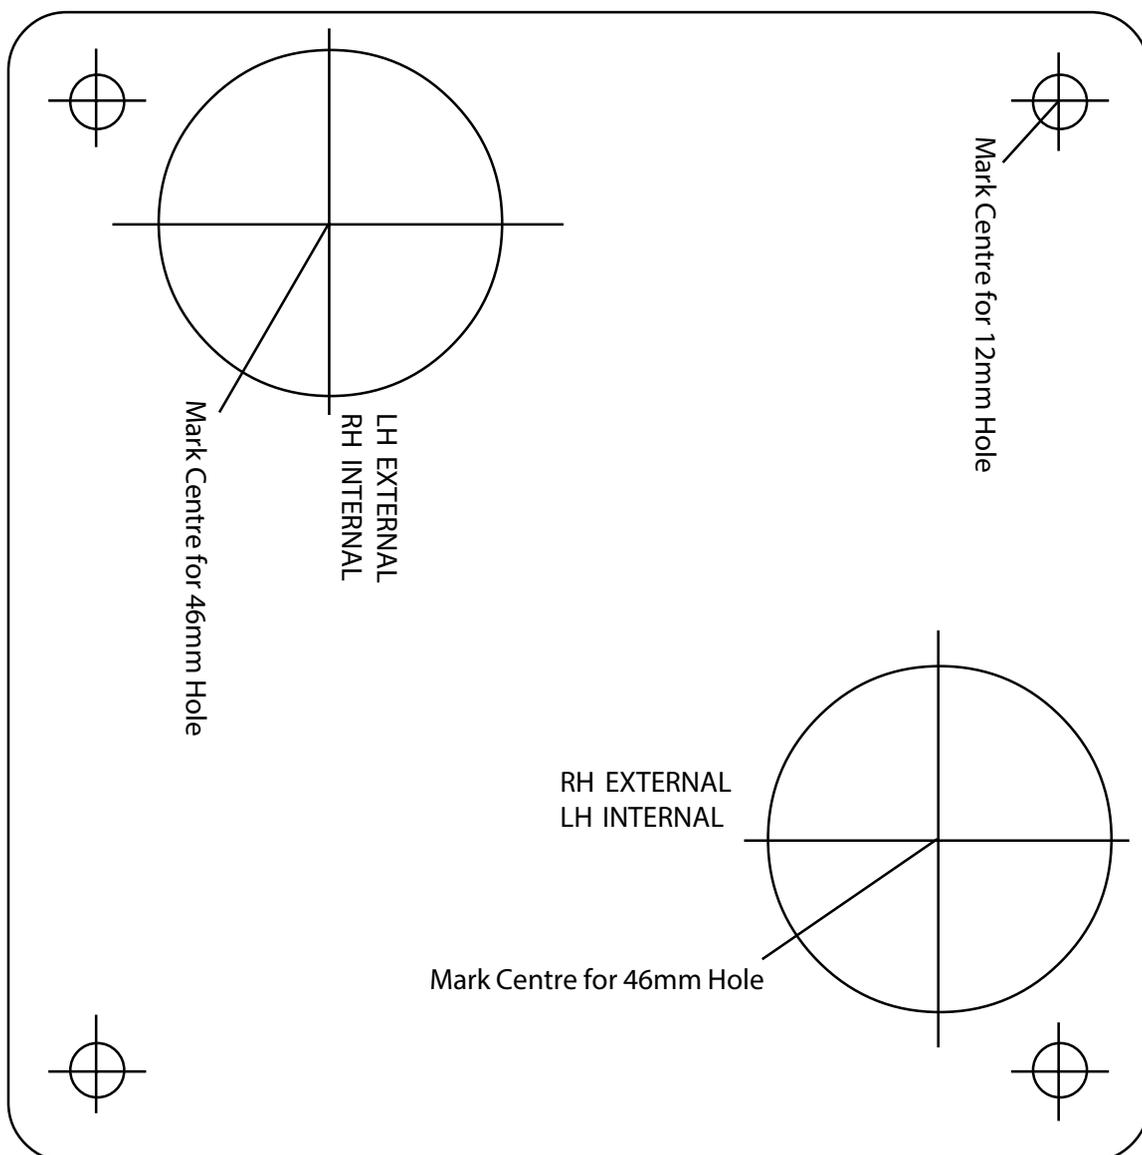

Allegion (Australia) Pty Ltd
Phone 1800 098 094
Website www.allegion.com.au

Allegion (New Zealand) Limited
Phone 0800 477 869
Website www.allegion.co.nz

12/2013

