



## 'SĀFA-SLAT' (VRR TOP RAIL)

This specification details the members to be used for this style and the maximum spacing of the posts. A separate specification must be referred to for fixing to the substrate (refer to Chapter 3). Post spacing must not exceed the lesser of the spacing from both Chapter 2 and Chapter 3.

1. Fabrication and Installation are to be in accordance with Assembly Specification AS.15.12T on Page 145 and all relevant portions of this manual.

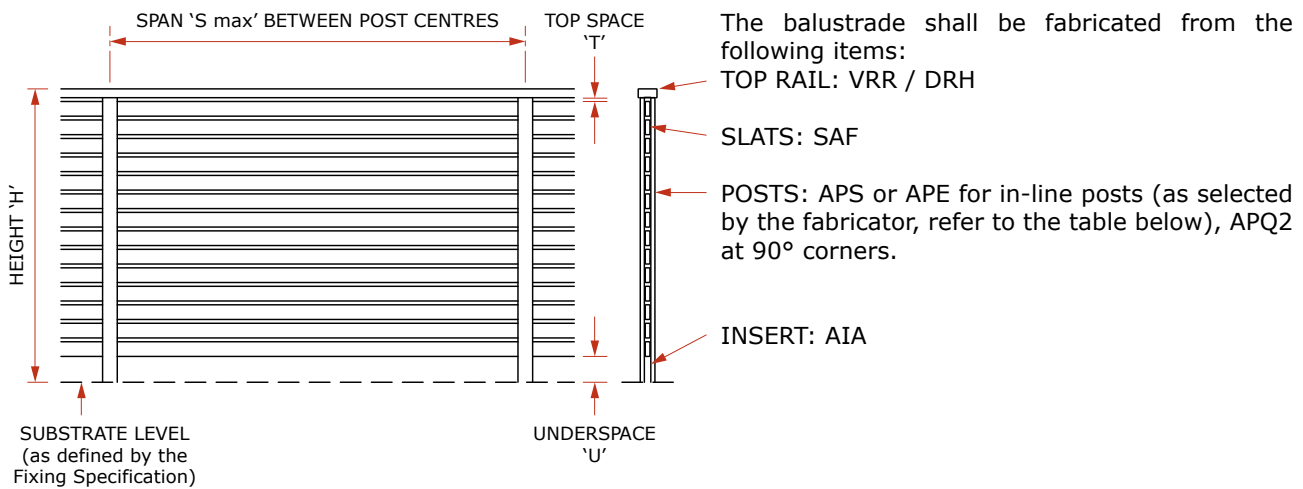

<div><div></div><div>MAXIMUM POST CENTRES 'S max' (metres)</div><div>ALWAYS TAKE THE LESSER OF THE VALUE BELOW AND THE VALUE FROM THE FIXING SPECIFICATION</div></div>																						
HEIGHT <sup>(3)</sup>	Post Type <sup>(2)</sup>	Line No.	LOADING CLASS <sup>(1)</sup>																			
			N07C/N07R									N03R	Not Preventing Falls									
			Design Wind Speed <sup>(4)</sup>										Design Wind Speed <sup>(4)</sup>									
			VH		EH								M		H			VH			EH	
			50	52	54	56	58	60	62	64	N/A	38	40	42	44	46	48	50	52	54	56	
1.0	APS	1	1.28	1.28	1.28	1.28	1.28	1.22	1.14	1.07	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	
	APE	2	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	
	Rails Only	3	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	
1.1	APS	4	1.27	1.27	1.24	1.15	1.07	1.00	0.94	0.88	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.24	1.15		
	APE	5	1.28	1.28	1.28	1.28	1.28	1.27	1.19	1.11	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	
	Rails Only	6	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	
1.2	APS	7	1.13	1.05	0.98	0.92	0.86	0.80	0.75	0.71	1.28	1.28	1.28	1.28	1.28	1.22	1.13	1.05	0.98	0.92		
	APE	8	1.28	1.28	1.20	1.12	1.06	0.99	0.93	0.88	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.20	1.12		
	Rails Only	9	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	1.28	
<div><div>1.</div><div>LOADING CLASS: Refer to 204 of this manual for the scope of the Loading Class designations.</div></div> <div><div>2.</div><div>POST TYPES: Refer to Chapter 1 for details. "RAILS ONLY" gives the maximum span of the rails when fixed in single panels between walls or columns designed to provide adequate support to the rails.</div></div> <div><div>3.</div><div>HEIGHT 'H': is the overall height of the balustrade above the substrate level shown. Interpolate for Heights between those shown.</div></div> <div><div>4.</div><div>BALUSTER TYPE: Refer to Chapter 1 for details.</div></div>																						